



Look-it's Wood and Metal!"

# THE PRIMUS ENGINEERING

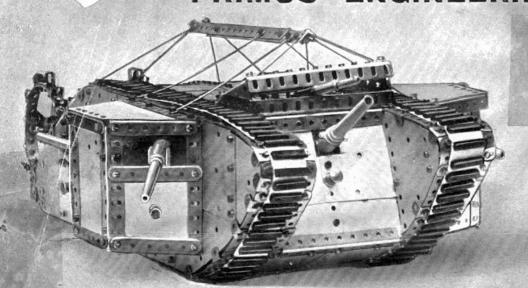

CAN BE MADE
WITH
No. 5 OUTFIT
AND
EXTRA PARTS

PRIMUS TANK. FRONT VIEW.

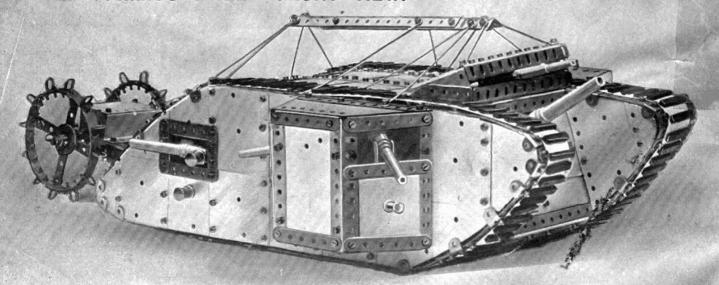

PRIMUS TANK. SIDE VIEW.

### THE ONLY

## WOOD & METAL CONSTRUCTIONAL TOY

Primus Engineering Outfits form the most practical means of demonstrating how hundreds of things are made. They teach the young mind the art of contriving—that is—"how to make things do."

They show them how one thing can be made to suit many purposes.

They explain the fundamental principles of mechanics in an entertaining manner.

Thousands of enthusiastic boys and girls—all budding engineers—have proved to their entire satisfaction the wonderful features of Primus Engineering. When they build models, they build them as they should be built, and in accordance to modern construction. As you may know, practically all things that can be made in model form are made of wood and metal. Therefore, to make the finest "true-to-life" models you must use Primus Engineering Outfits, because they are the only Outfits consisting of

### Wood and Metal Parts

All interchangeable and standardised, easy to fit up, simple to understand, and packed in strong boxes, they give many hours of pleasure to juveniles and grown-ups.





### THE BRITISH TOY FOR BRITISH BOYS

In some cases cardboard may be usefully employed to add a finish to models, such as the covers for vans, carts, etc.; it must also be remembered that the metal plates and strips can be bent to various shapes, and can even be cut to make new parts. After some of the models shown have been mastered the inventive mind will feel an inclination to vary them, and this will suggest original models.

### GENERAL INSTRUCTIONS.

ALWAYS COLLECT TOGETHER ALL THE PARTS REQUIRED FOR MAKING UP
THE MODEL DECIDED UPON BEFORE BEGINNING.



No. 66 Brackets.



No. 84 Washers



Fig. A.



Fig. B.

### BRACKETS and their uses.

It is important to understand why one side has a round hole and the other side a slot. This is to allow for the thickness of the wood or metal parts that are joined on, as in some cases more than one piece is joined together and the slot permits of the necessary play.

### WASHERS.

These form a very important part in mechanics. They are put on axles between wheels and trunnions, or between the collars and any facing part, to avoid friction, and also used in many models to adjust the length of the screws; for example, when it is desired to fix a bracket exactly at right angles one of the screws must be shortened by means of washers, so that it will not jam on the other (Fig. A). They are likewise used to adjust the bracket to the width of some of the other fittings (Fig. B.)

### WOOD BASES.

Some of the models are shown screwed down to wooden base boards. These are not included in the outfits, as they are most likely readily available and the size varies to suit the situation.

### STANDARD OUTFITS



Each outfit is complete, the fully illustrated instruction book supplied making it an easy matter to start building models at once. The models shown on the following pages cover a wide field, but there is no limitation to the number of original models that can be constructed, and, if desired, further original models can easily be made.

The specimen models shown on page 78, were devised by enthusiastic junior "Primus Engineers," and models of a similar nature can be invented by anyone.

No.	0	Outfit	contains	122	Wood	and	Metal	parts
No.		,,	,,	140	,,	,,	,,	,,
No.	2	,,	,,	267	,,	,,	,,	,,
No.	3	,,	,,	473	,,	,,	,,	,,
No.	4	,,	,,	649	,,	,,	,,	,,
No.	5		22	1.131	-			

For prices see slip attached.



### CABINET OUTFIT No. 6



This De Luxe outfit forms the most practical method of storing and handling Primus Engineering parts.

A presentation outfit containing 1210 parts.

For details of contents see pages 11 and 12.

The whole outfit is contained in a very substantial and handsome polished oak cabinet, with three drawers, partitioned off in compartments for the various parts. Lock and key secure all the drawers when not in use.

The models shown on pages 21 to 78 can be made with this outfit and extra parts where stated.



### SUPPLEMENTARY OUTFITS



These outfits are supplementary to all standard Primus outfits and should only be purchased as such.


The contents are not selected with the view to building complete models, but to supplement the parts of a standard set, so that it becomes equal in parts to that of the next higher price.

For details of contents see pages 11 and 12.

No.	1s	Converts	a	No.	1	outfit	into	a	No.	2	outfit.
No.	2s	,,		,,	2	1,	,,		,,	3	,,
No.	3s	,,		,,	3	,,	,,		,,	4	,,
No.	4s	,,		,,	4	,,	.,		• • •	5	•••




### WOOD PARTS OUTFIT

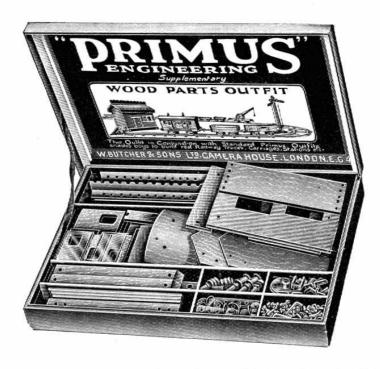

Although a supplementary set the Wood Parts outfit, with the addition of standard Primus parts, will make many instructive models, from station houses to railway rolling stock.

### CONTENTS OF OUTFIT.

			No.			No.
1	Grooved side rail	s	4	18	Truck ends	2
2	,, ,, ,,		2	26	Window Glass	2
3	Carriage ends		2	50	Screws	6
	Buffer blocks		2	52	Angle bars, 6 in	4
4 5	R.H. windows		2	58	Metal strips, 3 in.	4
6	L.H. ,,	× +:	2		$,, ,, 6\frac{1}{2},,$	2
7	Carriage doors		4		Brackets	8
8	Central windows		2	67	Metal plates, $8 \times 3$ in.	2
9	Floor		1		Ridge tiles, 8 in	1
10	Roof		1	71	Eaves, 8 in	2
12	House front rail		2		Bent hinges	8
13	,, side ,,		2	76	Grooved wheels	1
14	House sides		2	85	Buffers	2
15A	Window sills		4	87	Lamps	2
15D	,, sashes		2	88	Carriage door handles	4
	Front of house		1	89	Turnbuttons	4
15B	Back ,, ,,		1	90	Side rails	4
	Doors of house		2	91	Door screws	16
16A	Lintels		2	92	Knob screws	2
17	Truck sides		2	93	Turnbuttons	2

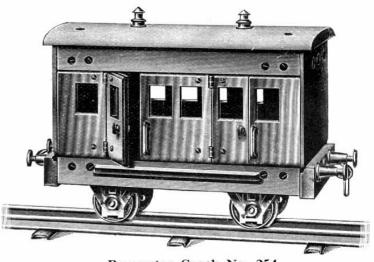


Passenger Coach No. 254.

The model illustrated can be made with this outfit and parts from a No. 2 Outfit. Details of other striking models will be found on page 79.

### **BIG-WHEEL OUTFIT**



Wheels of many descriptions are necessary for the perfecting of models. With this outfit you can make flywheels, pulley wheels, paddle wheels, also wheels for carts, carriages, locomotives, in fact, wheels for almost any purpose.

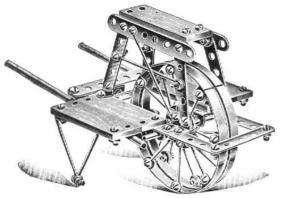

Chinese Luggage Barrow No. 1004.

This model can be built with this outfit and parts from a No. 1 Outfit. Details of other striking models will be found on pages 80 to 87.

The outfit forms a useful accessory set for use with standard Primus Engineering Outfits, and considerably enlarges their scope in variety and instruction.


### CONTENTS OF OUTFIT.

24	Rim Sections		No.	150	32	Wire Stays, 3\frac{1}{4}-in.	No. 156
4	8-hole Hubs		,,	151	72	Nuts and Bolts	,,50/51
2	12- ,, ,,		,,	152	2	$6\frac{1}{2}$ -in. Axles	,, 165
2	16- ,, ,,		,,	153	12	Brackets	,, 66
32	Wire Stays,	$1\frac{5}{8}$ in.	,,	154	1	Bending Bolster	,, 110
48	,, ,,	2½ in.	,,	155			

### MOTOR CHASSIS OUTFIT

CONTENTS	OF
OUTFIT	


	OUTFIT.	
		No.
I	Steering column	
	rod	218
1	Metal dashboard	219
	Angle bar, 3 in	220
I	Shouldered screw	22 I
	Screws, 7 B.A	222
2	Wood slips, $3 \times 1$	25
36	Nuts and bolts5	0/51
2	Angle bars, 12 in.	55
4	Metal strips, 2 in.	56
1	n ", " 3 "	58
8	Brackets	66
1	Metal plate, $8 \times 3$	67
	Trunnions	74
1	Axle rod, $1\frac{1}{2}$ in	79
	Collars	82
12	Washers	84
	Screwdriver	IOI
	Gear wheel, 18 in.	160
	Set screws, $\frac{3}{16} \times \frac{5}{32}$	172

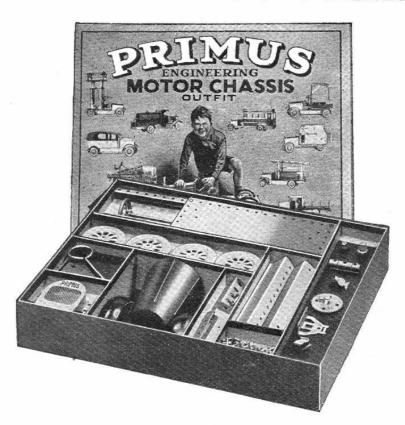

### CONTENTS (contd.)

(contd.)	
**************************************	No.
4 Motor car wheels	201
4 Rubber tyres	202
1 Steering wheel	203
	204
1 Small bevel gear	205
	206
2 Front mudguards	207
r Right back mud-	
guard	208
1 Left back mud-	
guard	209
guard I Right running	
board	210
1 Left running board	211
I Bonnet	212
T1 11	213
ı A.A. Badge	214
1 Steering bearing	215
	216
2 Front axles, $2\frac{3}{16}$ in.	217

A comprehensive outfit for building up into a complete chassis upon which can be fitted bodies of touring cars, lorries, tractors and char-a-bancs. A Primus Clockwork Motor is easily attached for motive power.

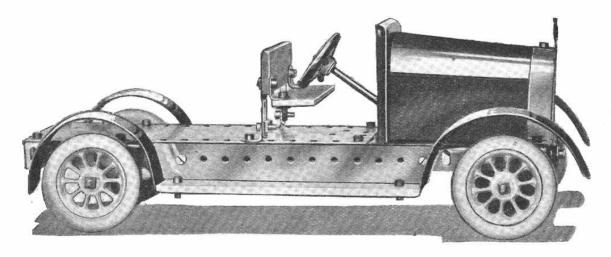

The illustration shows a completed chassis. Details of bodies for fixing upon this chassis will be found on pages 88 to 94.

### **CLOCKWORK LOCOMOTIVE OUTFIT**

### CONTENTS OF

	OUIFII.	
		No.
I	Primus Clockwork	
	Foot plate	251
1	Boiler shell	252
1	Smoke box door	253
1	Funnel	254
1	Steam dome	255
	Spectacle plate	256
1	Cab side (right)	257
1	Cab side (left)	258
1	Cab roof	259
1	Smoke box saddle	260
	Long screws	261
	Nuts and bolts5	0/51
2	8-in. Angle bars	54
22	Metal strips	56
1	$2\frac{1}{2}$ -in. ,,	57




	CONTENT	l'S	
	(contd.)		
	Nacasan and A		No.
12	Brackets		66
2	,, (spec	ial)	66a
4	Trunnions (fla	ıt)	74
4	Wheels		75
	$3\frac{1}{2}$ -in. Axles		77
2	$1\frac{1}{2}$ -in. Axles		79
5	Collars Washers Buffers		82
7	Washers	11.11	84
4	Buffers		85
2	Coupling hook	S	86
I	Safety valve		87
1	Reversing rod	9.80	96
1	Cog wheel	20.00	160
2	Pinion wheels		161
1	Screwdriver		100
1	Spanner		103

The 109 parts of this outfit make up into a really fine clockwork locomotive—modelled to scale and correctly coloured. The Primus Clockwork Motor (next page) supplied makes


it into a model highly appreciated by all for long steady running and good hauling powers.

For "fitting-up" instructions see pages 95-96.

The Locomotive can be supplied completely erected and ready for the railway track as illustrated.

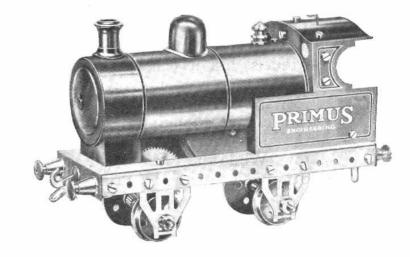

### **CLOCKWORK MOTOR**

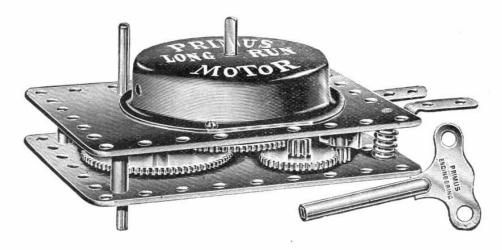

The Primus Clockwork Motor, the strongest, longest running motor of its kind on the market. Measures  $5\frac{1}{2} \times 3\frac{1}{2}$  in., and is designed in such a way that it can be readily built into any working Primus Model. An important feature is the reversing switch, which enables the Motor to be run both forward and backwards, thus greatly increasing its utility and adding tremendously to its fascination. The Primus Clockwork Motor is very sturdily built, and in consequence will stand an unusual amount of hard work without getting out of order. By means of Standard Primus Gear Wheels, Pinions, etc., the speed of the Motor can be varied considerably, in fact it can be geared down so that Models it operates will run as slowly as can possibly be required, yet on the other hand, by taking the Drive direct, a tremendous speed can be attained. The finish of the Primus Clockwork Motor is without equal, and with its bright red dome which contains the spring it really forms a handsome piece of mechanism. Not only can it be used with great success in working Primus Models, but it will also propel the Primus Motor Chassis in a most satisfactory way, the reversing switch enabling the motor to be run forward and in reverse just like a real car. No boy who owns Primus can fail to have a longing to obtain a Primus Clockwork Motor, because of the great added interest that it imparts to our famous wood and metal toy. While the Primus Clockwork Motor has been designed for use in conjunction with the Primus Engineering, it nevertheless can be used with equal success in conjunction with constructional toys of other make.



### CONTENTS OF STANDARD OUTFITS

PART									CUO	FIT	NO	•			
NO.	DESCRIP	TION.			0	1	1s	2	2s	3	3s	4	4s	5	6
I	Side Rail						4	4	_	4	_	4	2	6	6
2	Side Rail with foot-boar	rd	10 <b>4</b> 003				-	<u> </u>	-	_	2	2		2	2
3	Carriage End		* *							-	2	2	-	2	2
4	Buffer Block					2	_	2	1	2	_	2	2	4	4
5	Carriage Window, right	-hand	1 *00*	2		-			-	_	2	2		2	2
5	Carriage Window, left-h		14.0		_		1	_		_	2	2		2	2
7	Carriage Door		100						_	-	4	4		4	4
7 8	Central Window						_	_	-	-	2	2	_	2	2
9	Carriage Floor						I	1	-	I		I	I	2	2
10	Carriage Roof		101				-	-	-	-	1	1		ı	I
11	Posts for railings		635		-	-	2	2	15	17		17		17	17
12	End Rail of House		483		_	-		-	-	-	-	-	2	2	2
13	Side Rail ,, ,,	• 253				_						-	2	2	2
14	House Side				-			-	-	-	-	-	2	2	2
15A	Window Sill		0500			-				-	-		4	4	4
15D	Window Sash			1761		-	-				-	<u> </u>	2	2	2
15B	House Front		(#C#			-							2	2	2
16	Door of House					-	-		-	-	-	-	2	2	2
16A	Door Lintel		* *			-	-		-	-	-		2	2	2
17	Truck Side				-		2	2	1	2	-	2		2	2
18	Truck End				-		2	2		2	-	2		2	2
19	Baseboard		3 ×				-		_	_	_		I	I	I
21	Steps				-	1.	-	-	1	1	-	1	-	I	I
22	Station Slope		* *		-	-	2	_	I	I		I		1	I
23	Platform Plank Centre				-	-			2	2		2	-	2	2
24	Platform Plank Side	s * *	(x x)		_	_	-	-	2	2		2		2	2
25	Wood Slip			[	6	8	8	16	9	25	-	25	·	25	25
26	Glass for windows	* *	8 8					_	-	_			4	4	4
50 & 51	Screws and Nuts				30	36	30	66	54	120	24	144	168	312	312
52	Angle Bars, 6 in				-		<u> </u>				-	-	4	4 8	4 8
53	do. $6\frac{1}{2}$ ,,					-	2	2	-	2		2	6		
54	do. 8 ,,		V (6)	* •	2	2		2	2	4		4	4	8	. 8
55	do. 12 ,,					-					2	2		2	2
56	Metal Strip 2 in		(¥ ¥)		4	4	4	8		8	2	10	6	16	16
57 58	do. $2\frac{1}{2}$ ,,	2000	1. 10		6	6		6	2	8		-8	8	16	16
58	do. 3 ,,		\$6 B				-		4	4 8	• 4	8	_	8	8
59	do. $3\frac{1}{2}$ ,,	5.50	8.5	3. 50		2	6	8		1	6	14		14	14
60	do. 4 ,,	4.6	¥ .0	* *		2	_	2	1	3		3		3	3
61	do. $5\frac{1}{2}$ ,,		W 40	* *	(T-1110)	-	-	-	4	4		4		4	4
62	do. $6\frac{1}{2}$ ,,		8 8		_		2	2	2	4		4		4	4
63 64	do. 8 ,,		9.8		2	2	-	2	4	6		6	6	12	12
64	do. $12\frac{1}{2}$ ,,	* * *	15 · • 5			-		-	3	3	_	3		3 8	3 8
65 66	Architrave		9 km 10		-	-	4	4	0.00	4 38	-	4	4		
	Bracket	* *	* *		10	12	4	16	22		2	40	38	78	78
67	Metal Plate, 8×3 in	y 2	. v .		-	-			4	4		4	6	10	10
68	Metal Plate 3×3 ,,	* 0	11. 08. 80		3	3		3		3	ΙI	14	-	14	14
69	Ridge Tile, $6\frac{1}{2}$ in				-	-	-	-	I	I		I	-	1	I
70	do. 8 ,,				_	-		_	I	I		Ι	I	2	2



### CONTENTS OF STANDARD OUTFITS—continued

NO.   DESCRIPTION.   0   1   1s   2   2s   3   3s   4   4s   5   71   Eaves Tiles, 8   .	PART						OUTFIT NO.										
22   Straight Hinge		DESCRI	PTION	٧.			0	1	1s	2	2s	3	3s	4	4s	5	6
73 Bent Hinge 73 Bent Hinge 74 Trunnion for Wheel 75 Flanged Wheel 76 Grooved Wheel 77 Axle Rod, 3½ in. 78 do. 2½ , 79 do. 1½ , 83 Handle Axle 83 Handle Axle 84 Washer 85 Buffer 86 Coupling Hook 87 Lamp 88 Carriage Door Handle 89 Turn-button 90 Side Rail 91 Door Screw 91 do. 1½ , 91 do. 1½ , 93 Turn-button 92 Knob Screw 93 Turn-button 94 d d d d d d d d d d d d d d d d d d d	71				* *			_			4	4		4	6	10	10
Trunnion for Wheel	72		* ( * )	*0.*0	* *	* *			4	4			_	4	2	6	6
Flanged Wheel	73			F 6					-	_	-	-	8	8		8	8
75 Flanged Wheel. 76 Grooved Wheel 77 Axle Rod, 3½ in. 8 in. 8 do. 2⅓ iii. 8 2 2 2 2 2 2 4 6 6 7 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8 8	74				* *:			4	-	4		4	4	1		8	8
Axle Rod, 3\frac{1}{2} in.	75				¥ ¥1			4						8	-	8	8
Axle Rod, 3\frac{1}{2} in.	76		*1150	***	* *			\$ <b>=</b>		_	4			4		4	4
Top	77	Axle Rod, $3\frac{1}{2}$ in.					2	2	-	2			2			4	4
Top	78	do. $2\frac{3}{4}$ ,,		* *				-	2	2		2	4			6	6
Say	79		v /				1		-		I	I	-	I	::	I	I
84 Washer	82		* *	* 6	* *	* *		4	_	4	4	8	5	13	1222	13	13
87       Lamp       2       2       2       4       4         88       Carriage Door Handle       4       4       4       4       4       4       9         90       Side Rail       4       1       1       1       1       1       1       1       1       1       1       1       1       1       1       1       1       1       1       1	83						1	12 23	-			I				I	1
87       Lamp       2       2       2       4       4         88       Carriage Door Handle       4       4       4       4       4       4       9         90       Side Rail       4       1       1       1       1       1       1       1       1       1       1       1       1       1       1       1       1       1       1       1	84		× *1	* 6	* *		6	12		12		12	24	36	12	48	48
87       Lamp       2       2       2       4       4         88       Carriage Door Handle       4       4       4       4       4       4       9         90       Side Rail       4       1       1       1       1       1       1       1       1       1       1       1       1       1       1       1       1       1       1       1	85						-	4	_	4		4	E 102.0		4	8	8
87       Lamp       2       2       2       4       4         88       Carriage Door Handle       4       4       4       4       4       4       9         90       Side Rail       4       1       1       1       1       1       1       1       1       1       1       1       1       1       1       1       1       1       1       1	86	Coupling Hook	(*( *)		*						1		-			4	4
Side Rail	87						-	-			2		2		2	6	6
Side Rail	88	Carriage Door Handl	e				t	-		-			4		_	4	4
Side Rail	89	Turn-button							-		-		1.00		-	4	4
1		Side Rail	7.6		19 W		-	_	-			_				4	4
Second Screw   Seco	50	Door Screw									***	-			_	16	16
Turn-button   Catch   Connecting Rod   Catch   Connecting Rod   Catch   Connecting Rod   Catch   Connecting Rod   Catch   Ca		Knob Screw					-				1	1	3	4	-	4	4
Osciona   Osci		Turn-button	* *				-	-					100			2	2
Q6		Catch					-		4	4	1000	4		4		4	4
97       Wood Screw	96		74		101			_			-				2	4	4
100   Screw-driver (wood handle)			· .										-			12	12
101   do. (all metal)   1   1   1   1   1   1   1   1   1					1202				-			I		1	100000	I	I
102   Cord							I	I		-				-	_		-
Spanner		1 TO THE STATE OF	Ø 8	12.0	10200	1000		1		1		ī		T		I	I
Rim Section, \( \frac{3}{4} - \text{in. wide} \)										1 22						I	I
Hub Wheel, 8 hole				070M	\$1000 100-200							_			-		12
152   do. ' 12 ,,							T	-		-			-			-	I
153   do.   16   ,		1- 1		500E 500E	1017									-			I
154       Wire Stay, $1\frac{5}{8}$ in.       6       - <td< td=""><td></td><td>do 16</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td></td><td>1</td><td></td><td></td><td>Ī</td></td<>		do 16												1			Ī
155       do. $2\frac{1}{2}$ , <td></td> <td>Wire Stay, 18 in.</td> <td>100</td> <td>1.70</td> <td>20120</td> <td>2010</td> <td>6</td> <td></td> <td></td> <td></td> <td></td> <td></td> <td>_</td> <td>Carried</td> <td></td> <td></td> <td>12</td>		Wire Stay, 18 in.	100	1.70	20120	2010	6						_	Carried			12
156   do.   3¼   ,									-		227		-				12
Pulley wheel with set screw	156						_										6
159       do. plain       1 <td< td=""><td>158</td><td></td><td></td><td></td><td></td><td></td><td>4</td><td></td><td></td><td></td><td></td><td></td><td>/</td><td></td><td></td><td></td><td></td></td<>	158						4						/				
160         Cog gear wheel				****											-		4
161       Pinion wheel	160			• •	• •							_			-		2
162       Bevel gear			• •		• •								1				2
163       Eccentric			10000	*60*	•55.•55			-	-					-			2
164       Crank Arm			• •	•		* *											1
167       Double Tapped Rod, $3\frac{1}{2}$ in.			0.000														I
167A do. do. 2 ,,																	6
168 Collar, Double Tapped — — — — — — — — —			-								Name of Street						
			4 ; ,,		* *	• •											4
1771 DEASS WOTH WORPI	17.1	Brass Worm Wheel			<b>€</b> 07 <b>€</b> 3												1 2
17.1 Drass worm wheel	1 /.1	Diass world wheel	* *	***	• •												4

## MUS ENGINEE

### WOOD SPARE PARTS

(For Prices see page 18)



No. 1. Grooved side rail for carriage and truck.



No. 7. Carriage door.




No. 8. Centre window.



No. 14. House Side.



No. 18. Truck End.

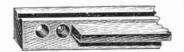

No. 2. Grooved side rail with footboard.






No. 19. House baseboard.



No. 3. Carriage end.



No. 9. Carriage Floor.

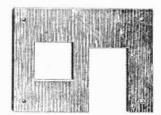


No. 15A. Window sill.

No. 15B. Front and Back of house.



No. 21. Steps.



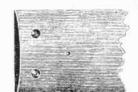

No. 10. Carriage roof.



No. 15D. Window sash.




No. 22. Station Slope



No. 4. Buffer Block.



No. 16. Door of house.

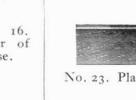

No. 23. Platform centre.



No. 5. Right-hand carriage window.



No. 6. Left-hand carriage window.






No. 12. End rail of house. No. 13. Side rail of house.



No. 16A. Door lintel.

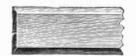

No. 17. Truck side.



No. 24. Platform side.



No. 25 Wood slip, 3 × 1 in.

### METAL SPARE PARTS

(For Prices see pages 18 and 19)






Nos. 50 and 51. Screw and nut.



Angle Bars. No. 52 cdot 6 ins.  $53 cdot 6\frac{1}{2}$ , 54 cdot 8, 55 cdot 12,



	Met	al	S	trip.	
No.	56			2	ins
,,	57			$2\frac{1}{2}$	,,
,,	58			3	,,
,,	59			$3\frac{1}{2}$	,,
,,	60			4	2.3
3.9	61			$5^{\frac{1}{2}}$	,,
2.2	62			61	,,
,,	63			8	,,
	64			125	

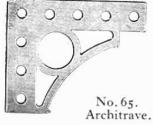



No. 66. Bracket.



Metal Plate.
No. 67 .. 8×3 ins.
,, 68 .. 3×3 ins.



Ridge Tile. No. 69 ...  $6\frac{1}{2}$  ins. ,, 70 ... 8 ,,



No. 71. Eaves, 8 ins.



No. 72. Straight hinge.



No. 73. Bent hinge.



No. 74. Trunnion.



No. 75. Flanged wheel.



No. 76. Pulley wheel, grooved.

No.	77	Axle	$3\frac{1}{2}$ ins
,,	78	,,	$2\frac{3}{4}$ ,,
,,	79	,,	$1\frac{1}{2}$ ,,
12	165	,,	$6\frac{1}{2}$ ,,
,,	166	,,	8 ,,
3.7	169	,,	4 ,,




No. 82. Collar and screw.





No. 84. Washer.



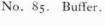



No. 86. Coupling Hook.



No. 87. Carriage lamp.



No. 88. Carriage door handle.



No. 89. Turnbutton.



No. 90. Carriage Rail.



No. 91. Carriage door screw.



No. 92. Knobscrew and nut.


No. 93. Turnbutton.



No. 95. No. 97. Catch. Wood Screw.



No. 96. Signal Post rod.

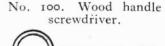


No. 101. All metal screwdriver.

No. 102. Cord, 5 yard skein.


### METAL SPARE PARTS

(For Prices see pages 18 and 19)

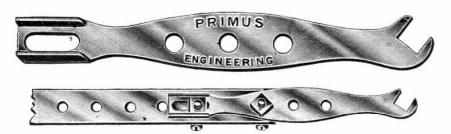

No. 103. PRIMUS SPANNER.

Included in all outfits and forms a very useful accessory. One end has a plain nut grip, the other is shaped to grip a nut securely when fastening up with a screwdriver. It can be lengthened by bolting to a metal strip of any length by means of the centre holes, as shown in lower illustration.

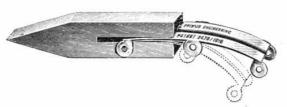

No. 110. Bolster Bending Block, machined in hard wood for altering curves in Rim Sections.



No. 158. Pulley Wheel with set screw.




No. 163 Eccentric.

PRIMUS

ENGINEERING

No. 164. Crank Arm.

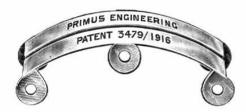


No. 150. Rim Section 3 in. wide, curved for building wheels.



No. 159. Pulley Wheel, plain.



No. 160. Cog Gear Wheel. 15 in., 56 teeth.

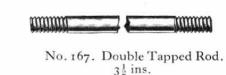

No. 167a. do. 23 ins.



No. 168. Double Tapped Collar.




No. 161. Pinion Wheel.

No. 162. Bevel Gear.





No. 171. Brass Worm Wheel,  $\frac{9}{16}$  in. diameter,  $\frac{7}{8}$  in. long, 12 threads per inch, fitted with Grub Screw.

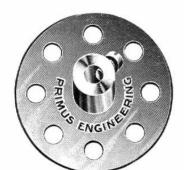


No. 151 Hub Wheel, 8 holes. 152 12 ,, 153 16



No. 154 Wire Stay, 1 ins. ,, 155  $2\frac{1}{2}$  ,, 156 31 ,,

### MOTOR CHASSIS SPARE PARTS

(For Prices see page 19)

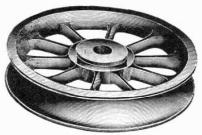


Motor Car Wheel. No. 201



Right (offside) Running Board. Left (nearside) Running Board.



No. 202. Rubber Tyre.

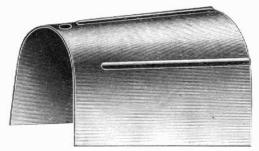


No. 212. Bonnet.



No. 215. Steering Bearing.



No. 203. Steering Wheel.

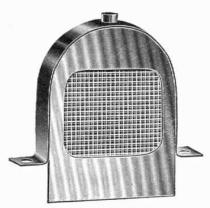

No. 213. Radiator.



No. 219. Metal Dashboard.



No. 204. Pinion and Bevel Gear.



No. 205. Small Bevel Gear.



No. 214. A.A. Badge.



No. 221. Shouldered Screw.







No. 206. Coupling.






No. 207. Front Mudguard.



### LOCOMOTIVE SPARE PARTS


(For Prices see page 19)

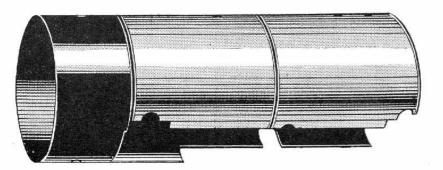


No. 252. Boiler Shell.




No. 253. Smoke Box Door.

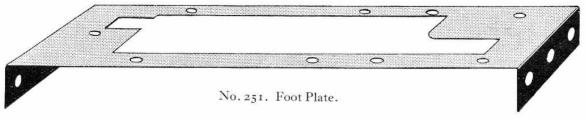

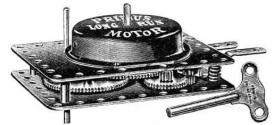

Primus Clockwork Motor.

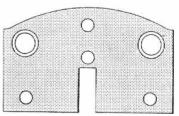

No. 256. Spectacle Plate.



No. 259. Cab Roof.



No. 254. Funnel.




No. 255. Steam Dome.




No. 260. Smoke Box Saddle.



No. 261. Long Screw and Nut.

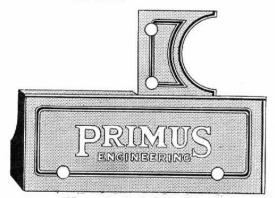

No. 258. Left Cab Side.

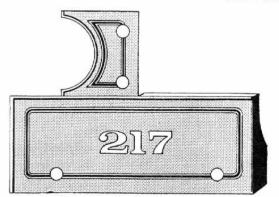

No. 257. Right Cab Side.



### PRICES OF SPARE PARTS

### WOOD PARTS

No	I	Grooved Side Rail		3d.	each	No.	1 5A	Window Sill		1/6 doz.
,,	2	,, ,, ,,	with foot-			,,	15B	Front and Back of Ho	use	1/- each
"	_	11 11 11	board		,,	"	15D	Window Sash		6d. doz.
,,	3	Carriage End		11		,,	16	Door of House	'	8d. each
"	4	Buffer Block		2d.		,,	16A	Door Lintel		1/3 doz.
,,	5	R.H. Carriage Wind	low	3d.		,,	17	Truck Side		4d. each
,,	6	L.H. " ",		24		22	18	" End		4d. ,,
"	7	Carriage Door		3d.	10000	,,	19	House Baseboard		1/6 ,,
33	8	Centre Window		6d.		,,	21	Steps		4d. ,,
,,	9	Carriage Floor		6d.		,,		Station Slope		6d. ,,
,,	10	" Roof		8d.		,,	23	Platform Centre		6d. ,,
	ΙI	Posts for Railing		1/-		,,	24	" Side		8d. ,,
	12	End Rail of House		3d.		,,	25	Wood Slip		1/3 doz.
	13	Side ,, ,, ,,		4d.		55		Glass for Windows	12.2	6d. ,,
		Sides of House		0.1		"	110	Bolster Bending Block		4d. each
,,	14	ordes of House	14.74	ou.	"	"		Doloter Delianing Dioek		20. 000.

### METAL PARTS

METAL PARTS										
Nos. 50	& 51 Screws and Nuts		6d. doz.	No. 77	Axle, $3\frac{1}{2}$ ins	1/- doz.				
No. 52			$1/-\frac{1}{2}$ doz.	,, 78	$,, 2\frac{3}{4},, \ldots \ldots$	1/- "				
,, 53	$,, ,, 6\frac{1}{2},,$		1/1 ,,	,, 79		1/- "				
,, 54	,, ,, 8 ,,		1/2 ,,	,, 165	$,, 6\frac{1}{2},, \dots \dots$	2/- "				
,, 55	,, ,, I2 ,,		1/9 ,,	,, 166	,, 8 ,,	3/- "				
,, 56	Metal Strip 2 ,,		3d. "	,, 169	$\frac{83}{4}$ ,	1/- ,,				
,, 57	$,, ,, 2\frac{1}{2},, \ldots$		3d. ,,	,, 82	Collar and Screw	2d. each				
,, 58	,, ,, 3 ,,		3d. "	,, 83	Handle Axle	2d. ,,				
,, 59	", ", $3\frac{1}{2}$ ",		4d. ,,	,, 84	Washer	<b>1d.</b> doz				
,, 60	,, ,, 4_,,		5d. "	,, 85	Buffer	2d. each				
,, 61	$,, ,, 5\frac{1}{2},, \dots$		6d. ,,	,, 86	Coupling Hook	4d. ,,				
,, 62	$,, ,, \frac{6\frac{1}{2}}{2},, \ldots$	• •	8d. "	,, 87	Carriage Lamp	3d. ,,				
,, 63	,, ,, 8 ,,		8d. ,,	,, 88	"Door Handle	2d. ,,				
,, 64	$12\frac{1}{2}$ ,		1/- "	,, 89	Turnbutton for Door Handle	3d. $\frac{1}{2}$ doz.				
,, 65	Architrave		9d. ,,	,, 90	Carriage Rail	3d. ,,				
,, 66	Bracket		<b>6d.</b> doz.	,, 91	"Door Screw	1/- doz.				
,, 67	Metal Plate $8 \times 3$ ins.		$2/-\frac{1}{2}$ doz.	,, 92	Knobscrew and Nut	$1/3 \frac{1}{2} doz.$				
,, 68	n, , , , , 3×3 ,,	• •	$\frac{1}{3}$ ,,	,, 93	Turnbutton	3d. ,,				
,, 69	Ridge Tile $6\frac{1}{2}$ ins	*:	2/6 ,,	,, 95	Catch	2d. ,,				
,, 70	., ., 8 ,,		3/- ,,	,, 96	Signal Post Rods	6d. $\frac{1}{2}$ doz.				
,, 71	Eaves, 8 ins		2/- ,,	,, 97	Wood Screws	2d. doz.				
,, 72	Straight Hinge	• •	9d. doz.	,, 100	Screwdriver (Wood handle)	6d. each				
,, 73	Bent ,,		6d. $\frac{1}{2}$ doz.	,, 101	(Metal ,, )	2d. ,,				
,, 74	Trunnion	• •	2d. each	,, 102	Cord, 5-yard skein	$1\frac{1}{2}d.$ ,,				
,, 75	Flanged Wheel	• •	4d. ,,	,, 103	Primus Spanner	2d. ,,				
,, 76	Pulley Wheel	• •	4d. "	,, 150	Rim section, $\frac{3}{4}$ in. wide	3d. "				



### PRICES OF SPARE PARTS—continued

### METAL PARTS—continued


No.151 ,, 152 ,, 153 ,, 154 ,, 155 ,, 156 ,, 158 ,, 159 ,, 160	Hub Wheel 8 hole	. 4d. ,, . 3d. ½doz 3d. ,, . 3d. ,, . 4d. each . 2d. ,, . 9d. ,,	,, 162 Bevel Gear	6d. each 1/6 pair 9d. each 4d. ,, 3d. ,, 3d. ,, 6d. ,,
	PRIMU	S MOTOR	CHASSIS OUTFIT	
,, 202 ,, 203 ,, 204 ,, 205 ,, 206 ,, 207 ,, 208 ,, 209 ,, 210 ,, 211	Motor Car Wheel Rubber Tyre Steering Wheel Pinion and Bevel Gear Small Bevel Gear Coupling Front Mudguard Right Back Mudguard Left , , , Right Running Board Left , , , Bonnet	9d. ", 6d. ",	No. 213 Radiator	6d. each 3d. ,, 6d. ,, 2d. ,, 2d. ,, 9d. ,, 1d. ,, 1d. ,,
	PRIMUS CLO	CKWORK	LOCOMOTIVE OUTFIT	
,, 252 ,, 253 ,, 254	Foot Plate		,, 258 Cab Side (left) ,, 259 Cab Roof ,, 260 Smoke Box Saddle	1/6 each 1/6 ,, 9d. ,, 9d. ,,
" 255 " 256	Steam Dome	$\frac{2}{-}$ ,, $\frac{1}{3}$ ,,	" 261 Long Screws and Nuts	3d. ,,

### PRICES OF BOYS' OWN READY-MADE MODELS

See illustrations on inside of back cover.

Goods Truck	******	 	 6/6	Passenger Coach	 	10/6
Station House	• •	 	 7/6	Railway Station	 	10/6

# These models are made with PRIMUS ENGINEERING Nº0 outfit

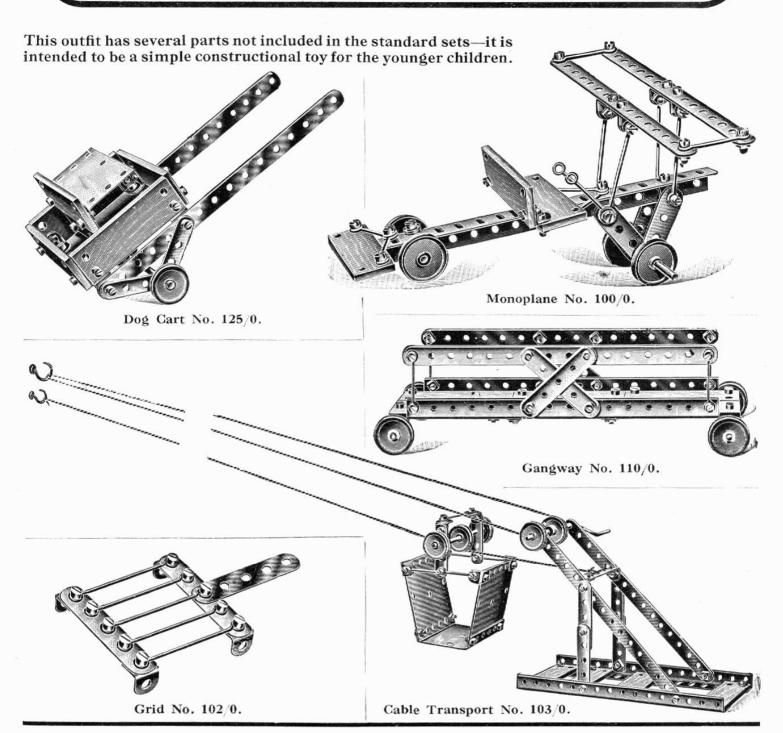



Chair No. 103/0.




Garden Seat No. 104/0.




Garden Seat No. 105/0.




Push Cart No. 106/0.

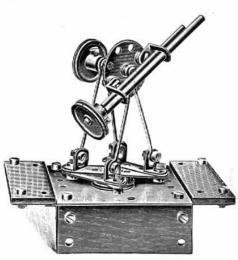


Anti-Aircraft Gun No. 107/0.

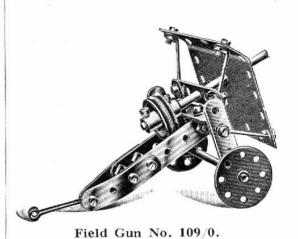

Note.—One extra No. 151 required, or use two No. 158 Wheels.

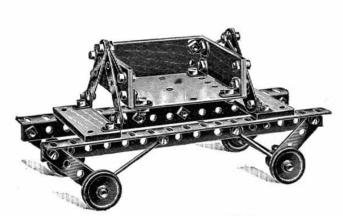


Tipping Truck No. 129/0.

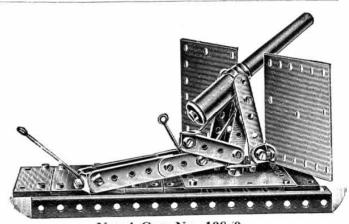



Naval Gun No. 108/0.


Note.—Use a Toy Cannon to complete this Model.

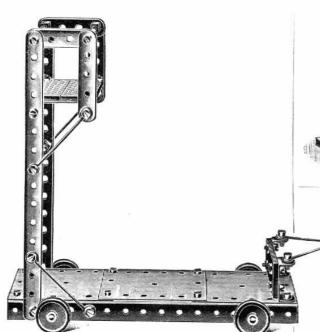


Tower Waggon No. 112/0.

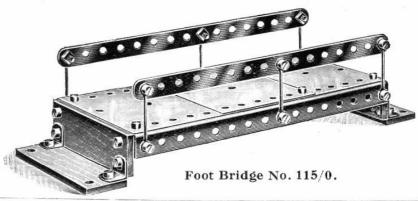

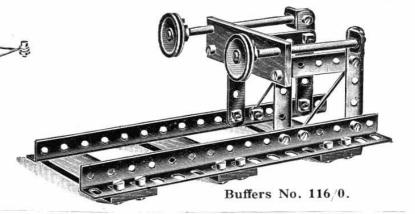


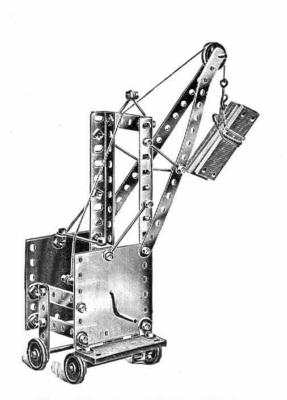


Travelling Derrick No. 117/0.

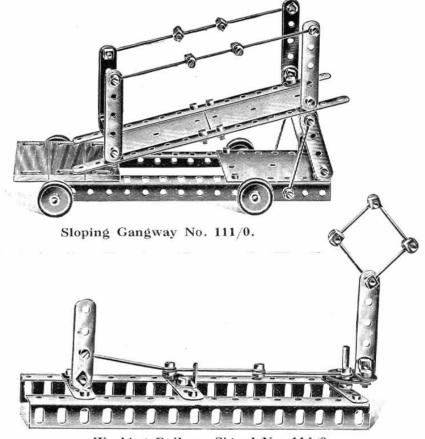


Working Railway Signal No. 114/0.

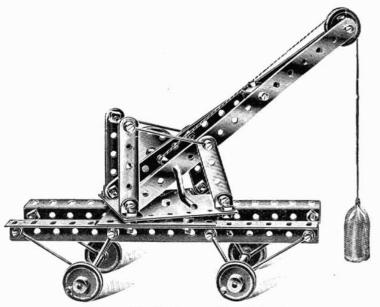


Travelling Crane No. 118/0.

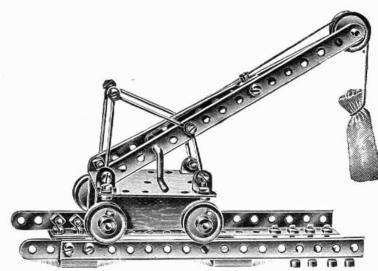


Crane on Rails No. 119/0.

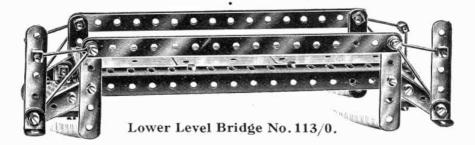


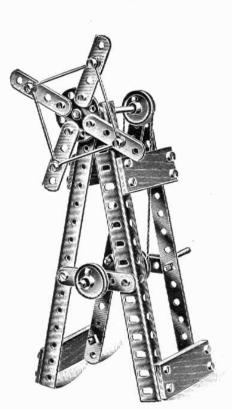


Windmill No. 120/0.

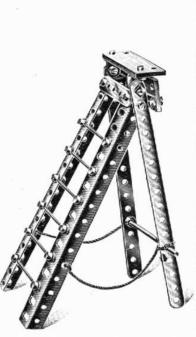


Step Ladder No. 121/0.

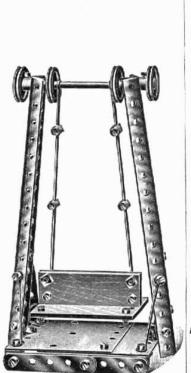


Swing No. 122/0.

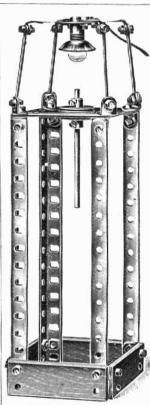


Electric Lamp Standard No. 123/0.

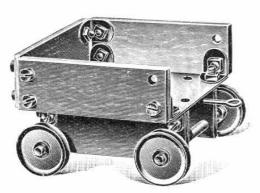


Locomotive Tender No. 127/0.

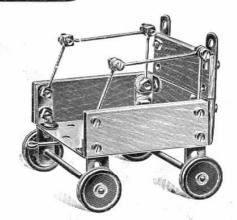


Truck No. 126/0.

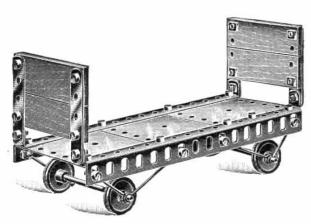

Truck No. 124/0.

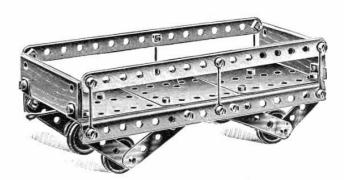


Goods Truck No. 128/0.

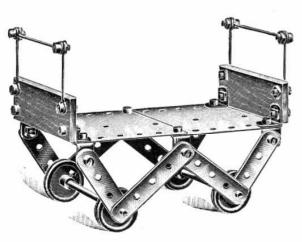


Hand Truck No. 130/0.




Sack Truck No. 131/0.

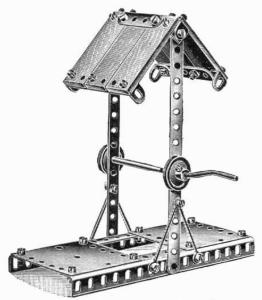

Well Winch No. 132/0.

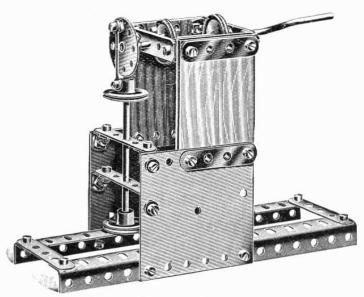


Power Hammer No. 137/0.

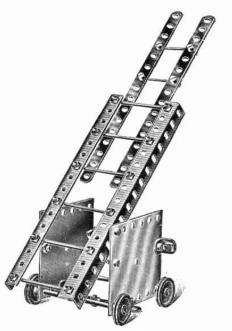


Extending Ladder No. 134/0.




Signal No. 133/0.

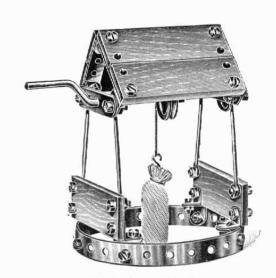

Well No. 135/0.

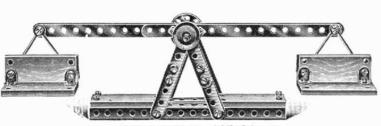

See Saw No. 135/0A.

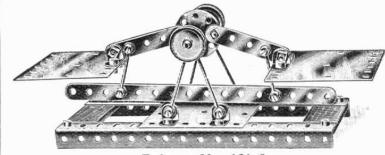

Balance No. 136/0.




Acrobatic Monkey No. 138/0.

These Novel
WORKING
MODELS
are
easily made
with a
PRIMUS
ENGINEERING


No. 0

**OUTFIT** 

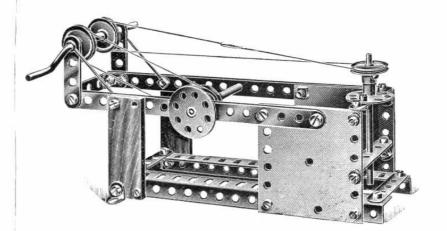


Drill and Buffing Wheel No. 140/0.


One extra No. 151 8-hole hub required, or use two No. 158 wheels.

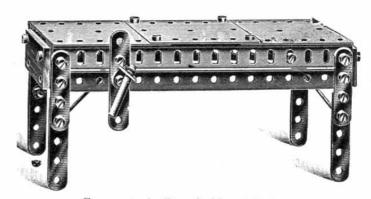

Carpenter's Bench No. 141/0.

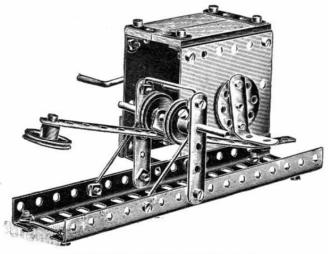

Automatic Hammer No. 142/0.

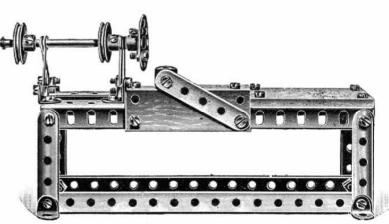

Lathe No. 139/0.

## These models are made with


## PRIMUS ENGINEERING Nº 1 OUTFIT



### Seat No. 1.

2	Slips					No.	25
8	Screws					9.1	50
2	Strips,	$2\frac{1}{2}$	in.			.,	57
			,,			,,	59
4	Bracke	ts				,,	66

Brackets fixed with slot on wood.

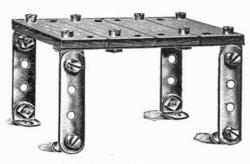

### Table No. 2.

4 Slips 16 Screws		 	 No. 2
4 Strips,		 	 - ,, 5
2 ,,		 * *	 ,, 6
8 Bracke	ets	 	 ,, 6



### Seat No. 3.

4 SI	ips							No.	25
o So	crews							,,	50
4 St	rips,	2	in.					,,	56
2	,,	$2\frac{1}{2}$	٠,					,,	57
6 B <sub>1</sub>	acke	ts						,,	66
2-in	stri	ps	scr	ev	ved	b	eh	ind	the
		v	vooc	1	back	ζ.			



### Chair No. 4.

6	Slips					No.	25
33	Screws					,,	50
4	Strips,	2	in.		٠	9.2	56
4	,,	$2\frac{1}{2}$	,,,			,,	57
10	Bracket	s				,,	66
	Plate			-			68



### Chair No. 5.

				 -	-		
6	Slips					No.	2
	Screws					,,	5
4	Strips,	2	in.		×	,,	5
6	,,	$2\frac{1}{2}$	,,	,		,,	5
2	,,	$3\frac{1}{2}$	, ,	•			5
2	_ ,,	4	,,	•			6
	Bracket			ુ		,,	6
4	Wheels		* *			,,	7
2	Axles				*	2.3	7




### Music Stand No. 8.

12	Screws				No.	50
2	Strips,	2	in.		,,	56
6	,,	$2\frac{1}{2}$	, .		12	57
2	,,	4	,,	7	,,	60
3	Bracket	S			,,	66




Roller No. 9.

8	Screws						No.	50
	Strips,	2					,,	56
I	,,	$2\frac{1}{2}$	.,				,,	57
I	,,	$3\frac{1}{2}$	11			٠	,,	59
I		4	5.81	è	35		,,	60
	Bracket					٠	,,	66
	Wheels				4		,,	75
I	Axle, 3	1 it	n.				,,	77
2	Collars						,,	82
C	over w	hee	els	w	itl	1	card	for
			roll					

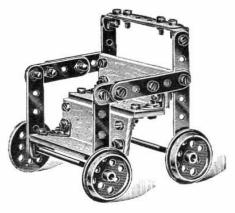


### Chair No. 6.

	Slips		4.00					No.	25
	Screws					*		,,	50
2	Strips, 2	2	in.			÷		2.1	56
6	,, 2	$2\frac{1}{2}$	,,	2				,,	57
2	,, 3	3 1	,,					,,	59
	Brackets				- 2	4	192	,,	66
	Wheels							,,	75
2	Axles, 3	$\frac{1}{2}$ i	n.					5.5	77

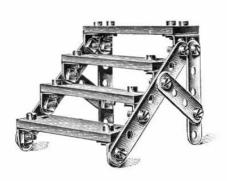


### Ladder No. 7.

4	Slips								No.	25
22	Screws						*	œ.	,,	50
2	Strips,	2	in.						,,	56
2	,,	$2\frac{1}{2}$	,,					12	,,	57
2	,,	31/2	,,				9	779	1.7	59
	Bracke		9.40						,,	66
Fiz	k bracke	ets	to ste	ps	w	ith	sle	ots	at si	de.

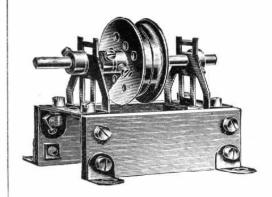


### Counter Shaft No. 23.

2	Slips	Ŷ	į.				No.	25
	Screws		<b>3</b> 0		4		21	50
8	Brackets	140		7	- 14	59		66
2	Trunnions					1.5	,,	74
2	Wheels	*			104	3.4	,,	75
1	Axle $3\frac{1}{2}$ -in.		S*2			,	3.5	77
3	Collars						,,	82
3	Washers						,,	84

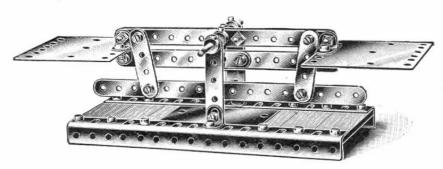


### French Balance No. 10.

	Slips			No.	25	2 Strips, 4 in. No. 6
30	Screws			. ,,	50	1 ,, 8 ,, ,, 6
2	Bars,	8	in.		54	10 Brackets, 6
2	Strips,	2	,,	,,	56	3 Plates, $3 \times 3$ in.,, $\epsilon$
	,,	21	,,			1 Axle, $3\frac{1}{2}$ in, 7
2		$3\frac{1}{2}$		,,	59	4 Collars ,, 8

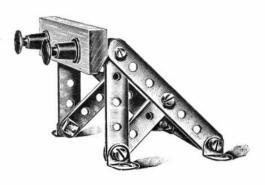


### Buffer End No. 100.

1	Block							No.	4
	Screws			×			٠	,,	50
2	Strips,	2	in.	*				,,	56
3	,,	$2\frac{1}{2}$	,,		1			,,	57
	,,	$3\frac{1}{2}$	,,		9			,,	59
	Bracket	S				· Sa	٠	,,	66
2	Buffers			19		38	٠	,,	85

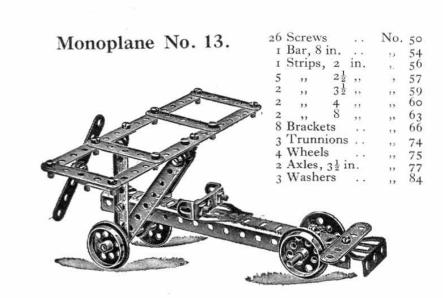




### Tower Wagon No. 44.

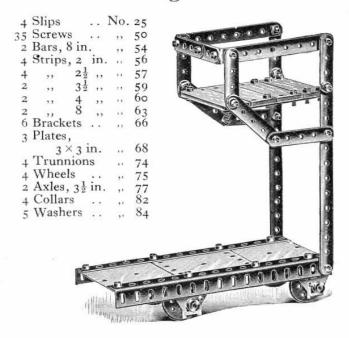

### Windmill No. 20.

8				No.	25
	Screws			,,	50
4	Strips,	2	in.	11	56
2	,,	$2\frac{1}{2}$	,,	111	57
2	2.1	$3\frac{1}{2}$	,,		59
	,,		,,		60
8	Bracke	ts		393	66
1	Plate,				
	3 ×	3 i	n.	1.1	68
	Trunni	ion	S	2.0	74
	Wheels				75
1	Axle, 3	1 i	n.	730	77
	Collars			13.0	82
10	Washe	rs		.:	84

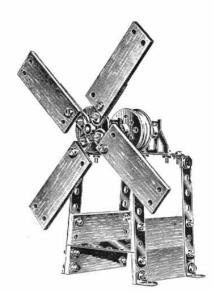




### Library Ladder No. 42.

			No.		No.
8	Slips		25	1 Plate,	•
36	Screws		50	$3 \times 3$ in.	68
2	Bars, 8	in.	54	2 Trunnions	74
2	Strips,	2 in.	56	4 Wheels	75
4	,,	21,,	57	2 Axles, 31 in.	77 82
2	,,	$3\frac{1}{2},,$	59	2 Collars	82
2	**	4	60	2 Washers	84
10	Bracke	ts	66		




### Truck No. 33.

5	Slips			,			No.	25
16	Screws						"	50
4	Strips,	2	in.		¥		,,	56.
2	,,	8	,,	٠		٠	1,7	63
2]	Bracket	s					,,	66
2 1	Wheels			٠	٠	٠	,,	75
I	Axle, 3	1/2 i	n.		*		,,	77

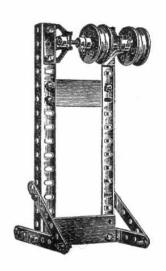


### Shafting No. 35.

		0					
2	Slips		ä	**		No.	25
	Screws	x x:	×	*0		,,	50
2	Bars, 8 in.		*	•		3.5	54
2	Strips, 3½	-in.	e.		٠	,,	59
2	,, 4	,,		4		,,	60
2	Trunnions		ş			,,	74
4	Wheels				el	,,	75
I	Axle, 31-in	n.	×		*	,,	77
3	Collars			*:		,,	82
3	Washers					,,	84

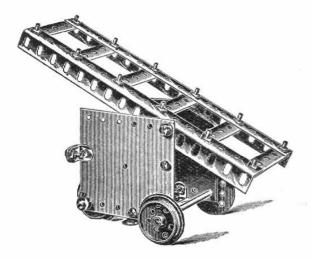


### Fire Escape No. 30.

24	Screw	S		No.	50	2 Plates	 No.	68
	Bars,			,,	54	4 Wheels	 ,,	75
6	Strips	$, 2\frac{1}{2}$	in.	,,	57		 ,,	77
I	,,	$3^{\frac{1}{2}}$	,,	,,	59	2 Collars	 ,,	82
1	,,	4	,,	22	60	2 Washers	 ,,	84
4	Bracke	ets			66			11.54

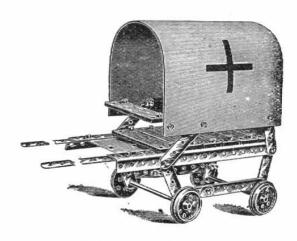


### Red Cross Wagon No. 24.

8	Slips .			No.	25	2 Strips, 4 in.	 No.	60
	Screw			,,	50	2 ,, 8 ,,	 2.2	63
	Bars, 8			,,	54	4 Brackets	 ,,	66
4	Strips	, 2	n.	,,	56	ı Plate	 ,,	68
6	,,	21	,,	21	57	4 Wheels	 ,,	75
2	,,	$3^{\frac{1}{2}}$	,,	21	59	2 Axles, 3½ in.	 3.7	77
	Ta75/		Hood	is	made	of stiff card.		

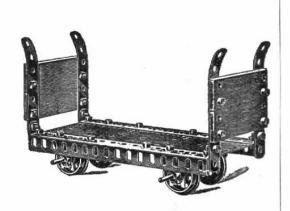


### Churn Trolley No. 27.

4	Slips		114	¥	×.	¥1	No.	25
24	Screws	* 1	8	2			,,	50
2	Bars, 8 in.						,,	54
2	Strips, 3½ i	in.				*:		59
2	,, 4	,,					,,	60
4	-					٠	,,	66
3	Plates					*	,,	68
4	Trunnions		:	94			,,	74
4	Wheels					Ų.	,,	75
2	Axles, 3½ i	n.	0.0				,,	77
4	Collars						,,	82

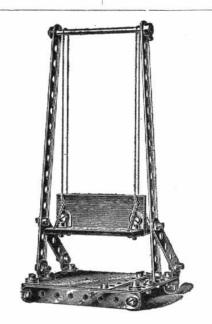


### Swing No. 34.

					No.	25
	Screws				,,	50
2	Strips, 2	$\frac{1}{2}$ in.			,,	57
2	,, 4	,,			,,	60
2	,, 8	,,			,,	63
	Brackets				,,	66
	Plates			÷	,,	68
	Axle, $3\frac{1}{2}$	in.	1		,,	77
	Collars			40	,,	82
4	Washers			*5	,,	84

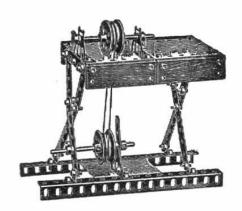

### Lathe No. 43.


4 Slips				ž.	No.	25
36 Screws					,,	50
2 Bars, 8 in.					,,	54
4 Strips, 2 i	n.	٠			12	56
5 ,, $2\frac{1}{2}$	,,			*	,,	57
$5, 3^{\frac{1}{2}}$	,,		٠	•	,,	59
2 ,, 4	,,	٠		٠	2.5	60
12 Brackets	* *	٠			2.2	66
3 Plates		٠			2.1	68
4 Trunnions					,,	74
4 Wheels					*,,	75
2 Axles, 3½ it	ı.				2.2	77
4 Collars			٠		22	82
9 Washers					,,	84

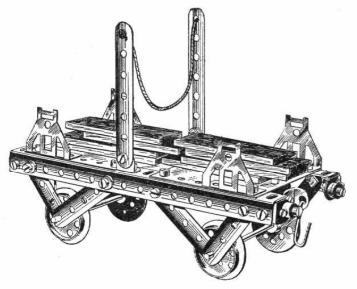

### Timber Truck, No. 48


8	Slips	***				No.	25	2 Plates, 3×3 in.	No.	68
33	Screws			***		,,	50	4 Trunnions	1,2	74
2	Bars					.,	54	4 Wheels	,,	75
4	Strips,	2	in.				56	2 Axles, 3½ in	,,	77
4	,,	21/2	,,			,,	57	4 Collars	,,	82
2		31	,,		×	,,	59	12 Washers	,,	84
10	Bracke	ts		•		,,	66			

Wood slips are laid on to represent timber. Hooks are made from two pieces of bent wire.

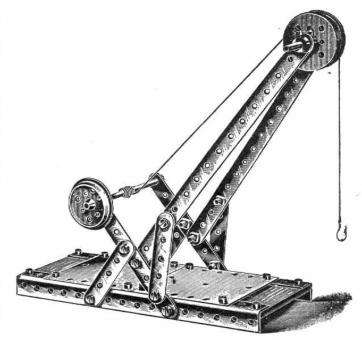


### Crane No. 21.

25720	CII			NT	0-2-2-	. 04 0 '-	NT. 6.
2	Slips	* *	10.00	No.	25	2 Strips, 8 in	
24	Screws		* *	٠,,	50	2 Plates, 3 × 3 in.	,, 68
	Bars, 8		*:*:	,,	54	3 Wheels .	
4	Strips,	2½ in.		1.5	57	2 Axles, 3½ in	, , 77 , 82
2		4 ,,			60	3 Collars	. ,, 82
			В	ent w	ire fo	ms the hook.	

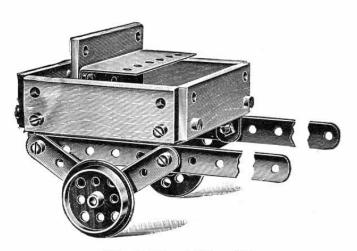


### Dog Cart No. 26.

				•			4					ı.	No. 25
	Screws											٠	,, 50
	Strips, 2	in									1		,, 56
2	,, 8	,,								#:X			,, 63
12	Brackets			×	<b>6</b> 1	٠					*	•	,, 66
2	Plates, 3	X:	3 in.		•	٠		٠	S. F. C		,		,, 68
2	Wheels												,, 75
1	Axle, $3\frac{1}{2}$	in											,, 77
	TI	he	8 in.		strips		form	t	he	shafts.			

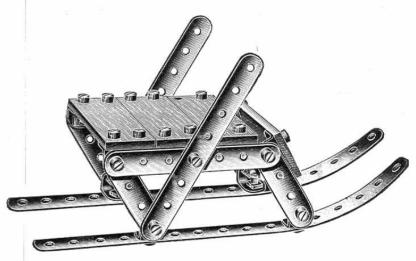

### Sledge No. 19.


4	Slips					,							*	No.	25
26	Screws									,				,,	50
4	Strips,	2	in.		•										56
2	,,	21/2	,,												57
2	,,	31	,,	×							×		٠	,,	59
2		4	,,		*	,	8.9			*	٠	10		1.2	60
2	,,	8	,,		3.1									,,	63
10	Bracke	ts												,,	66

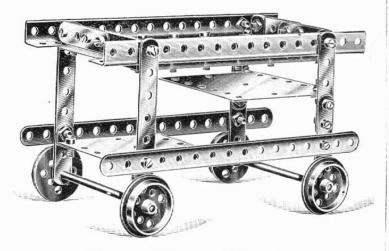

### Dinner Wagon No. 14.

6	Slips 3	×	ı in.	No.	25	2 Strips, 8 in.	No.	63
36	Screws			,,	50	8 Brackets	,,	66
	Bars, 8			,,	54	2 Plates, $3 \times 3$ in.		68
4	Strips,:			,,	56	4 Wheels	,-	75
4	,,	$2\frac{1}{2}$	,,	,,	57	2 Axles, $3\frac{1}{2}$ in.	*>	77
2	,,	4	11	**	60			

The top table is No. 25 wood slips, screwed to 8 in. bars.

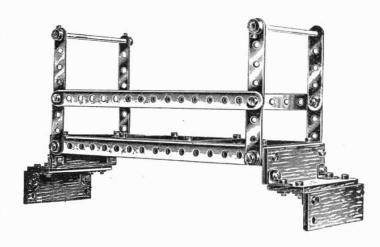

### Bridge No. 16.

6 Slips 3×1 in.	No. 25	12 Brackets	No. 66
36 Screws	,, 50	3 Plates, $3 \times 3$ in.	,, 68
2 Bars, 8 in.	,, 54	2 Axles, 3½ in.	,, 77
4 Strips, 2 in.	,, 56	4 Collars	,, 82
$4,, 2\frac{1}{2},$	,, 57	8 Washers	,, 84
2 8	63		




### Summer House No. 12.


4	Slips 3×1 in		* :					No.	25
								,,	50
1								,,	57
2	Strips, 3½ ,,							,,	59
								,,	60
12	Brackets							,,	66
3	Plates, $3 \times 3$ in	n.						,,	68
1	FY3							,,	74
	The seats are	f	ormed	ı	of	caro	lbo	ard.	

Wheeled Ladder No. 29

	Slips, 3			No.	25
	Screws			,,	50
2	Angle b	ars	, 8 in.	,,	54
2	Strips,	2	in.	2.1	56
2	,,	$2\frac{1}{2}$	2.2	53	57
2	,,	$3\frac{1}{2}$	2.2	3.1	59
2		4	,,	3 2	60
2	,,	8	,,	. ,,	63
	Bracket			1.5	66
1	Plate, 3	$\times$ 3	in.	,,	68
4	Trunni	ons		2.7	74
	Wheels			,,	75
2	Axles,	$3\frac{1}{2}$ i	n.	,,	77


The rungs in the ladder are made by lacing cord through the 8-in, metal strips.

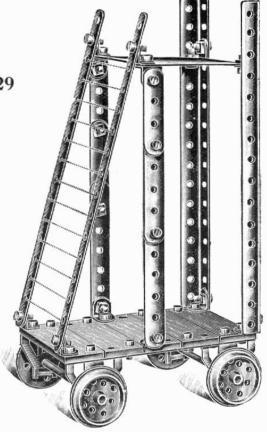

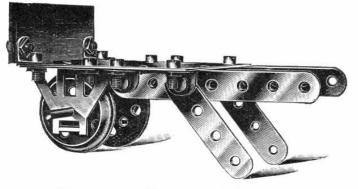


### Luggage Barrow No. 15.

	Slip 3×1	in.	No.	25	1 Plate, 3 × 3 in.	No.	68
	Screws		,,	50	2 Trunnions	,,	74
2	Strips, 2	in.	3.5	56	2 Wheels	12020	7.5
2	$^{,,}$ $3^{\frac{1}{2}}$	,,	,	59	1 Axle, 3½ in.		77
6	Brackete			66	, 0 2	**	, ,

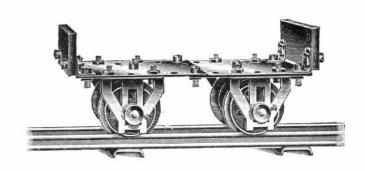


### Trolley Truck No. 28.

2	Slips $3 \times 1$ in.	No.	25	4 Trunnions	No.	74
20	Screws	- , ,	50	4 Wheels	5.5	75
4	Brackets	,,	66	4 Collars	**	82
2	Plates, $3 \times 3$ ins	5 13	68	12 Washers	2.2	84

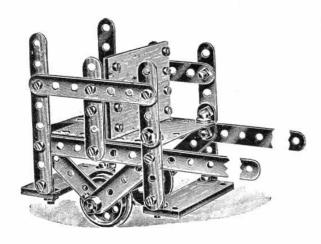

### Mail Cart No. 25.

	Slips 3	×ı	in.	No.	25
	Screws			,.	50
4	Strips,	2	in.	,,	56
6	,,	$2\frac{1}{2}$	,,	* 3	57
2	,,	$3\frac{1}{2}$	,,	,,	59
2	,,	4	,,	5.9	60
2	,,	8	,,	.,,	63
	Bracket			,,	66
	Plates,		3 in.	,,	68
	Wheels			,,	75
	Axle, 3		1.	11	77
	Collars		*	.,,	82
12	Washer	s.	*0		84

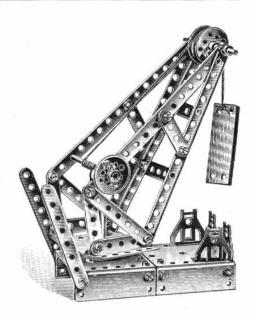



### Crane No. 46.

5	Slips, 3 ×	ı in.		2		No.	25
	Screws	***			40040	,,	50
2	Bars, 8	in.				33	54
	Strips, 2	**					56
6	,, 2	1 ,,		30		2.1	57
2	,, 3	2 , ,				2.5	59
2	" 4 " 8	2.1		100	* *	2.9	60
2				3		2.3	63
12	Brackets					,,	66
	Plates, 3		1		47.47	.,	68
	Trunnion	ns		(0)		,,	74
4	Wheels	38 - 63	36		*(*)	,,	75
	Axles, 32	in.	1.0		(5.15)	2.2	77
	Collars			8		2.1	82
	Washers			2	12 41	,,	84
	A long na	ail is us	ed	for	centre	pin	

### Trailer No. 37.


4 Slips 3×1 in.	No. 25
24 Screws	,, 50
4 Strips, 2 in	,, 56
8 Brackets	,, 66
1 Plate, $3 \times 3$ in.	,, 68
4 Trunnions	,, 74
4 Wheels	,, 75
2 Axles, 3½ in	,, 77
12 Washers	,, 84

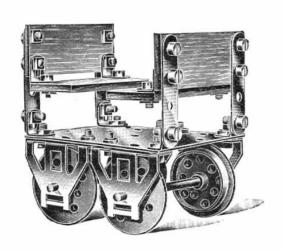

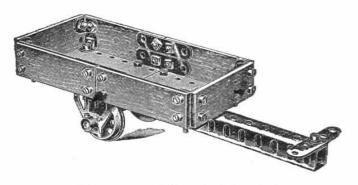


### Baggage Truck No. 31.

6 Slips 3×1 in.	No. 25	2 Plates, $3 \times 3$ in.	No. 68
33 Screws	,, 50	2 Trunnions	,, 74
2 Bars, 8 in	,, 54	2 Wheels	,, 75
4 Strips, 2 in.	,, 56	1 Axle, $3\frac{1}{2}$ in	,, 77
$1, 2^{\frac{1}{2}},$	,, 57	2 Collars	,, 82
12 Brackets	,, 66	5 Washers	,, 84

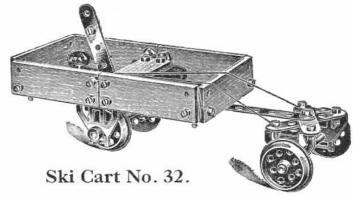

7	Slips 3×1 i	in. •	No.	25	2 Plates, 3×3 i	n.	No.	68
36	Screws		1.7	50	4 Trunnions		,,	74
2	Strips, 2 in		,,	56			,,	75
3	$,, 2\frac{1}{2},$		,,	57	2 Axles, 3½ in.			77
1	,, 8 ,,			63	2 Collars	*::*	.,	82
I 2	Brackets		1.5	66	3 Washers	583	1.3	84


Cord used for steering.

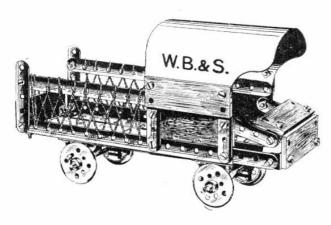

### Motor Lorry No. 55.

7 Slips 3×1 in.	No. 25	2 Strips, 8 in.		No. 63
36 Screws	,, 50	6 Brackets		., 66
2 Bars, 8 in	., 54	4 Trunnions		., 74
4 Strips, 2 in.	,, 56	4 Wheels	* *	,, 75
6 ,, $2\frac{1}{2}$ ,,		2 Axles, 3\frac{1}{2} in.	2. 11	,, 77

Piece of card cut to make hood.

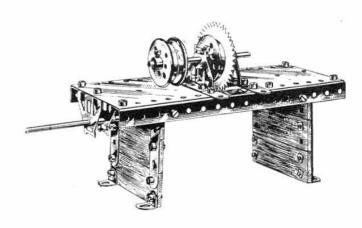

### Circular Saw No. 56.


6 Slips 3×1 in.	No. 25	2 Plates	 No. 68
35 Screws		4 Trunnions	 ,, 74
2 Bars	,, 54	2 Axles	 ., 77
4 Strips, 2½ in.	,, 57	ı Collar	 ,, 82
2 ,, 4 ,,	,, 60	1 Washer	 ,, 84
8 Brackets	., 66		

The saw can be cut out of a piece of cardboard.


### A.S.C. Wagon No. 57.

8	Slips 3	$\times$ 1	in.	No.	25	12 Brackets	No.	66
	Screws			2.1	50	2 Plates	17	68
4	Strips,	2	in.	2:	56	4 Trunnions	,,	74
4	,,	$2\frac{1}{2}$	,,	,,	57	4 Wheels	,,	75
1	2.3	$3\frac{1}{2}$	,,	,,	59	2 Axles	,,	77
1	,,	4	,,	χ,	60	4 Collars	3 9	82
1	,,	8	,,	**	63	8 Washers	,,	84


Use a short nail to form pivot of front wheels.

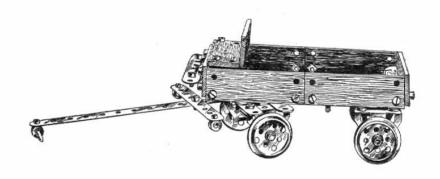


#### Signal No. 50.

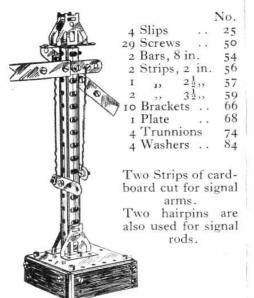


#### Vane No. 51.

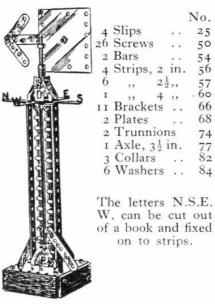


#### Signal No. 52.

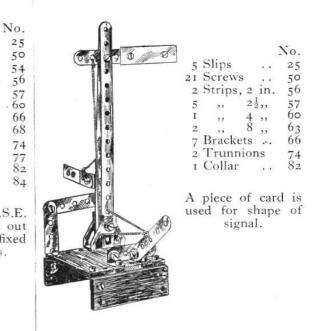



# Signal No. 53.

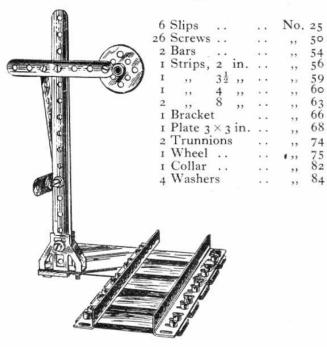

# Signal No. 54.

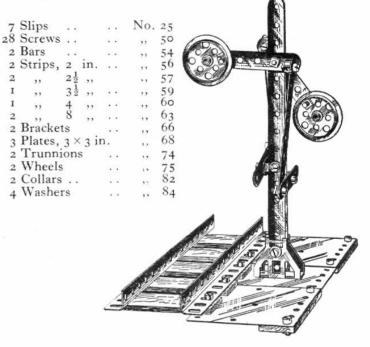

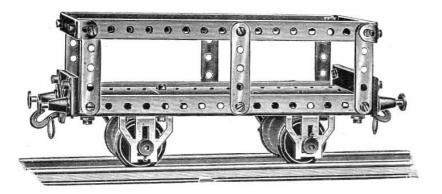

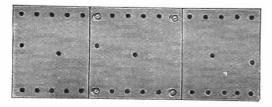



#### Timber Truck No. 38.

	Slips		No.	25	3 Plates	No.	. 68
	Screws		.,	50	4 Trunnions		74
2	Bars, 8 in	١	,,	54	4 Wheels	,,	75
6	Strips 2	in.	,,	57	2 Axles, 3½ in.	,,	
2	,, 3½	,,	1.5	59	4 Collars		82
2		,,	,	63	12 Washers		84
12	Brackets		,,	66	D C	,	85
					2 Coupling Hooks	,,,	86

#### Make this truck before you attempt the others.

- (1) Fit Brackets inside Angle bars to slotted sides, with two washers to each screw.
- (2) The trunnions should be fitted on first.
- (3) The axles and wheels must be put in last and a washer placed between **each** collar and the **face** of trunnion to allow the axles to run easily.


The base is composed of three No. 68 plates, which can be laid in loose, and caught between the sides when they are pressed in and the end screws tightened up, or they can be bolted together as shown in diagram. Note.—In trucks with a short base reduce the length by bolting in other holes.


Position of Brackets to secure the ends.—The Brackets are fitted on with the slots at the ends as shown; this allows a little play to introduce the base plates, and afterwards the sides can be pressed in and the screws tightened.

# Transport Truck No. 39.

	Screws		9009		No. 50
	Bars, 8 in				,, 54
4	Strips, 2 in.				,, 56
2	$,, 2\frac{1}{2},$	40			57
	Brackets				,, 66
3	Plates, $3 \times 3$ in.		*		68
4	Trunnions		****	57.5	. 74
4	Wheels			7000	,, 75
2	Axles, $3\frac{1}{2}$ in		4.1		
4	Collars	14			,, 82
12	Washers		XC1	* 14	,. 84
	Buffers		F.17	606	,, 85
2	Coupling Hooks	7			86
					35 00


Two washers are placed between each Bracket and the Bars where they are bolted on, to adjust the  $2\frac{1}{2}$  in. strips.

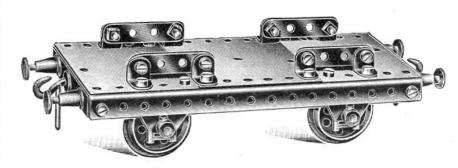

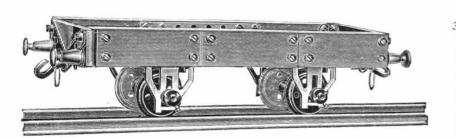

#### Ballast Truck No. 40.


8	Slips				0.00		()*)		40	No.	25
6	Screws				(4)				41	,,	50
2	Rara & in		100				w		20		54
	Strips, 2 in.				6	78					56
2	_ ,, 4 ,,					3				,,,	60
	Brackets	1	¥	4		9	2	٠	6	2.5	66
3	Plates, $3 \times 3$ in.		*							11	68
	Trunnions	×		38	20			v		,,	74
	Wheels		10	200	40		(*)				75
2	Axles, $3\frac{1}{2}$ in.		27							,,	77
	C-11		70								82
8	Washers	9.2								,,	84
	Buffers		•							"	85
		÷									
4	Coupling Hooks	,			20	*	<b>9</b> 50		*0	2.5	86

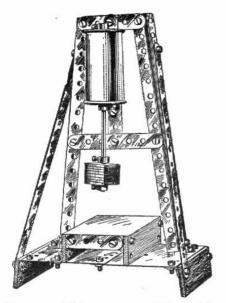

#### Steam Hammer No. 60.


			No.		1	Vo.
4	Slips 3	× 1 in.	25	2	Strips, 8in.	63
33	Screws		50	12	Brackets	66
2	Bars		54		Plates	68
1	Strip,	2 in.	56	2	Wheels	75
2	,,	$2\frac{1}{2}$ ,,	57	1	Axle	77
I	,,	$3\frac{1}{2}$ ,,	59	2	Collars	82

Small squares of cardboard fixed on to axle for hammer. Flat piece of cardboard for bed and an inverted mantle case is used for cylinder.

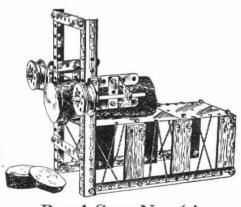

#### Band Saw No.-64.


	Dulla	Su !!		110		v		
	Slips, 3×						No.	25
	Screws						,,	50
	Bars, 8 in.		٠		٠		,,	54
4	Strips, 23	in.					,,	57
2		,,		(4			,,	60
2	,, 8	3.3			•	×	,,	63
8	Brackets		*		*	*	,,	66
3	Plates						,,	68
	Trunnions	3					,,	74
	Wheels				٠		,,	75
2	Axles, $3\frac{1}{2}$	in.	٠	*	*		,,	77
	C-11				,		,,	82
10	Washers						,,	84

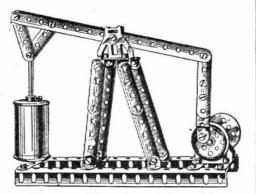

#### Beam Engine No. 62.


		N	io.		1	No.
35	Screws		50	2	Strips, 8 in.	63
2	Bars		54	8	Brackets	66
4	Strips,	2 in.	56	4	Trunnions	74
6	,,	$2\frac{1}{2}$ ,,	57	4	Wheels	75
2	,,	31 ,,	59	2	Axles	77
2	,,	4 ,,	60	3	Collars	82

An incandescent mantle case is used for cylinder.

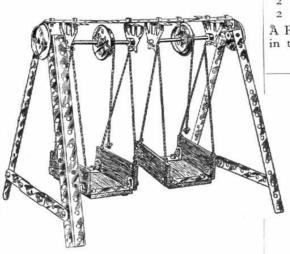

# Swing No. 65.


0	CIII					NT	
0	Slips, $3 \times 1$	ı ın.				No.	25
36						,,	50
2	Angle Bar	S		0.0		225	54
4	Strips, 2	in.				21	56
4	$,, 2\frac{1}{2}$	,,				,,	57
2	$,, 3\frac{1}{2}$	,,		100		,,	59
2	,, 4	,,			٠	,,	60
2	,, 8	,,			٠	,,	63
12	Brackets			1.5		,,	66
4	Trunnions			2		,,	74
4	Wheels					,,	75
2	Axles	200				,,	77
4	Collars					,,	82
2	Washers					,,	84

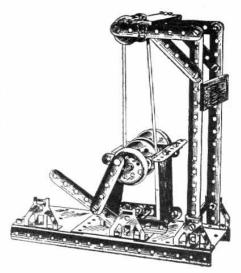

# Emery Wheel No. 63.

		No			N	Vo.
6	Slips, 3 ×			8	Brackets	66
	The second secon				Plates	
		8 in.	54	4	Trunnions	74
2	Strips,	2 in.	56		Wheels	75
5	Strips	$2\frac{1}{2}$ ,,	57		Axles,3½in.	
2	,,	$3\frac{1}{2}$ ,,	59		Collars	82
2	,,	4 ,,	60	4	Washers	84
2	1.0	8	63			


A French nail and cotton reel are used in this model; also a pill-box lid for emery wheel.

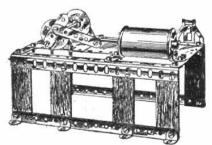

# Mill Engine No. 61.

		0						
	Slips, $3 \times$						No.	25
	Screws						,,	50
					٠		,,	54
1	Strip, 2 ir	1.					,,	56
4	$_{,,}$ $2\frac{1}{2}$	12					,,	57
2	,, 8	12					,,	63
							,,	66
3	Plates						,,	68
4	Trunnions						,,	74
4	Wheels						,,	75
	Axles							77
							12	82
	Jse incand		r	nantle		case	for	Γ

cylinder. Worked with hand or power.

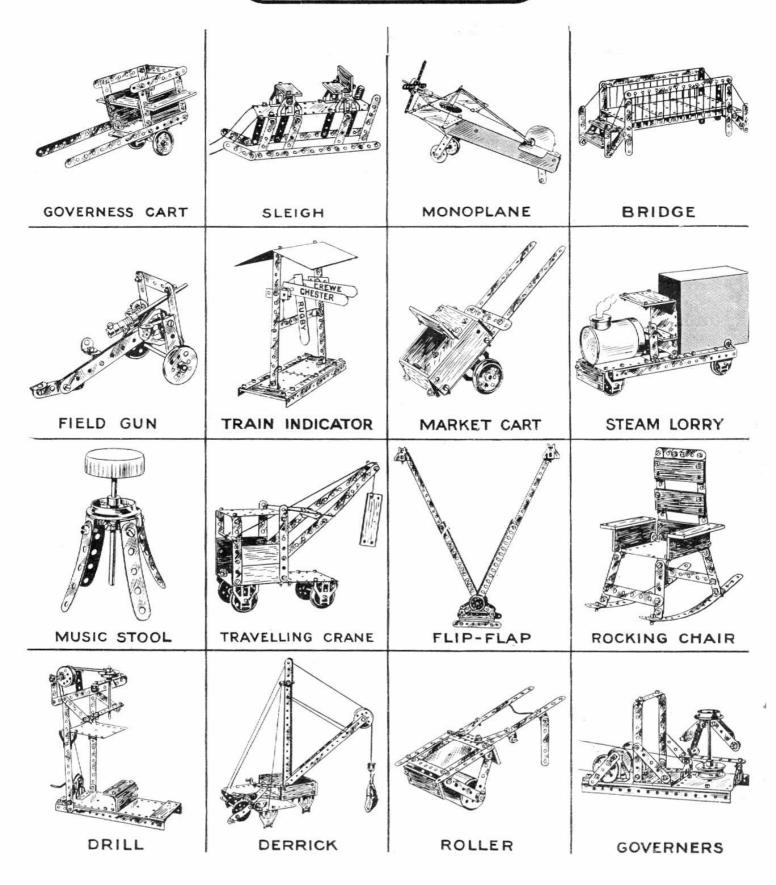


# These models are made with

# PRIMUS FREIMBUNG

Nº 2 OUTFIT

Models shown on pages from No. 27 can also be made with this outfit.

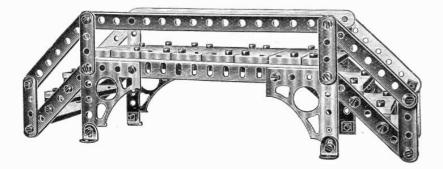


#### Foot Bridge No. 107.


14	Slips, $3 \times 1$ in.				 No. 25
60	Screws			* *	 ,, 50
2	Bars, 8 in.				 ,, 54
8	Strips, 2 ,,				 ,, 56
8	$,, 3^{\frac{1}{2}},,$				 ,, 59
2	,, 8 ,,	2.5			 ,, 63
16	Brackets				 ,, 66
4	Architraves		*0*		 ,, 85

# Carrier Tricycle No. 131.


9	Slips, $3 \times 1$ in.				. ,					No.	25
60	Screws									,,	50
8	Strips, 2 in.									,,	56
3	$,, 2\frac{1}{2},$					•		•		,,	57
1	" $3\frac{1}{2}$ "			٠						,,	59
1	,, 4 ,,									,,	60
1	$,, 6\frac{1}{2},$						*8			,,	62
13	Brackets						•			,,	66
3	Plates, $3 \times 3$ in.								. '	,,	68
4	Hinges		*							,,	72
4	Trunnions	3.6	er :		40					,,	74
3	Wheels									,,	75
1	Axle, $3\frac{1}{2}$ in.								٠	,,	77
1	$,, 2\frac{3}{4},$									,,	78
4	Collars				*					,,	82
6	Washers									,,	84
3	Buffers									,,	85
1	Catch									,,	95
1	Rod									,,	96

Driver's seat made of cardboard.

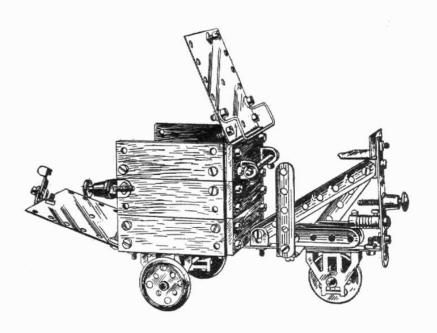

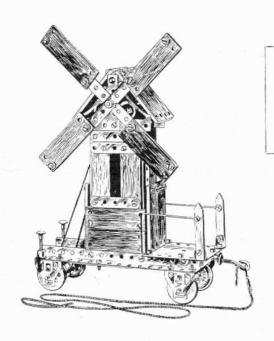

WORKING MODELS.

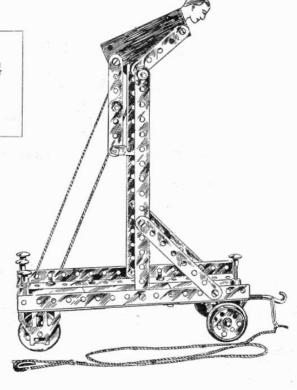


# Working Windmill No. 138.


1	Floor.			No.	9	9 Brackets 1	No.	66
2	Posts .			11	11	3 Plates, $3 \times 3$	11	68
τ6	Slips .			. 11	25	4 Trunnions	27	74
١5	Screws			11	50	4 Wheels	13	75
2	Angle I	Bars	$6\frac{1}{2}$	in.,,	53	2 Axles, 3½ in	, ,	77
2	2.9	,,	8	12 12	54	$2, 2\frac{3}{4}, \dots$	,,	78
	Strips,			10	56	3 Collars		82
3	,,	$2\frac{1}{2}$	,,	2.5	57	2 Washers	13	84
2	,,	$6\frac{1}{2}$	,,	.27	62	2 Buffers	* *	85
2	,,	8	,,	1978	63	1 Coupling	* *	86
4	Architr	ave	s	**	65	2 Rods	,,	96


#### Horizontal Bar Performer No. 139.

1	Slip			No.	25	4	Trunnions	 No.	74
19	Screws			,,	50	4	Wheels	 2.8	75
2	Angle I	Bars	, 8 in.	* 1	54	2	Axles, $3\frac{1}{2}$ in.	 	77
4	Strips,	2	in.	.,	56		Axle, $2\frac{3}{4}$ ,,		78
2	,,,	$2\frac{1}{2}$	,,	1.7	57		Collars	1.)	82
2	,,	4	,,	22	60	4	Buffers	 +3.7	85
2	,,	8	,,	,,	63			 1.9	86
1	Bracket			,,	66	2	Catches	11	
3	Plates,	3 >	(3	**	68				, ,

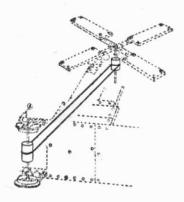

Note.—These models are mounted on trolleys, and when pulled along the figures perform. This is effected by a simple belt system, using cotton reels, fully explained by the small drawings. The head of the man is cut from card and inserted in a slit cut in the No. 25 wood slip.

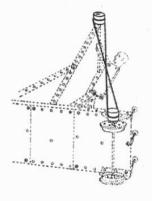


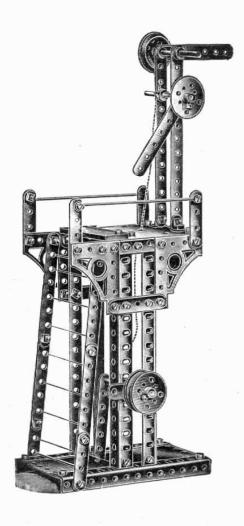

# Extending Ladder No. 130.

2	Slips				No.	25
53	Screws				,,	50
2	Bars, $6\frac{1}{2}$ i	n.			,,	53
2	,, 8	,,			,,	54
	Strips, 2	in.			> 2	56
6	$,, 2\frac{1}{2}$				,,	57
5	$3\frac{1}{2}$	,,			,,	59
2	,, 4	,,			>>	60
2	,, 8	,,			,,	63
2	Architrav	es			12	65
16	Brackets				,,	66
1	Hinge				,,	72
4	Wheels				,,	75
1	Axle, $3\frac{1}{2}$ i	n.			,,	77
1	$,, 2\frac{3}{4}$	,,	* *		,,	78
3					,,,	82
12	Washers		* *		,,	84
1	Catch				,,	95
2	Rods				,,	96
	Extr	a par	ts requ	iired.		
1	Wheel				,,	76
1	Handle				,,	83


Use cord for ladder rungs.

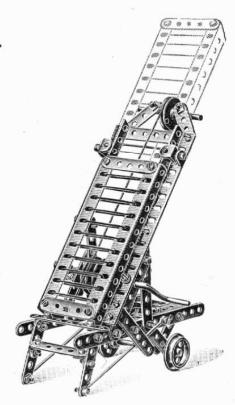

# Signal Gantry No. 118.


1	Slip	٠.						No.	25
55	Screws							,,	50
2	Bars, $6\frac{1}{2}$	in.						,,	53
2	,, 8	,,			à			,,	54
8	Strips,	2	in.		,			,,	56
5	,,	$2\frac{1}{2}$	37			÷		,,	57
5	,,	$3\frac{1}{2}$	,,					1.3	59
-2	,,	4	,,					,,	60
2	,,	$6\frac{1}{2}$	> >				. ;	,,	62
2	,,	8	,,					,,	63
4	Architra							,,	65
11	Brackets				٠			,,	66
3	Plates							,,	68
4	Wheels			,	,	,		,,	75
1	Rod, $3\frac{1}{2}$	in.						,,	77
2	Rods, 2	in						12	78
4	Collars							,,	82
2	Rods							,,	96

Collars ... ,, 82
Rods ... ,, 96
Use cord for ladder rungs.

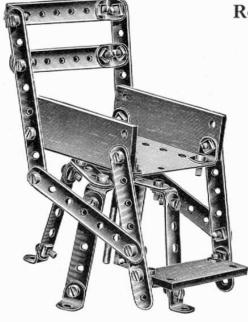

# Revolving Chair No. 216.


Wood Slips		No. 2
Screws		,, 5
Strips, 2 in.		,, 5
$,, 2\frac{1}{2},$		,, 5
$3\frac{1}{2}$ ,		,, 5
., 4 ,,	* *	,, 6
Brackets		,, 6
Plate, $3 \times 3$ in.		,, 6
Wheel		., 7
Axle, $2\frac{3}{4}$ in.		-,, 7
Collars		8

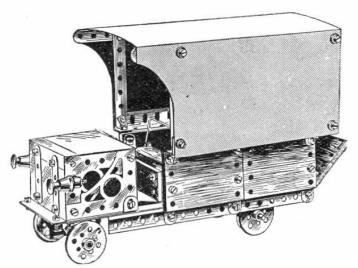

# Motor Van No. 132.

13	Slips .			N	0. 25	3	Plates, 3 × 3	in.	No.	68
	Screws			,	, 50	2	Hinges		,,	72
2	Angle	Bars	$6\frac{1}{2}$			4	Trunnions		,,	74
2		,,	8	,, ,	, 54		Wheels	* *	23	75
6	Strips,	2	in.	,	, 56	2	Axles, $3\frac{1}{2}$ in	n.	,,	77
6	,,	$2\frac{1}{2}$	,,	,	, 57	2	$_{\sim}$ ,, $_{\sim}^{2\frac{3}{4}}$ ,	,	,,	78
4	,,	$3^{\frac{1}{2}}$	,,	,	, 59	3	Collars		,,	82
2	,,	8	,,	,	, 63	8	Washers		,,,	84
4	Archit	rave	s	,	£	3	Buffers		2.1	85
10	Bracke	ts		,	, 66	I	Rod		22	96


Cardboard is used for cover of wagon and engine bonnet.

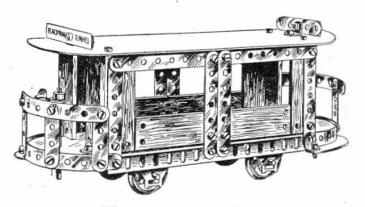

#### Tramcar No. 133.

12	Slips			No.	25	14 Brackets	No.	66
	Screws			,,	50	3 Plates, $3 \times 3$ in.	,,	68
	Angle l			,,	54	4 Trunnions	,,	74
6	Strips,	2	in.	,,	56	4 Wheels	,,	75
2	,,	$2\frac{1}{2}$	,,	,,	57	2 Axles, $3\frac{1}{2}$ in.	,,	77
8	,,	$3\frac{1}{2}$		,,	59	$2,, 2\frac{3}{4},$	12	78
2	,,	4	,,	17	60	4 Collars	. ,,	82
2	,,	$6\frac{1}{2}$	,,	,,	62	8 Washers	,,	84
2		8			62			


Cardboard is used for roof, platforms, and steps.

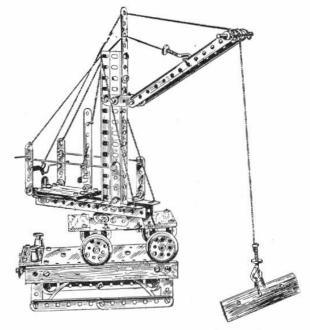

# Travelling Crane No. 134.

No.	No.	No.
2 Rails 1	4 Strips,	4 Wheels 75
I Buffer 4	2½ in. 57	2 Axles, 3½ in. 77
6 Slips 25	$6, 3\frac{1}{2}, 59$	$1, , 2\frac{3}{4}, , 78$
65 Screws 50	2 ,, 4 ,, 60	3 Collars 82
2 Angle Bars,	$2, 6\frac{1}{2}, 62$	1 Washer, 84
$6\frac{1}{2}$ in. 53	4 Architraves	4 Buffers 85
2 ,, 8 ,, 54	65	2 Couplings 86
4 Strips,	16 Brackets 66	ı Catch 95
2 in. 56	3 Plates,	1 Rod 96
	$3 \times 3$ in. 68	


A piece of wire bent for crank handle.

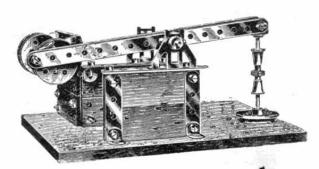

# Mechanical Hammer No. 108.

7	Slips, 3	×ı	in.	No.	25	4 Trunnions	 No.	74
26	Screws			,,	50	4 Wheels	 590	75
4	Strips,	2	in.	,,	56	2 Axles, 3½ in.	 .,,	77
4	,,	$2\frac{1}{2}$	,,	,,	57		 2.2	82
2	,,	$3\frac{1}{2}$	,,	,,	59	8 Washers	 ,,	84
2	,,	8	,,	,,	63	2 Buffers	 ,,,	85
12	Bracket	S		,,	66	6 Screws	 ,,	97


This model can be worked by a motor.

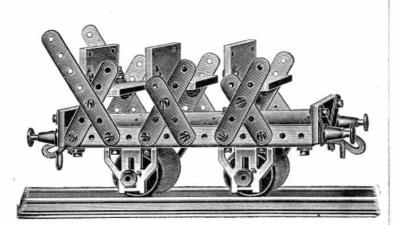

#### Switchback Car No. 115.


8	Slips		No.	25	4	Trunnions		No.	74
50	Screws		,,	50	4	Wheels		,,	75
12	Bars, 6	in	,,	53	2	Axles, 3½ in.			77
8	Strips,	2 in.	,,	56	4	Collars		,,,	82
6		$2\frac{1}{2}$ ,,	,,	57	12	Washers		,,	84
2	,,	$3\frac{1}{2}$ ,,	,,	59	4	Buffers		,,	85
I	Bracket	s	,,	66	2	Couplings		,,	86
3	Plates,	$3 \times 3$ in.		68					

Note.—Two Washers are placed over screws that secure brackets to bars.

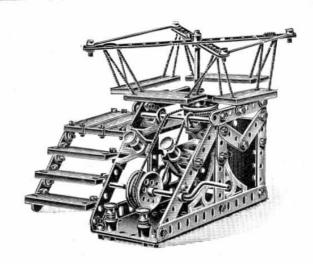


#### Roundabout No. 129.

11	Slips		No.	25	16	Brackets		No.	66
61	Screws	*		50	3	Plates, $3 \times 3$	in.	,,	68
2	Bars, 61 in		,,	53	4	Trunnions		,,	74
5	Strips, 2	in.	,,	56		Wheels		,,	75
5	,, 21/2	,,	,,	57		Axles, $3\frac{1}{2}$ in		12	
5 8	$3\frac{1}{2}$	,,	,,	59		Collars		,,	82
2	,, 4	,,	,,	60		Washers		,,	84
2	. ,, . 8	,,	. ,,	63		Buffers		"	
4	Architraves		,,	65	2	Rods		,,!-	96

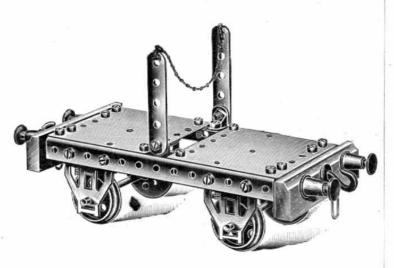


# Timber Truck No. 123.


2	Blocks		No.		a Plates a v a	n	No.	68
			110.	4	2 Plates, 3 × 3 i	11.	140.	00
	Screws		,,	50	4 Trunnions		,,	74
2	Bars, 6½	in.	,,	53	4 Wheels		**	75
2	Strips,	2 in.	- ,,	56	2 Axles, 3½ in.			77
2	,,	$2\frac{1}{2}$ ,,		57	4 Buffers		,,	85
12	Brackets			66	2 Couplings			86

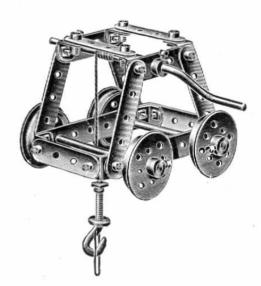


# Overhead Travelling Crane No. 140.

16	Screws			No.	50.	2	Axles, 3½ in.		No.	77
6	Strips,	2	in.	,,	56	2	Collars		,,	82
		. 1		,,	57		Handle Axle		,,,	83
4	Wheels			,,,	75	1	Coupling Hoo	ok	23	86

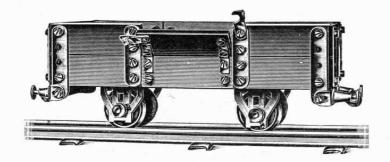

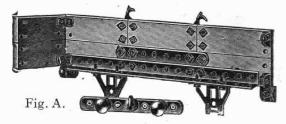

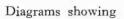

- (a) How the sides are fitted up.(b) How the end is formed.

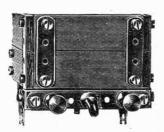


Fig. B.

#### Coal Truck No. 113.


16	Slips					No.	25
64	Screws					,,	50
2	Bars, 8 in.			è		,,	54
8	Strips, 2	in.	,			,,	56
4	$,, 2\frac{1}{2}$	,,			٠	,,	57
2		,,				,,	59
2	,, 4	,,				,,	60
12	Brackets					,,	66
3	Plates					,,	68
4	Hinges					,,	72
4	Trunnions					,,	74
	Wheels					,,	75
	Axles, 3½ i	n.				,,	77
	Collars						82
	*** *					,,	84
	Buffers					,,	85
0.5	Couplings		•	•		"	86
	Catches			•		2.3	
4	Catchies					23	95


# Heavy Goods Truck No. 116.


ALL WOOD SIDES, ENDS AND BUFFER BLOCKS.


4	Rails	 	6.3	No.	1
2	Blocks	 		,,	4
1	Floor	 			9
2	Sides	 		11	17
2	Ends	 7.4		7.5	18
36	Screws	 		1,	50
2	Bars, $6\frac{1}{2}$ in.	 		1.	53
4	Strips, 2 in.	 		.,,	56
3	$,, 2\frac{1}{2},,$	 		,,	57
2	$,, 6\frac{1}{2},$	 ¥¥		.,	62
10	Brackets	 		,,	66
4	Trunnions	 		,,	74
4	Wheels	 * *		,,	75
2	Axles, $2\frac{3}{4}$ in.	 		,,	78
	~	 	. 17	,,	82
4	Washers	 	٠	,,	84
4	Buffers	 		,,	85
2	Coupling Hooks	 		,,	86

Diagram showing how the frame is made up. The floor has two brackets as shown and is then placed inside brackets down, and secured by means of the coupling hooks.

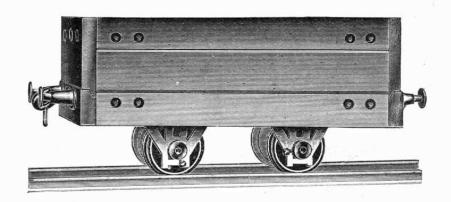


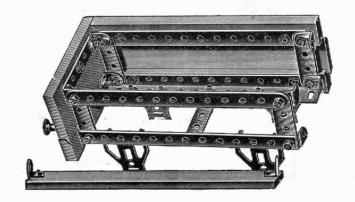


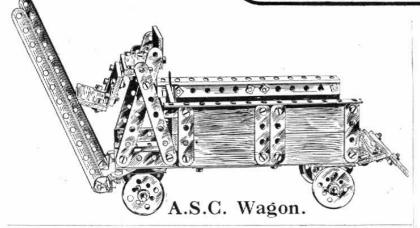

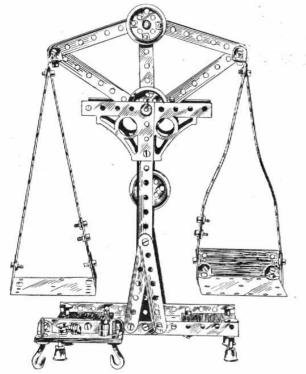


Jockey Scales.

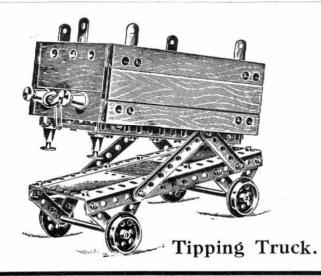

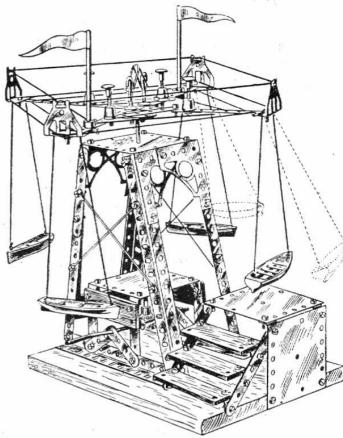

H. Maxim's Flying Machine.

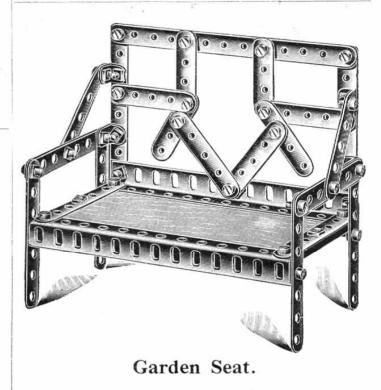

THESE MODELS ARE MADE WITH A No. 2 OUTFIT.

# These models are made with


# PRIMUS ENGINEERING


Nº3 OUTFIT

Models shown on pages from No. 27 can also be made with this outfit.

#### Boxers in Ring No. 204.

A clever working model of two pugilists who actually box.

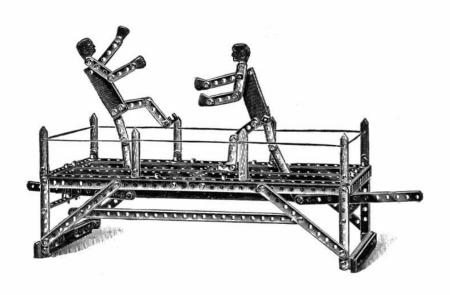


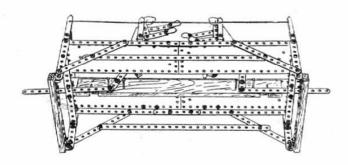

2	Grooved side rails	 No.	1
8	Posts for railings	 ,,	ΙI
I	Plain platform plank	 ,,	23
2	Wood slips	 ,,	25
85	Screws	 ,,	50
2	Angle bars, $6\frac{1}{2}$ in.	 ,,	53
4	,, ,, 8 ,,	 ,,	54
10	Strips, 2 in	 ,,	56
6	$,, 2\frac{1}{2},, \ldots$	 ,,	57
4	$3\frac{1}{2}$ , $\vdots$	 ,,	59
4	,, 4 ,,	 ,,	60
4	$,, 5\frac{1}{2},, \cdots$	 ,,	61
4	$,, 6\frac{1}{2},, \ldots$	 ,,	62
2	$,, 12\frac{1}{2},, \ldots$	 ,,	64
16	Brackets	 ,,	66
4	Plates, 8×3	 ,,	67
2	Trunnions	 ,,	74
6	Washers	 ,,	84
4	Catches	 ,,	95
2	Wood screws	 ,,	97

Heads and boxing gloves can be cut out of cardboard.


The system of operating the boxers is clearly shown in the diagram. Note that it is advisable to use small nails to act as stops to prevent the figures assuming unnatural positions.

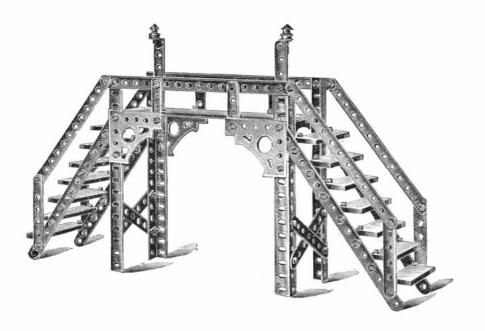

# High Level Bridge No. 185.

14	Slips,	3 ×	ı in.							No.	25
98	Screws								40	,,	50
4	Angle	bar	s, 8 ii	١.					4	17	54
6	Strips,	2	in.		100	0.0	47		(0)	3.2	56
4	,,	3	11		* :				9.7	3.3	58
4		3 2	2.2		* :			2	*	585X	59
4	**	5 1	2.5						0	* *	61
4	,,,	61	3.5							353	62
4	5.5	8	,,,	*	*1		10		(*)	2.7	63
4	Archite						ë			+ +	6.5
38	Bracke	ts						4		*1	66
	Plate,					. 4	13	4		,,	67
2	Lamps		18 K	1.4	40)		4.5			**	87


The side rails of bridge are composed of two  $5\frac{1}{2}$ -in. strips, bolted together.

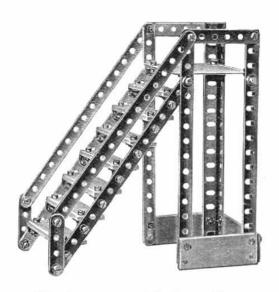

# Staircase with Landing No. 186.

10 Slips, 3 × 1 in			No. :	25
50 Screws			., !	50
2 Angle bars, 8 in.	* *			54
2 Strips, 2 in	0.5		,, !	56
2 ,, 3 ,,			,, 3	58
			,, (	63
18 Brackets				66
1 Plate, $3 \times 3$ in.			,, (	68
The brackets fit to the No. 25 slips.	front	holes	of th	ne

Washers are put over the four screws that bolt the metal plate in to keep it square.

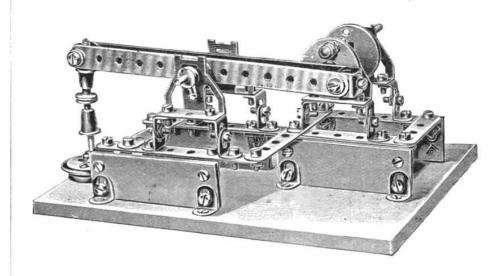


# Hammer worked by Cam Action No. 192.

4 Slips, 3×1 in.		No. 25	1 Axle, 23 in.		No. 78
54 Screws		,, 50	6 Collars	***	,, 82
1 Strip, 2 in.		,, 56	1 Handle	14.14	,, 83
$1,, 2\frac{1}{2},,$	2.0	,, 57	10 Washers		,, 84
1 ,, 3 ,,	4.1	., 58	2 Buffers		,, 85
2 Strips, 4 in.	140.00	., 60	1 Knob screw		,, 92
$3,, 6\frac{1}{2},$	20.00	., 62	6 Wood screws	14. 41	,, 97
28 Brackets		., 66			
4 Trunnions		74	The knob screw for	the e	eccentric

The knob screw for the eccentric action should be double nutted into the wheel.

i Wheel 2 Wheels

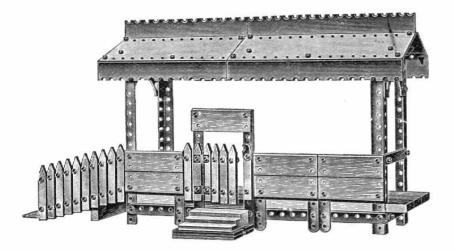


#### Side Station No. 180.

16	Posts				No. 11
1	Step		4.2		,, 21
1	Slope				,, 22
1	Platform		3.3	26.00	,, 23
2	Platforms		2.5		,, 24
7	Slips, $3 \times 1$ in.			- 2	,, 25
88	Screws		9.9		,, 50
4	Angle bars, 8 in		4.1	4.4	,, 54
4	Strips, 2 in.	34.34	0.00		,, 56
6	$,, 2^{\frac{1}{2}},$	(*)	0.00		,, 57
4	$3\frac{1}{2}$ ,,	(4) (4)	4.4		,, 59
3	,, 4 ,,	* *	* *		,, 60
4	", $5\frac{1}{2}$ ",	* *		* *	,, 61
3	$_{-}$ ,, $12\frac{1}{2}$ ,,				,, 64
7	Brackets				,, 66
4	Plates, $8 \times 3$ in.				,, 67
1	Tile, $6\frac{1}{2}$ in				,, 69
1	_ ,, 8 ,,	100			,, 70
4	Eaves, 8 in			2.5	,, 71
2	Hinges				,, 72
1	Catch			3.4	,, 95

#### COMPOSITION OF ROOF FRAME.

- 1. Study this diagram carefully and note how the brackets are put on—this is important.
- 2. The whole roof, with ridge tiles and eaves, should be bolted up before it is fitted on the framework.



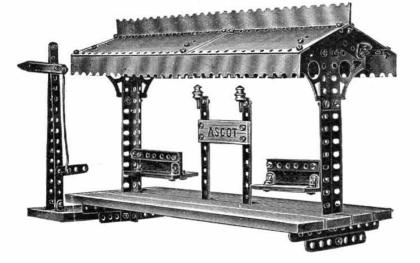

#### Island Station No. 183.


1	Post			 			No.	ΙI
2	Platforms						,,	23
2	,,	123			٠		,,	24
7	Slips, $3 \times 1$ in.				٠		1.2	25
72	Screws						,,	50
4	Angle bars, 8 in		¥3				,,	54
6	Strips, $2\frac{1}{2}$ in.						,,	57
4	,, 4, ,,				٠	*	,,	60
4	,, 5½,,	* -			٠		,,	61
4	,, I2½ ,,						,,	64
-4	Architraves						,,	65
22	Brackets			 *	ĸ		,,	66
4	Plates, $8 \times 3$ in.	• :			٠	٠	,,	67
1	Tile, $6\frac{1}{2}$ in.				٠	٠	**	69
1	_ ,, 8 ,,				•		,,	70
4	Eaves, 8 in.				٠		,,	71
2	Lamps			 Sa.			**	87


#### HOW TO FIT ON THE ROOF.

The  $12\frac{1}{2}$  inch strip below the platform must be fitted between the angle bars.

Note position of brackets for securing roof to frame.

The name of station can be painted on a wood slip to suit locality.

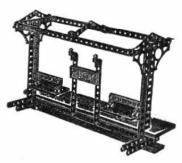

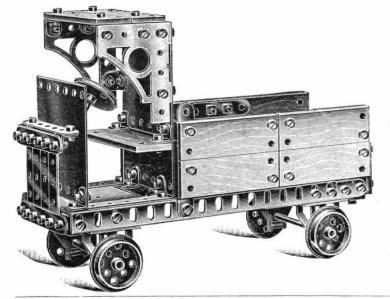


#### Motor Transport Wagon No. 202.


14 Slips, 3×1 in	No. 25	1 Plate, 8 × 2 in	No. 67
72 Screws	,, 50	3 Plates, $3 \times 3$ in	,, 68
2 Angle bars, 8 in.	,, 54	2 Hinges	., 72
8 Strips, 2 in.	,, 56	4 Trunnions	., = 74
$4,, 2\frac{1}{2},$	., 57	4 Wheels	,, 75
4 ,, 3 ,,	,, 58	ı Wheel	,, 76
$2, \dots, 3^{\frac{1}{2}}, \dots$	,, 59	2 Axles, 3½ in	., 77
2 Architraves	,, 65	$1, 2\frac{3}{4}, \dots$	,, 78
24 Brackets	,, 66	2 Collars	,, 82

# Stamp Hammer No. 193.

8 Slips, 3×1 in	No. 25	I Wheel		No. 75
54 Screws		2 Wheels		,, 76
2 Strips, 2 in.	,, 56	1 Axle, 23 in.		
$2, , 2\frac{1}{2},$	. 57	6 Collars	× ×:	,, 82
2 . ,, 3 ,,	,, 58	1 Handle	18. 65	., 83
4 ,, $5\frac{1}{2}$ ,,	., бі	10 Washers	(5.25)	,, 84
$3, 6\frac{1}{2},$	,, 62			,, 85
30 Brackets	,, 66	2 Knob screws		,, 92
4 Trunnions	,, 74	8 Wood screws		,, 97

Fitting Crank Arm.—A knob screw should be bolted through the pulley wheel, then a washer put on, then the crank arm and another washer, and lastly double nutted. It should be fitted to the beam in a similar manner. The table below shafting is supported on 2-in. strips, which cannot be seen in the illustration.

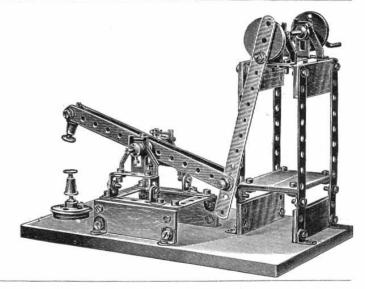

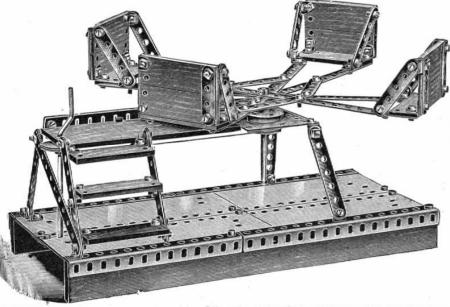


#### Roundabout No. 198.


				1	Vo.	]	No.
· 1	Floor.		1.0		9	1 Strip, 8 in	63
2	Platfor	ms			23	3 Strips, 12 in.	64
1	Slips			*	25	38 Brackets	66
95	Screws				50	4 Plates, 8 × 3 in.	67
2	Angle l	oars	$6\frac{1}{2}$	in.	53	i Plate, $3 \times 3$ in.	68
3	c."	,,	8	,,	54	ı Wheel	75
3	ourids.	2	in.		56	3 Wheels	76
8	,,,	21	,,		57	1 Axle, 3\frac{1}{2} in.	77
4	. ,,	3	,,		58	ı Collar	82
4	. ,,	$3\frac{1}{2}$	,,		59	ı Handle	83.
2		4	,,		60	2 Washers	84
3		$5\frac{1}{2}$	,,		61	6 Wood screws.	97
		8.5					50.50

#### Pit-Head Gear No. 203.

4	Side r	ails		***	No.	I	2 Plates, $8 \times 3$ in.		No.	67
	Slips				,,	25	3 ,, 3×3 .,	202	,,	68
	Screw				.,	50	I Tile, $6\frac{1}{2}$ in	* *	,,	69
2	Angle	bar	$s, 6\frac{1}{2}$	in.	,,	53	1 Hinge		,,	72
4		,,	8	3.1	2.5	54	2 Trunnions	500	2.5	74
8	Strips		in.		2.2	56	ı Wheel		2.3	76
8	,,	2 1/2	,,		1.5	57	2 Axles, $3\frac{1}{2}$ in.	5.25	15	77
3	,,	3	11		,,,	58	4 Collars		,,	82
3 5	,,	$3\frac{1}{2}$			, ,	59	1 Handle		,,	83
2		4	,,		,,	60	10 Washers	279	,,	84
4	227	$5\frac{1}{2}$	,,		> *	61	2 Buffers		,,	85
	2.2	61	,,		2.5	62	1 Coupling	5005	,,	86
4 5	2.2	8	11	3.00		63	2 Lamps	1.2	,,	87
3		122			2.2	64	ı Catch .		,,	95
4	Archit	_				65	2 Rods :.		,,	96
32	Bracke	ets			٠,	66	2 Wood screws		,,	97

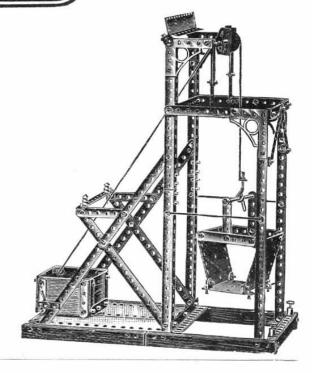


Realistic Railway Track No. 205.

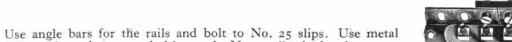




Shows how the rails are joined together.

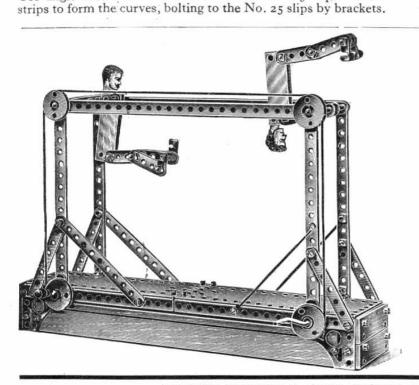

# Double Bar Performers No. 206.


					No.			No
	Platfor				23	12 Brackets		66
6	Slips				25	2 Plates, 8 × 3 ir	١.	6:
53	Screws				50	4 Wheels		76
4	Angle	bar	s, 8	in.	54	2 Axles, 3½ in.		7
8	Strips,	2	in.		56	. 5 Collars	100	8:
8	,,	$2\frac{1}{2}$	,,		57	1 Handle		8;
2	,,	3 1/2	,,		59	8 Washers		8.
2	,,	4	,,		60	1 Lamp	1.	87
2	,,	$\frac{5^{\frac{1}{2}}}{8}$	,,		61	ı Knob		92
4	,,,	8	,,		63	4 Catches		95
4	,,	$12\frac{1}{2}$	,,		64	2 Posts		96
4	Archite	rave	es		65	4 Wood screws		97

Heads of men cut from cardboard. A slit in wood should be made to wedge heads in.

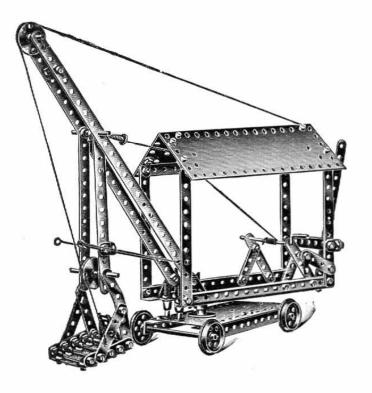

#### Steam Navvy No. 208.

78	Screws			* *			No. 50
2	Angle Bars,	$6\frac{1}{2}$ in.				* *	,, 53
2	22 22	8 ,,					,, 54
2		12,,					,, 55
3		n					,, 56
9	$,, 2\frac{1}{2},$	,				* *	., 57
2	$,, 3^{\frac{1}{2}},$	,	253.50		****	*(1.0)	,, 59
1	,, 4 ,	,					,, 60
4	$\begin{array}{cccccccccccccccccccccccccccccccccccc$	,		* (*)			,, 61
3	$,, 6\frac{1}{2},$	,	* *				,, 62
2	$,, 12\frac{1}{2},$	,					,, 64
18	Brackets						,, 66
3	Plates, 8×3	3 in.		4.1			,, 67
2	" 3×3	3 ,,					,, 68
4	Trunnions						,, 74
4	Wheels						,, 75
4	,,						,, 76
2	Axles, $3\frac{1}{2}$ in			4.6			
1	$,, 2\frac{3}{4},$	2. 6.	16.741				,, 77 ,, 78
£	$,, I^{\frac{1}{2}},$						' ,, 79
5	Collars		0.10				,, 82
1	Handle						,, 83
9	Washers		2.7	7.0			,, 84
3	Buffers	* *					,, 85
I	Coupling	* *		2.0			,, 86
1	Catch			75. 65			,, 95
2	Rods						,, 96

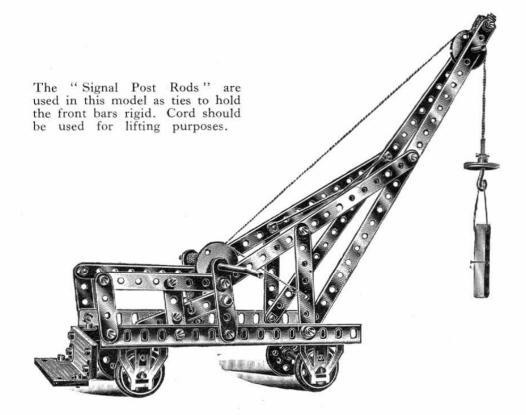

# Crane on Wheels No. 190.

2	Slips, 3 × 1 in		No.	25
			,,	50
2	Screws Angle bars, 8	in	,,	54
	Strips, 2 in.	* *	,,	56
2	$,, 2\frac{1}{2},$		,,	57
1	,, 3 ,,		,,	58
2			,,	59
2			1.1	60
2	,, 8 ,,		1,	63
2				64
7	Brackets		12	66
	Plate, 8 × 3 in		,,	67
4	Trunnions		,,	74
4	Wheels		,,	7.5
	,,		,,	76
2	Axles, $3\frac{1}{2}$ in.		,,	77
1	$,, I_{\frac{1}{2}},$			78
1	Collar		,,	82
1	Handle		,,	83
ΙI	Washers		,,	84
1	Coupling		,,	85
1	Knob screw		,,	92
2	Rods		,,	96



#### MOTOR CAR BUILDING WITH PRIMUS ENGINEERING.

A motor-car is perhaps the most interesting and instructive model that can be built, and this can easily be done by anyone who has become acquainted with the possibilities of Primus Engineering.


The models illustrated were constructed by a lad of thirteen years, following the method adopted in building real cars—first, the chassis (to which any body can be attached); then, as standard types, the W.D. Lorry and a smart coupé. These will give any young engineer the idea; and, having constructed the chassis, he will find it quite a simple matter to erect thereon bodies of any description.

#### The Steering Gear.

This must be built on to the frame before the bonnet is fitted.

1. Lay two  $2\frac{1}{2}$ -in. metal strips at angles as shown, and secure.


- 2. Place a  $2\frac{1}{2}$ -in. metal strip across the base of the triangle, and secure to brackets.
- 3. Fix No. 160 gear wheel to 1½-in. axle, and pass through the ends of the 2½-in. strips. Place washers on and secure with a double-tapped collar.
- 4. A  $3\frac{1}{2}$ -in. axle is then used for the steering pillar, which is passed through the centre hole of the dash plate and the  $2\frac{1}{2}$ -in. metal strip.
- 5. Secure with a collar, and use washers to adjust the bevel gear so that it engages in the large cog.
- 6. Fix the wheels to 2\frac{3}{8} in. tapped axles and screw into the doubled-tapped collar.

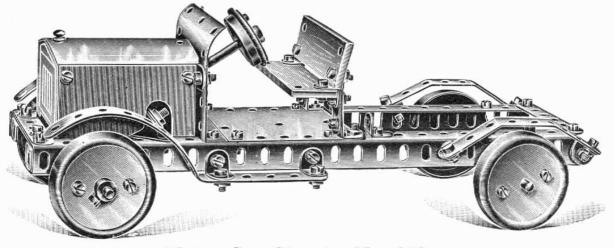

#### Motor-Car Chassis No. 209.

2	Slips			No.	25	2	Trunnions		No.	74		Extra Parts	s Req	uire	d.
71	Screws			,,	50	I	Wheel		,,	75					
2	Strips,	2	in.	,,	56		Wheels				2	Angle Bars,	12 in.	No.	5.5
4	,,	$2\frac{1}{2}$	,,	,,	57	1	Axle Rod,	$3\frac{1}{2}$ in	. ,,	77	I	Collar		,,	82
1	Strip,	3	,,	,,	58	1	,, ,,	$1\frac{1}{2}$ ,,	,,	79	I	15-in. Cog		,,	160
	Strips,						Collars					Bevel Gear			
	,,						Washers				1	Axle, 6 in.		,,	165
2	,,	8	,,	,,	63		Buffers		,,			Axles, 23 in			
	Bracket					ī	Knob Scre	W	,,	92	1	Collar			
	Plates,								5.50					,,	

The wheels are constructed with No. 76-pulleys, to which are bolted small tin box lids (powder boxes about 2 in. diameter). The bonnet is made by bending a No.  $68\ 3\times3$  plate for the top and using cardboard for the front and sides. The dash is also made by bending a No.  $68\ 3\times3$  plate.

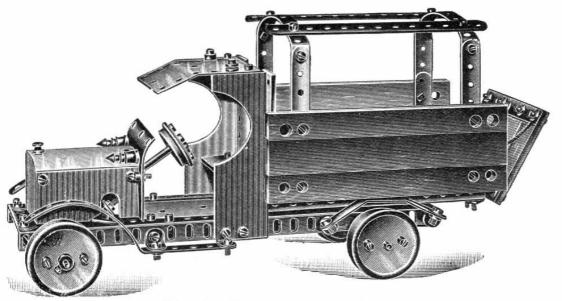


#### W. D. Wagon No. 210.

			0		
	No.	1	No.	No.	No.
4 Grooved Rails	I	2 Angle bars, 6½ in		60 4 Brackets	66
2 Truck Sides	17	4 Strips, 2 in.	56 2 Strips, $5\frac{1}{2}$ in.	61 I Plate, 8 × 3	67
6 Wood Slips	25	$2, 2\frac{1}{2}, \ldots$	$57   2   ,,   6\frac{1}{2}   ,,$	62 2 Hinges	72
49 Screws	50	4 ,, $3\frac{1}{2}$ ,,	59 2 ,, 8 ,,	63 2 Lamps	87

Extra parts required: 2 Angle bars, 6½ in. No. 53 1 Strip, 2 in. No. 57

The driver's seat is made by bending an 8×3 plate as shown in illustration. Cut the sides out of cardboard. The body overlaps the wheels and is fitted by using two  $6\frac{1}{2}$  in. angle bars on each side.

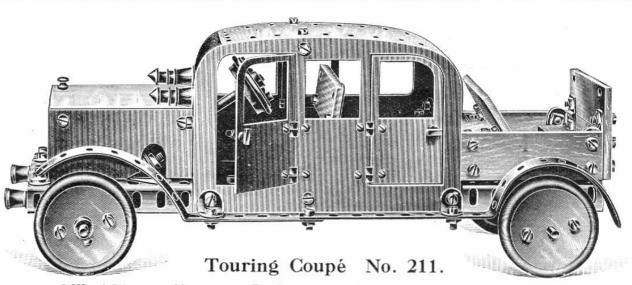

.. No. 66 4 Hinges No. 72 ,, 87 8 Wood Slips ... No. 25 12 Brackets 2 Plates, 8 × 3 ... 34 Screws . . ,, 50 2 Lamps Extra parts required:

8 Hinges No. 68 2 Turnbuttons No. 89

2 Door Handles ,, 88 16 Screws ..., 91
Remove from chassis back mudguards and 3 × 3 plates in the floor, fix 8 × 3 plate to form whole floor, replace seat. The sides and doors of coupé are cut from cardboard, the opposite side being without doors. The top and back is formed out of one  $8 \times 3$  plate; the boot is fixed to the frame by means of brackets.


The back seat in the closed body is fitted to the 8 × 3 plate forming the top and back by two brackets. This should be done before the sides are fitted on.

The back seat in the boot is fitted to the wood slips forming the sides by brackets, the wood slip at back being secured to the base.




# Fire Escape No. 207.

8	Slips 3>	(I in.	No.	25	2 Pla	ates, 3 ×	3 in.	No	. 68
	Screws		,,	50		unnions		,,	74
	Angle ba		. ,,	54	4 W	heels		,,	75
10	Strips,	2 in.	,,	56	3	,,		,,	76
3 6	,,	$2\frac{1}{2}$ ,,	,,	57		le Rods,	$3\frac{1}{2}$ in.	,,	77
6	. ,,	3 ,,	,,	58				,,	82
2		$3\frac{1}{2}$ ,,	**	59		ashers		,,	84
4	. ,,	4 ,,	,,	60	11.7	iffers		,,	85
2		$5\frac{1}{2}$ ,,	19	61	2 Ro			3.5	96
2	,,	$6\frac{1}{2}$ ,,	,,	62		Extra	Parts		
4	,,	8,,	,,	63	14 Ti	e Rods		No.	155
	Brackets		,,	66	2 Str	rips, 3 in		,,	58
1	Plate, 8	×зin.	• • •	67	1 Sti	rip, 4	,,	,,,	60

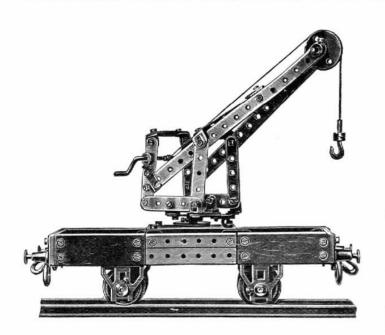


# Crane Truck No. 189.


6 Slips 3×1 in.	No.	25	4 Wheels	* *	No.	75
63 Screws	,,	50	2 ,,		,,	76
2 Angle bars, 8 in.	,,	54	2 Axles, $3\frac{1}{2}$ in.	* *	,,	77
5 Strips, 2 in.		56	1 Axle, 1½ in.		,,	79
$8$ ,, $2\frac{1}{2}$ ,,	2.1	57	8 Collars			82
2 ,, 4 ,,	,,	60	1 Handle		.,	83
2 ,, 4 ,, 2 ,, 8 ,,		63	12 Washers		,,	84
19 Brackets		66	4 Buffers		,,	85
3 Plates, 3 × 3 in.	,,	68	2 Couplings	* *	33	86
4 Trunnions		74	1 Knob screw		,,	92
	16.2	r E	1 Catch		,,	95

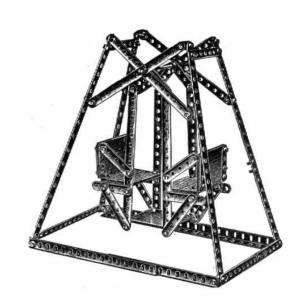


# Swing No. 199.

	Slips				25	2 Strips, $5\frac{1}{2}$ in.	No.	61
	Screw			,,	50	$4$ ,, $6\frac{1}{2}$ ,,	,,	62
	Angle			. ,,	53	6 ,, 8 ,,	,,	63
2	Strips	,,	8 ,,	12	54	3 ,, $12\frac{1}{2}$ ,,	,,	64
	Strips	, 2 ir	n.	,,	56	34 Brackets	,,	66
6	11	$2\frac{1}{2}$ ,	,	,,	57	1 Plate, $3 \times 3$ in.	,,	68
4	,,	3,	,	3.7	58	1 Axle, 3½ in	,,	77
3	3.3	3 2 1	,	,,	59	6 Collars	,,	82

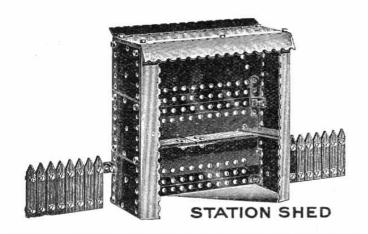


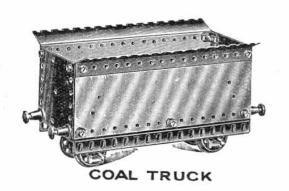




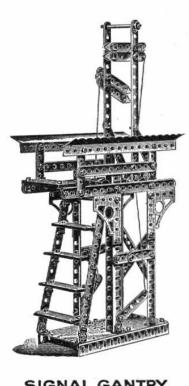



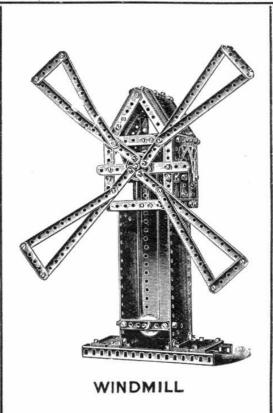

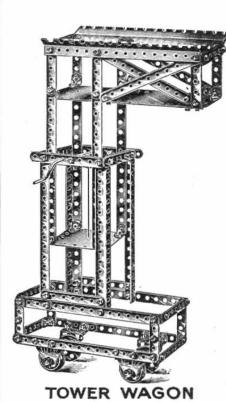


THESE MODELS ARE MADE WITH A No. 3 OUTFIT.

# These models are made with PRIMUS ENGINEERING Nº 4 OUTFIT

Models shown on pages from No. 27 can also be made with this outfit.


# Passenger Coach No. 254.


- 1. Make up the whole metal frame and be careful in fixing brackets.
- 2. Fit on side rails, one buffer block and one end.
- 3. Slide windows and doors in the grooves—put in floor.
- 4. Fix on second buffer block and then the second end. The screw for fastening this should be put in, and the nut carefully adjusted inside by opening the two doors and sliding the windows along to give space. The floor is fitted in same as in Heavy Goods Truck, No. 116, page 44.

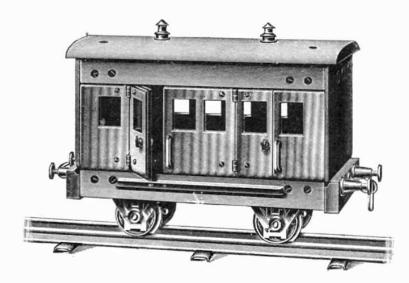

2	Side rails			 	No. 1	
2	,, ,,			 	,, 2	
2	Carriage ends			 	,, 3	
2	Blocks			 	,, 4	
2	Windows			 	,, 5	
2	,,			 	,, 6	
4	Doors			 	., 7	
2	Central Windo	WS		 	,, 8	
1	Floor			 	,, 9	
I	Roof			 	,, IO	
40	Screws			 	,, 50	
2	Angle bars, $6\frac{1}{2}$	in.		 	,, 53	
3	Strips, 21 in.			 	,, 57	
4	$,, 3\frac{1}{2},$		* *	 	,, 59	
2	$,, 6\frac{1}{2},$			 	,, 62	

14	Brackets				 No. 66
8	Hinges				 ., 73
4	Trunnions				 ., 74
4	Wheels		* *	* *	 ,, 75
2	Axles, $3\frac{1}{2}$ in.				 ,, 77
4	Collars		* *	*11.4	 ,, 82
4	Washers				 ,, 84
4	Buffers				 ,, 85
2	Couplings		* *		 ,, 86
2	Lamps				 ,, 87
4	Handles		* *	***	 ,, 88
4	Turnbuttons				 ,, 89
4	Side rails		,		 ,, 90
16	Screws and no	its			 ,, 91

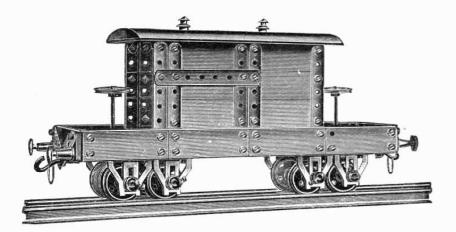

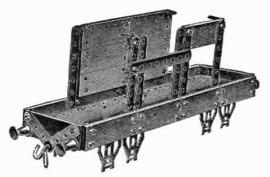



Fit the No. 25 slips inside the frame; this is important, as the roof screw-holes are 2-in. centres, and by fixing the brackets inside the wood body at back this width will be found exact. Washers are used between the brackets and  $3\frac{1}{2}$ -in. strips in the front to adjust the width.

The base is composed of one 8-in. plate and two 3-in. plates bolted together.

# Double Brake Van No. 256.

1	Roof			No.	IC
22	Wood slips, $3 \times 1$ in.				25
84	Screws	2.0		,,,	50
2	Angle bars, 12 in.			9.3	55
4	Strips, 2 in	* *		,,,	56
10	$,, 3^{\frac{1}{2}},, \cdots$	2.50		3.7	59
2	,, 4 ,,			.,,	60
12	Brackets			,,	66
1	Metal plate, 8×3 in.			,,	67
2	,, plates, $3 \times 3$ ,,			,,	68
8	Trunnions			,,	74
8	Flanged wheels			12	75
2	Grooved wheels			12	76
4	Axle rods, $3\frac{1}{2}$ in.			,,	77
2	$,, ,, 2\frac{3}{4},,$			,,	78
12	Collars				82
12	Washers '		2.5	2.2	84
4	Buffers			,,	85
2	Coupling hooks			**	86
2	-			.,	87
17.576					

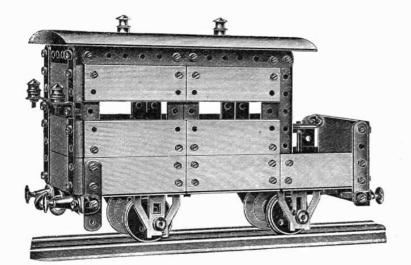

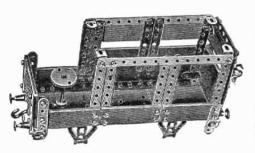



Build the chassis like Truck No. 113 on page 44. The No. 25 slips are fitted outside the frame, and washers are used to adjust the brackets to fit roof.

The base plates are bolted on to the angle bars **below** and secured by the screws that fix the trunnions.

# Single Brake Van No. 257.

I	Roof						No.	10
19	Wood slips, 3 ×	ıi	n				,,	25
72	Screws						,,	50
2	Angle bars, 8 in							54
4	Strips, 2 in.						,,	56
2	$,, 2\frac{1}{2},,$						,,	57
2	,, 3 ,,						,	58
12	$,, 3\frac{1}{2},,$					٠	٠,	59
3	,, 4 ,,						2.2	60
2	$,, 6\frac{1}{2},$						* *	62
16	Brackets						1.5	66
3	Metal plates,	3 ×	3 in				1.1	68
4	Trunnions						* *	74
4	Flanged wheels						5.25	75
1	Grooved wheel	4					11	76
2	Axles, $3\frac{1}{2}$ in.	1.7		. ,				77
1	Axle, $2\frac{3}{4}$ in.				4.5		1785	78
6	Collars							82
18	Washers				17.4			84
4	Buffers						1.5	85
2	Coupling hooks					*	**	86
4	Lamps						2.5	87

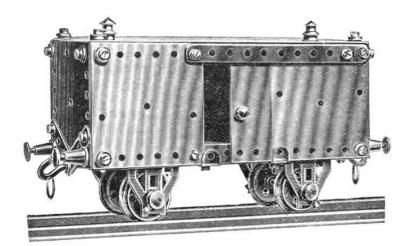

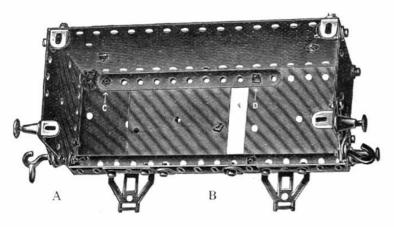

#### Armoured Truck No. 261.

#### WITH SLIDING DOOR.


~ ~		* *					***	
38 Screws		No.	50	2	Axles, 3½ in.	35. 5	No.	7
2 Angle bars		,,	54	4	Collars			8
4 Strips, 2 i		,,	56		Washers			8
4 ,, $5\frac{1}{2}$	,,	,,	61	4	Buffers		,,	8
16 Brackets		,,	66	2	Couplings	9.2	,,	8
2 Plates		,,	67	2	Lamps			8
8 ,,			68	2	Knobscrews		13	9
4 Wheels		,,	75					


- 1. Fix Trunnions on angle bars.
- 2. Fix up the two ends, fix buffers and a washer beneat each; see that the brackets are right way; put two washer beneath each screw in the corners; then fit 2 in. strips an coupling hooks.
- 3. Fit on the plates for one side, and note when fixing th  $5\frac{1}{2}$ -in. strips one goes inside and one out, and washers mus be put between the inside strip, at C and D, and the  $3 \times$  in. plates, so as to allow for the door to slide in, also washer must be put between plates and angle bars at A and B.
- 4. Fix on roof with lamps, and lay floor loose inside.
- 5. Fit on second angle bar and remainder of 2-in. side The second door can then be slipped in the groove ansecured by the two angle brackets. Knob screws fo handles can be fixed last, and the floor will rest on the screw of buffers. Wheels are fitted as in other models.

# Automatic Hammer in Shed No. 265.

2	Slips						1.7	No. 25
70	Screws	* *		9.74	10.4		200	,, 50
5	Strips,	2 in.			***	***	*00*	,, 56
3		$2\frac{1}{2}$ ,,	* *	* *	****	***	100	,, 57
1	Strip,	3 ,,	* *					,, 58
1	,,	$3\frac{1}{2}$ ,,			2.7			,, 59
2	Strips,	$5\frac{1}{2}$ ,,				* *	600	_,, 61
4	,,	$6\frac{1}{2}$ ,,		* *	***	***	*:11	,, 62
24	Bracket		* *:	* *	*50*	*0*	#30#	,, 66
4	Plates,	$8 \times 3 i$	n.		202	10.5		,, 67
7	,,	3 × 3	, ,					,, 68
1	Ridge, 8	8 in.			* *	505	515	,, 70
3	Wheels						* *	,, 75
2	,,				* *		200	76
1	Axle, 3	in.	* *		2.7	1.5	4004	., 77
1	,, 2			* * :		***	* 1	,, 79
7	Collars	* *	* *	* *	* * *	101	0.00	,, 82
1	Axle		*	* *		202		,, 83
19	Washer	S						,, 84

The hammer works on a similar principle to that illustrated on page 42.

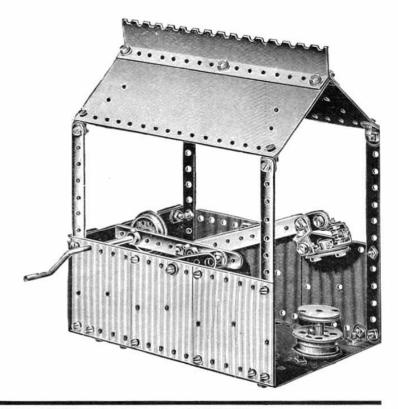


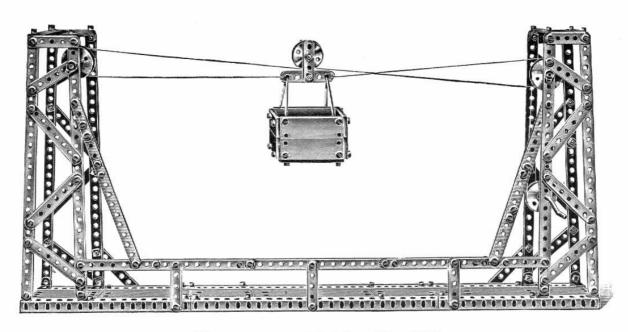

# Transporter Bridge No. 262.

	Slips, 3					No.	25	3	Strips,	4	in.			No.	60	4	Wheels .				No.	75
144	Screws					,,	50	3	,,	$5\frac{1}{2}$	,,			,,	61	2	,, .	21			,,	76
4	Angle b	ars,	8	in.	S 40	,,	54	3	,,	$6\frac{1}{2}$	,,		***	,,	62		Axles, $3\frac{1}{2}$ in				,,	77
	,, ,,		12	2 ,,	* *	,,	55	6	,,	8	,,			,,	63		Collars .		2.5		1.5	82
12	Strips,	2	in.		98.50	,,,	56	3	,,	12	,,		* *	,,	64				12.5	* *	.,,	83
8	,,	$2\frac{1}{2}$	,,			21	57		Bracke					,,	66		Washers .				,,	84
7	,,	3	,,			,,	58	3	Plates,	$8 \times$	3 in.		9.40	2.3	67		Knob screv		2.5		,,	92
14	2.5	$3\frac{1}{2}$	,,		* *	1.9	59	2	,,	3 ×	3 ,,	2.5	* *	2.2	68	2	Signal rods	6		11.5	12	96


Use cord for working this model.

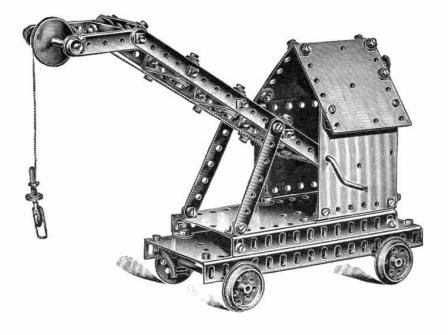


# Crane Truck No. 315.

72	Screws				No. 50
2	Angle bars, 6	in.			,, 53
8	,, ,, 8	,,			,, 54
8	Strips, 2 in.		* *		,, 56
5	$,, 2^{\frac{1}{2}},$			(0.000)	57
2	$\frac{3^{\frac{1}{2}}}{8}$	*.*	***	200	,, 59
2					,, 63
39	Brackets		4.4		,, 66
1	Plate, $8 \times 3$ in				,, 67
7	Plates, $3 \times 3$ in				,,. 68
4	Wheels	****			,, 75
1	Wheel	***			,, 76
2	Axles, $3\frac{1}{2}$ ,		***		,, 77
1	$^{,,}$ $^{2\frac{3}{4}}$ $^{,,}$				,, 78
3	Collars		10		,, 82
32	Washers				., 84
1	Coupling				,, 86

Use cord for working.

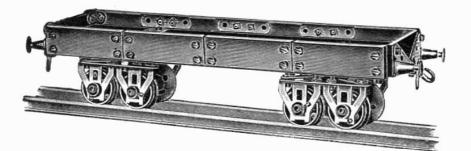

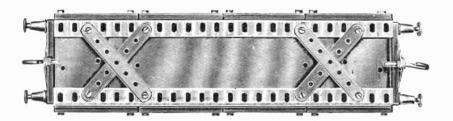

# Express Truck on Bogies No. 258.

10	Slips, $3 \times 1$ in.				20		¥1	No.	25
	(3)							,,	50
2	Angle bars, 12 in.		*2		*		*3	1.1	55
10	Strips, 2 in.		6				7.5	**	56
4	,, 3 ,,				*			٠,	58
8	3, 3, 3, 3, 3, 3, 3, 3, 3, 3, 3, 3, 3, 3		**		2			,,	59
8	Brackets		¥2	3.9			*5	4.4	66
I	Plate, $8 \times 3$ in.					ì	,	, .	67
2	Plates, $3 \times 3$		1		¥2	ì		**	68
8	Trunnions	34	¥2	79	¥1		6		74
8	Wheels								75
	Axles, 23 in.							12	78
	Collars		2					99	82
	Washers						2	, ,	84
I							97		85
	Couplings							,,	86
	Knobs		*				*5	,,	92







The Bogie frame is made up with two 3-in. strips for sides and two  $3\frac{1}{2}$ -in. strips for cross-pieces; washers are set on the screws at opposite corners to level up the cross-strips.

It is secured to the truck through the central holes of end base plates by means of knob screws double nutted, and washers are used on the screws to provide clearance for the truck to swing on the bogies.


# Express Coal Truck on Bogies No. 259 (All Metal).

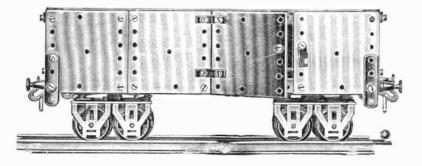

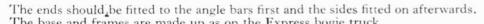


The base and frames are made up as on the Express bogie truck.

Washers are again important, and two each are used on the corner screws at ends and lower screws at sides, beneath the buffers and on the knob screws and bogie frames.

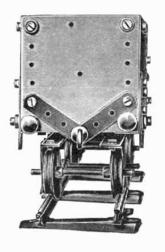

66	Screws		No.	50	14 Metal plates, 3 ×	3 in.		No. 68	28	Washers	414	* *	No.	84
2	Angle bars, 12 in.		,,	5.5	4 Straight hinges					Buffers				
10	Metal strips 2 in.			56	8 Trunnions		× 40	74		Coupling hooks		* *	* * *	86
4	,, ,, 3 ,,	9.6		58	8 Flanged wheels	* *		75		Knob screws		* *		
- 8	,, ,, 3½		, ,		3 Axles, 2¾ in.				2	Catches		4.1	3.4	95
8	Brackets			66	8 Collars			,, 82						

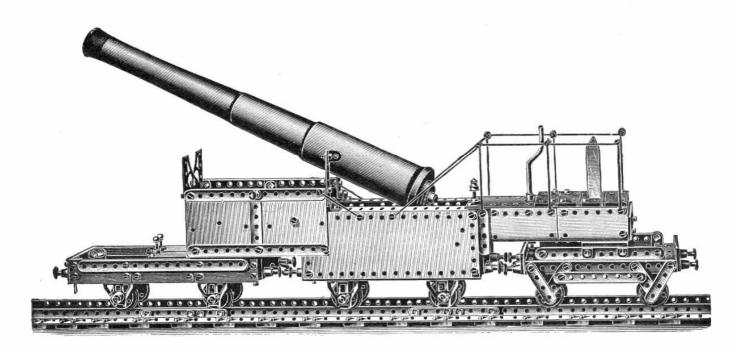

# Long Range Naval Gun on Railway Trucks No. 270.


10 /	Wood	slips.	2 ×	ı in.	2.2				No.	25	4	Axles, 31 in.			* *			No.	. 77
	Screws							4.4	,,	50	13	Collars						٠,	82
0	Angle		6 i	n.	v.v.			2.40	,,	53	1.	Handle						, ,	83
4	,,		0						,,	54	14	Washers				1.5		,,	.84
2	,,								,,	55	4	Buffers			9.0			2.5	85
10	Metal		2	in.		***			,,	56	3	Couplings			14. 4			3.1	86
4	,,	12	$2\frac{1}{2}$	2.5	***	**			,,	57	I	Lamp				3.6	(6)	1.2	87
8		12	3	,,					,,	58	3	Knob screws		* *			*:	5.9	92
2	12	,,	31	, ,		433		3.4	,,	59	2	Signal rods	S 60	* *	(5.5)	* *		* *	96
2	,,	,,	$5\frac{1}{2}$	,,				9.00	,,	61	2	Wood screws		* *	* *			1.5	97
4	,,	21	$6\frac{1}{2}$	,,	2%			* *	,,	62									
2	,,	21	8	,,	100	***			1.1	63		E	xtra	parts	requir	red.			
	Archit		20			503			,,	65									
	Bracke								* 5	66	2	Axles, $3\frac{1}{2}$ in.		* *	9. 5.	2. 6		2.2	61
4	Metal	plates	, 8	$\times$ 3 in	١.			* *	11	67	3	Collars		* *	25. 80	2.5		, ,	82
ΙI	,,,	, ,,	3	×3 ,		*: *		* *	3.5	68	8	Buffers		* *				1.5	85
	Trunn					*2.8	* *	2.3	120	74	2	Wire stays			* *	2.2			154
	Flange				* *	***			,,,	7.5	10	T 22 22 1			2.0				155
4 I	Pulley	whee	s						,,	76	1	Pulley wheel		* *	34.00	08.80	36.67	3.7	158

- 1. Make each truck separately and then couple up.
- 2. The fitting platform is made by bending the No. 68 plates.
- 3. The gun can be made of paper or a piece of wood can be turned to shape; fix with wood screws.
- 4. By means of a cord attached to the gun, passing through a bracket in the base of large truck, and thence to the winding handle the gun can be elevated to any desired angle.

#### Parts for Building Railway Track.

	Wood slips, 3 × 1 ir						Angle bars, 12 in.				
	Screws					4	Metal strips, 4 in.	 	9.30	08-80	,, 60
2	Angle bars, 8 in.	 	 	,,	54						

# RIMUS ENGINEER

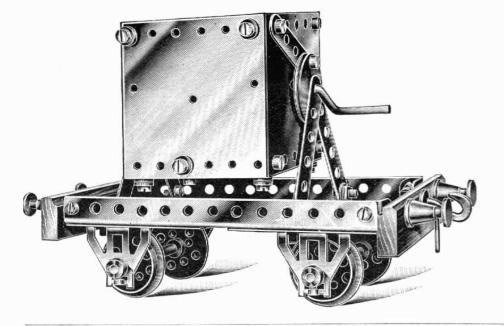

#### Tipping Truck No. 255.

2	Blocks			0				No.	4
	Screws							,,	50
	Angle bars		$\frac{1}{2}$ in.					,,	53
	Strip, 2 in		(0)	0			×	,,	56
	Strips, 3 ir		22	٠	÷	٠		,,	58
	Brackets			,		٠	,	,,	66
	Plates		(4	ď	٠			,,	68
	Trunnions		99				×	,,	74
4						٠		,,	75
	Wheel				٠		٠	,,	76
	Axle rods,	$3\frac{1}{2}$	in.					,,	77
		٠.	93					,,	82
1	Handle		23					,,	83
	Washers							2.2	84
4	Buffers							,,	85
2	Couplings							12	86

59


77 82

83


86

96

#### Viaduct Bridge No. 268.

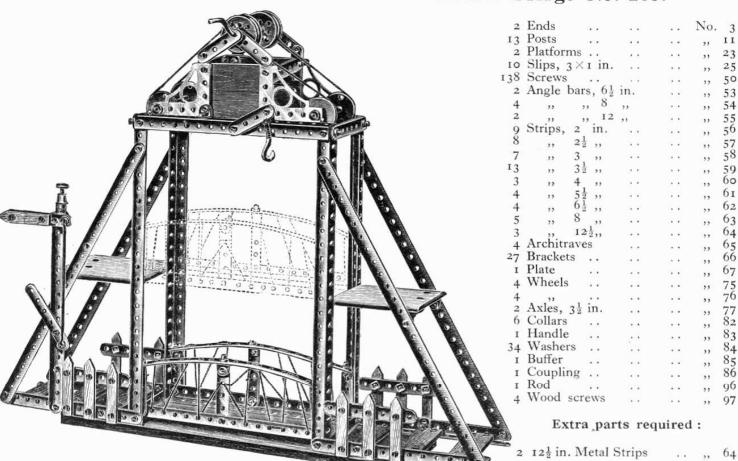

The cord is gripped between the two sets of flanged wheels at the top. The handle axle must always be turned to the right to raise the bridge.

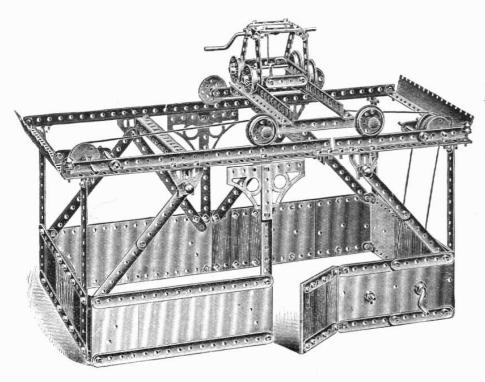


# Overhead Travelling Crane No. 267.

	No.		1	No.
12 Slips, $3 \times 1$ in.	25	8 Plates		68
44 Screws		2 Eaves, 8 in.		71
2 Angle bars :	-	2 Hinges		72
$6\frac{1}{2}$ in	53	4 Trunnions		74
4 ,, 8 ,,	54	8 Wheels		75
2 ,, 12 ,,	55	4 ,,		76
10 Strips, 2 in.	56	2 Axles 3½ in		77
$\begin{array}{cccccccccccccccccccccccccccccccccccc$	57	$5$ ,, $2\frac{3}{4}$ ,,		78
	58			82
$14 ,, 3\frac{1}{2} ,,$	59			83
3 ,, 4 ,,	60	36 Washers		84
4 ,, $5\frac{1}{2}$ ,,	61	4 Buffers		85
$\begin{array}{cccccccccccccccccccccccccccccccccccc$	62	1 Coupling		86
6 ,, 8 ,,	63	4 Lamps		87
$3$ ,, $12\frac{1}{2}$ ,,	64	I Catch		95
4 Architraves 31 Brackets	65 66	Extra par	t	:
2 Plates	67	1 Handle		83


Collars of buffers are used on lower

winch gear.
Screws of buffers are used on travelling trolley.

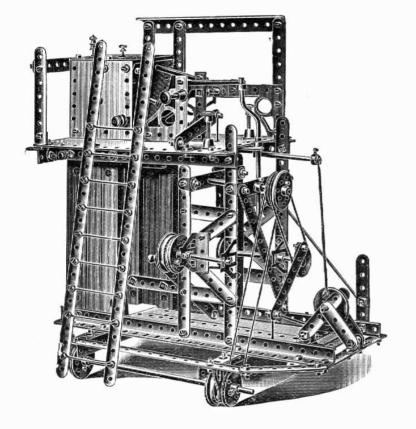

# Gas Regenerator No. 269.


	No.		No.
4 Side rails	1	4 Plates, $3 \times 3$	68
2 Truck sides	17	8 Trunnions	74
144 Screws	50	8 Wheels	75
2 Angle bars, $6\frac{1}{2}$ in.	53	4 ,,	76
4 ,, ,, 8 ,,	54	4 Axles, 3½ in.	77
2 ,, ,, 12 ,,	55	$3, 2\frac{3}{4},$	78
9 Strips, 2 in	56	$I = 1, I^{\frac{1}{2}},$	79
6 ,, $2\frac{1}{2}$ ,,	57	16 Collars	82
6 ,, 3 ,,	58	ı Handle	83
$7 , 3^{\frac{1}{2}}, \cdots$	59	13 Washers	84
3 ,, 4 ,,	60	4 Buffers	85
$4 ,, 5\frac{1}{2} ,, \cdots$	61	3 Lamps	87
$3$ ,, $6\frac{1}{2}$ ,,	62	3 Knob screws	92
3 ,, 8 ,,	63	2 Rods	96
$2$ ,, $12\frac{1}{2}$ ,,	64	6 Wood screws	97
4 Architraves	65	Extra Parts	:
31 Brackets	66	4 Collars	82
4 Plates, $8 \times 3$	67	2 Axles, 8 in.	166

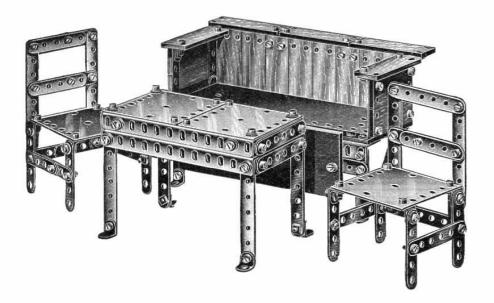

# Smoking Lounge No. 309.

# LOUNGE, TABLE AND TWO CHAIRS.

1	Floor							No.	9
17	Slips, 3	$\times$ 1	in.	*				,,	25
	Screws							,,	50
4	Angle b	ars						,,	52
2	,,	,,			4			,,	54
16	Strips,	2	in.				٠	,,	56
1 5 8	,,	$2\frac{1}{2}$	,,					,,	57
	,,	3	,,	v.		*	¥	,,	58
5	>>	3 1	31				×	,,	59
3 48	,,,	4	5.3	100				,,	60
48	Bracket	S						2.2	66
1	Plate							,,	67
4	Plates							,,	68
24	Washer	s .			*		٠	,,	84

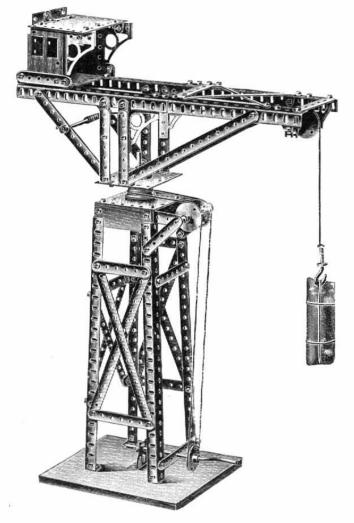


#### Girder Crane No. 266.

2	Windows		* *	***			No.	8
2	Slips	* *		***		****	,,	25
86	Screws						,,	50
2	Angle bars, 65	in.		4.6			1.5	53
2	., ,, 8	,,		14. 41			1.5	54
2	,, ,, 12	,,	3.4	2.20			,,	55
6	Strips, 2 in.	0. 2	9.40				,,	56
2	$\frac{1}{1}$ , $2\frac{1}{2}$ ,			* *			11	57
4	,, 3 ,,		A	26. 63	* *			58
4 8	$3\frac{1}{2}$						2.1	59
3	,, 4 ,,		9.4		9.0		,,	60
2	$,, 5\frac{1}{2},,$	378	7. 0				,,	61
2	$,, 6\frac{1}{2},$	26.0		52 (6)	16. (4)			62
6	., 8			19 90			,,	63
2	$,, I2\frac{1}{2}.,$		34.540		2. 40	25. 51		64
4	Architraves					2.2	,,	65
26	Brackets				14. 30	S 70	.,	66
7	Plates				2.40	9.40	,,	68
3	Trunnions						,,	74
4	Wheels	****					**	75
3	,,							76
3	Axles, $3\frac{1}{2}$ in.							77
11	Collars	200		1.2	12.4			82
1	Handle		151	419			1.5	83
20	Washers		6.76	6.3			**	84
1	Coupling Hoo		2005	****	2.	41.	12	86
4	Screws and nu	its	200	7.7	100	20	11	91
2	Rods		1000 4000	1000	915	1.00	1.1	96
6	Wood screws		7502				1.5	97
		Till	5005	5/17	10.0	1,03	1.7	11


#### Extra part required.

I Handle .. .. ,, 83


This model should be fixed to a wood base by means of No. 97 wood screws.

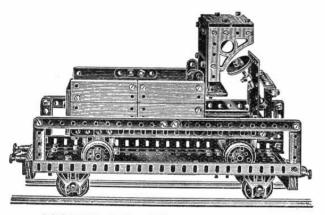


MOTOR TRANSPORT TRUCK

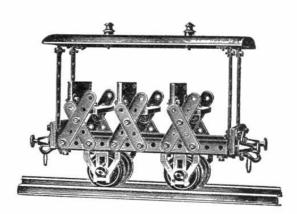

TOURIST CAR

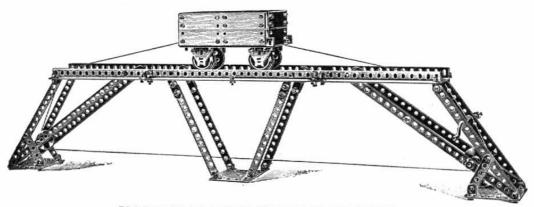

OVERHEAD TRAVELLING TRUCK

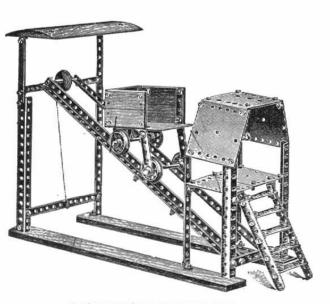

MOUNTAIN RAILWAY




**ROCKING CHAIR** 

# These models are made with


# PRIMUS ENGINEERING

Nº5 outfit

Models shown on pages from No. 27 can also be made with this outfit.

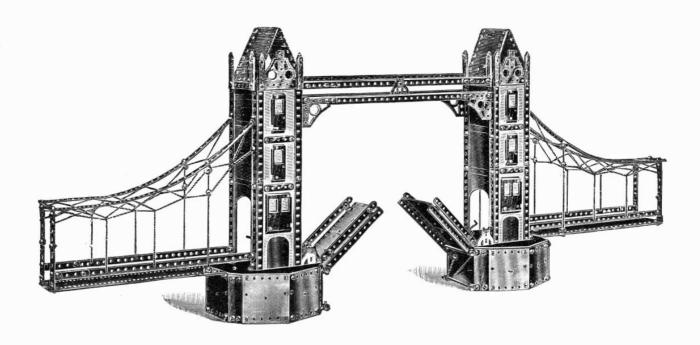



# Tower Bridge No. 365.

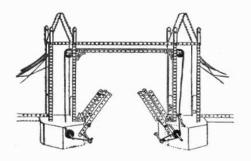

No.	No.	No.
4 Carriage doors 7	4 Strips, $5\frac{1}{2}$ in 61	12 Collars 82
2 Central windows 8	$4$ ,, $6\frac{1}{2}$ ,, $62$	1 Handle 83
16 Railings 11	10 ,, 8 ,, 63	24 Washers 84
8 Wood slips 25	$3$ ,, $12\frac{1}{2}$ ,, $64$	12 Door screws 91
310 Screws 50	8 Architraves 65	4 Rods 96
4 Angle bars, 6 in. 52	76 Brackets 66	4 Wood screws 97
8 ,, ,, 8 ,, 54	7 Plates, $8 \times 3$ in. 67	
2 ,, ,, 12 ,, 55	14 ,, 3×3 ,, 68	Extra Parts.
12 Strips, 2½ in. 57	8 Trunnions 74	2 Trunnions 74
6 ,, 3 ,, 58	4 Grooved wheels 76	4 Wire stays 154
$14$ ,, $3\frac{1}{2}$ ,, $59$	4 Axles, $3\frac{1}{2}$ in	2 Axles, 8 in 166

Buttresses should be built first; pulley wheels for raising should be fitted in towers before cardboard fronts are fixed. The windows on the side of the towers are screwed on to the card sides. Card can be cut for top of buttresses.

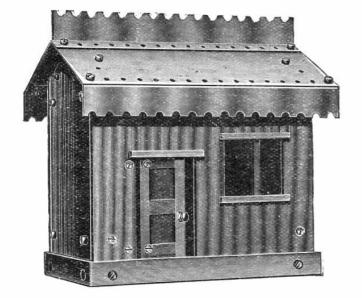

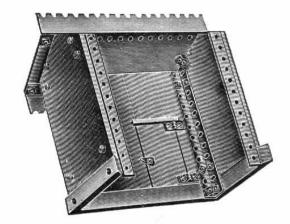

# Wood Station House with Metal Roof No. 302.


2	End rails of Hous	e					No. 12
2	Side rails ,, ,,						., 13
2	House sides		27.50	2. 21	2. 25		,, 14
4	Window sills						,, I5A
1	House, back	14.4	4.6	8.2	112		,, I5B
1	,, front		9.4				,, 15F
2	Sash bars	0.00					,, 15D
2	Doors				26. 67		,, 16
2	Lintels						,, 16A
2	Window glass					12 A1	,, 26
48	Screws						,, 50
4	Angle bars, 6 in.						,, 52
4	Brackets						,, 66
2	Plates, $8 \times 3$ in.						,, 67
ī	Ridge, 8 in					9.1	,, 70
2	Eaves, 8 in.					• •	
	Hinges						,, 71
4	Knob screws	* *				3 ×	,, 72
2		* *				(* *)	,, 92
2	Turn buttons						,, 93

The drawing clearly shows the way the house is fitted up.

The glass for windows is pushed in the grooves before the front and back are screwed to the angle bars.

Fit up the base frame and ends first.

#### Station and Station House No. 306.

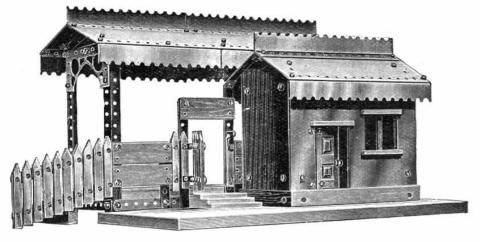

The parts for the Side Station model are given on page 48, and the Station House parts are shown above; large wood base board is added to the model to make it a complete station.

Signal Posts, lamps and high level bridge can be added as desired.

With the No. 5 outfit, the passenger coach (page 56), goods truck (page 44), side station (page 48), station house (above), and high level bridge with covered gallery (page 68), can be made up complete at the same time, as well as many other smaller models.




#### Vertical Saw No. 304.

37	Screws		 					No. 50
4	Angle bars, 8 in		 					,, 54
6	Strips, 2 in.		 			***		,, 56
4	$,, 2\frac{1}{2},$		 					,, 57
2	,, 3½ ,,		 					,, 59
3 2 18	,, 4	* *	 				* *	,, 60
2	., 5½ .,	+ +	 		٠.			,, 61
18	Brackets		 					,, 66
2	Trunnions		 					,, 74
I	Wheel		 					,, 75
2	Wheels		 				101	., 76
3	Axles, $3\frac{1}{2}$ in.		 			***	* *	,, 77
13	Collars		 					,, 82
1	Handle		 					,, 83
1	Washer		 					,, 84
4	Wood screws		 * *	* *		***		,, 97

The crank arm is fitted to the grooved wheel by means of knob screw with washers and double nutted.

The frame to carry saw is composed of two 4-in. strips with three  $3\frac{1}{2}$  in. axle rods and held together by collars. Two of the collars are placed **outside** the angle bars on the upper rod, to make it slide easily in the grooves.


A fretsaw can be placed between the collars to complete the model.

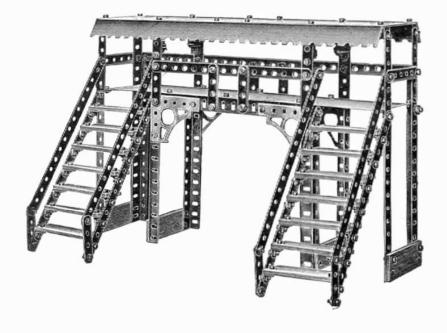

# Covered Bridge No. 305.

18	Slips							No.	25
144	Screws							,,	50
4	Angle b	ars						22	54
8	. ,,	,,	6½ in			:*	2	,,	53
8	Strips,	2	in.	W.	*		*	,,	56
4	,,	3	,,	*	*		*	,,	58
4	.,,	3½ 8	3.2				٠	,,	59
11			12				٠	2.2	63
4	Architr		S				*	17	65
46	Bracket							,,	66
4	Plates,	$8 \times$	3 in.				è	.,	67
4	Eaves,	8 in						,,	71
6	Washer	s				1		,,	84
4	Lamps			٠				,,	87

This model can be raised on piers to suit height of platforms, and can be made wider for double rails by the use of 12-in. angle bars and other parts to correspond.

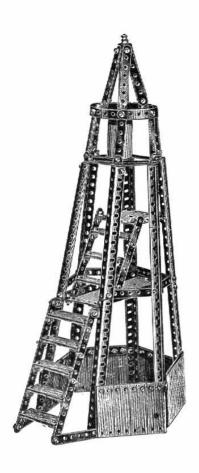


# Lighthouse No. 312.

I	End			No.	3	1 Strip, 4 in	
25	Slips, 3	< I i	n.		25	3 Strips, $5\frac{1}{2}$ in.	,, 61
150	Screws			,,	50	2 ,, 8 ,,	,, 63
	Bars, 6 in			1.5	52	45 Brackets	,, 66
8	,, 8 ,			1.5	54	3 Plates, $3 \times 3$	,, 68
	,, 12			12	55	2 Wheels	,, 75
2	Strips,	2 i1	n.	12	56	ı Wheel	,, 76
14	,,	$2\frac{1}{2}$ ,	,		57	1 Axle, $3\frac{1}{2}$ in	,, 77
7		3,	,	,,	58	16 Washers	,, 84
13	,,	$3\frac{1}{2}$ ,	,	,,	59	ı Lamp	,, 87

The skeleton is made on angle bars screwed together and secured by metal strips, which are slightly bent. The platforms are made of  $3\times3$  in. plates.

To form the lantern, slightly curve six  $2\frac{1}{2}$ -in. strips. The beacon light is made by rolling pink paper round two flanged wheels, one being placed at the top and the other near the bottom of a  $2\frac{3}{4}$ -in. axle, which passes through a 4-in. metal strip placed across the base of the lantern as shown, and is secured in position by a pulley wheel.

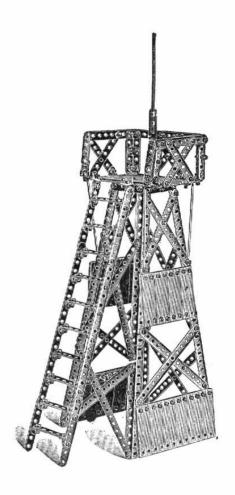

# Pylon No. 313.

20	Slips, 3	× 1 in.	No.	25	4	Strip	8,4	in.	No.	60
	Screws			50	2	,,	$5^{\frac{1}{2}}$	12	,,	61
2	Bars, 6		2.1	53	4	* * *	$6\frac{1}{2}$		2.2	62
4	,, 8	,,	33	54	- 8	3.3	8	535	2.2	63
2	,, 12	,,	2.3	55	2	21	12	,,	,,	64
16	Strips,	2 in.	,,	56		Brack			,,	66
16		$2\frac{1}{2}$ ,,	,,	57				< 3 in.	,,	68
5	,,	3 ,,	, ,	58		Wash			23	84
12	,,	$3\frac{1}{2}$ ,,	3.3	59	4	Signa	ıl roc	is	,,	96


The four sides are built up with angle bars joined together.

The No. 25 wood slips are screwed on to the metal strip sides.

The floor of the observation platform consists of four  $3 \times 3$  in. metal plates. The signal is an axle rod fixed to a  $3\frac{1}{2}$ -in. metal slip by means of wire.

The ladder is made of metal slips fitted by means of brackets.



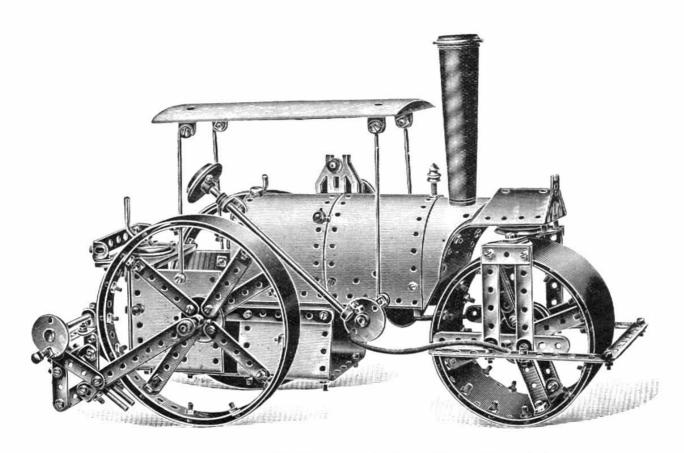

# Ruston Steam Roller, with Scarifier No. 360.

T	Carriage	roof			*0.0	80,00	100		No.	10	8	Flanged wheels	2.00	0.18	92.45	94.40	No.	75
2	Wood sl						7.7			25	3	Grooved wheels		34 X	3. 41	36. 40	,,	76
150	Screws.	A COLUMN						(4) (4)		50	1	Axle rod, 3½ in.	9.80		* *	0.10	.,	77
2	Angle b					¥27				52	3	- 3	4.00	0.0	2.5		,,	78
16	Metal st					* *	4000	10000	2.90	56	13	Collars		4.4		2.2	,,	82
9						* *	*115		,,	57	I	Handle axle			3 10	12 20	2.2	83
5	,,			.,					,,	58	18	Washers			19. 31	S 8	,,	84
3	**		31					14.14	,,	59	1	Buffer			9.00	10.00	.,	
#2		**	4			10.4			, ,	60	2	Lamps				(2.5)	,,	87
3	,,	,,	5 1		4.5	2. 6		* *		61	1	Carriage side rail					,,	90
4		,,	61			*: *	***		* 5	62	3	Knob screws and nuts	3		72 G	12. 25	,,	92
5		11	8						, ,	63	4	Signal post rods		1979		9.80		96
59	Brackets						2072	200	,,	66	3	Wood screws		100	* *	04(04)	9(97)	97
7	Plates, 8	$3 \times 3i$	n.				2012		.,,	67								
6	., 3					* *		*0.0*	,,	68		Extr	a .	Part.				190
8	Trunnic					7.7	* *	5.05	,,	74	1	Axle, $6\frac{1}{2}$ in	٠.				No.	165

Fit up front roller first; for this two  $8 \times 3$  plates are used. Roll them round a large bottle or jar to make them form circle, lapping two holes each end. Screw on outside fittings to boiler before fixing back plate; screw piece of wood on to bracket at front of boiler to slip funnel on.

Roller and wheels are covered with cardboard.

To make funnel to shape screw a piece of round wood underneath wheel at top.

The model is  $11\frac{1}{2}$  in. high,  $17\frac{1}{2}$  in long, 8 in. wide.


## Overhead Travelling Hoist No. 355.

I	End	No. 3	8	Architrave
4	Posts	,, 11	61	
2	Sides	,, 14	3	Plates, 8 ×
21	Slips	,, 25	7	Trunnions Wheels
234	Screws	., 50	8	Wheels
2	Angle bars	,	2	,,
	6 in.	,, 52	2	,, Axles, 3½ i
2	Angle bars	,	3	Collars
	$6\frac{1}{2}$ in.	,, 53	11	Collars
5	Angle bars	,	1	Handle
	8 in.	,, 54	29	Washers
2	Angle bars	,	6	
	12 in.	,, 55	3	Couplings
16	Strips, 2 in	. ,, 56	2	Catches
16	$,, 2\frac{1}{2},$		2	Rods
8	,, 3,,	, ,, 58	I 2	Wood scr
14	35.	, ,, 59		
2	,, 4,	, ,, 60		Evetno De
4	$,, 5\frac{1}{2},$	, ,, 61		Extra Pa
3	$,, 6\frac{1}{2},$	, ,, 62		require
12	,, 8,	, ,, 63	11	Wood scr
2	$,, 12\frac{1}{2},$	, ,, 64		

8	Architraves ?	No.	65
61	Brackets	,,	66
3	Plates, $8 \times 3$	,,	67
7 8	Trunnions	,,	74
	Wheels	,,	75
2	. , , ,	,,	76
2	Axles, $3\frac{1}{2}$ in.	,,	77
3	$2\frac{3}{4}$ ,,	,,	78
11	Collars	,,	82
1	Handle	,,	83
29	Washers	,,	84
6	Buffers	,,	85
3	Couplings	,,	86
2	Catches	,,	95
2	Rods	,,	96
12	Wood screw	S	
		11	97


## arts

rews No. 97

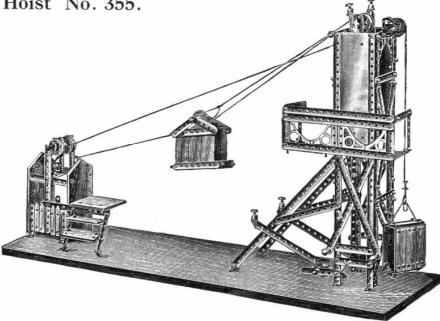


Cord is gripped between flanged wheels for pulley ropes. This model should be screwed to a long wood plank.

## Bungalow No. 300.

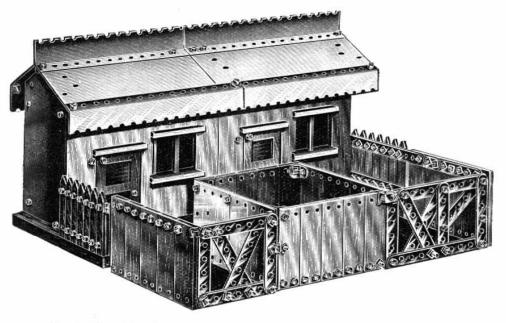

The back of the bungalow is made of metal plates bolted together; the roof is built and laid on last.

14	Posts			No.	ΙI
2	Sides	40.0		,,	14
4	Sills		* *	,,	15A
2	Sashes		19 92	11	15D
I	Front	• •			15F
1	Back			17	15B
2	Doors				16
2	Lintels		1000		16A
1	Baseboard			3.3	19
25	Slips		10.00		25
2	Glasses				26
150	Screws			.,	50
7	Strips, 2 in	Še.			56
3	$,, 2\frac{1}{2},$		***	,	57
5	,, 3 ,,			,,	58
14	", $3\frac{1}{2}$ ",			1912	59
1	,, 4 ,,			1.5	60
16	Brackets			4.1	66
8	Plates, $8 \times 3$ i	n.	609		67
4	., 3×3	,,			68
1	Tile, $6\frac{1}{2}$ in.				69
1	,, 8 ,,	* *		1414	70
4	Eaves, 8 in.			5.5	71
6	Hinges			٠,	72
6	Washers				84
2	Handles		4) +		88
4	Knobs			.,	92
2	Catches			* *	95

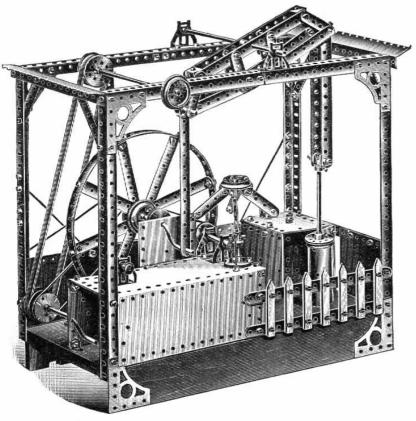

## Beam Engine No. 357.

		N	No.		No.
7	Posts		II	2 Eaves, 8 in.	71
í	Baseboar	d	19	4 Trunnions	74
	Platforms		24	8 Wheels	75
166	Screws		50	4 ,,	76
4	Angle ba			1 Axle, $3\frac{1}{2}$ in.	77
	6 in		52	$I ,, I_{\frac{1}{2}},,$	79
4	,, 8 ,,		54	13 Collars	82
	,, 12 ,,		55	1 Handle	83
14	Strips, 2	in.	56	44 Washers	84
5	,, 2	1 ,,	57	2 Buffers	85
3	,, 3	,,	58	2 Lamps	87
11	,, 3	$\frac{1}{2}$ ,,	59	4 Connecting	
3	,, 5	$\frac{1}{2}$ ,,	61	rods	
3	,, 6	$\frac{1}{2}$ ,,	62	8 Wood screws	
2		2.5	63	Extra Parts	
3	$,, 12\frac{1}{2}$	,,	64	2 Axle rods, 12ir	1. 79
	Architray		65	1 Handle axle	83
30	Brackets		66	1 Wheel	
5	Plates, 8	×3in.	67	2 Bevel gears	162
9	,, 3	× 3in.	68	2 8 in. Axles	166

To make wheel join two 12½-in. strips and leave five holes between each spoke.

Fit governors, etc., to  $8 \times 3$  in. plate before fixing plate on.


# Dredger Waterwheel and Pile Driver No. 358.


				No.			No.
16	Posts			ΙI	61 Brackets		66
1	Baseboa	ırd		19	5 Plates, $8 \times 3$ in.		67
2	Plain pl	atfor	ms	23	$6_{-},, 3 \times 3_{-},$		68
2	Fitted			24	2 Trunnions		74
5	Slips, 3	×1 i	n	25	6 Wheels		7.5
170	Screws			50	4 ,, · · ·		76
4	Angle b	ars,	6 in.	52	2 Axles, $3\frac{1}{2}$ in.		77
3	,,	,,	$6\frac{1}{2}$ ,,	53	$I ,, I_{\frac{1}{2}},$		79
. 2		٠,	12 ,,	5.5	7 Collars		82
14	Strips,	2 in	٠	56	1 Handle Axle		83
8	,,	$2\frac{1}{2}$ ,		57	13 Washers		84
4	,,	3 ,	,	58	2 Buffers	* *	85
9	,,	$3\frac{1}{2}$ ,		59	2 Screws and nuts		91
3	,,	4 ,		60	2 Knobs		92
4	12	5 1 ,		61	4 Signal Post rods		96
4	12	$6\frac{1}{2}$ ,		62	15 Wood screws		97
4	,,	8 ,		63			
2		$2\frac{1}{2}$ ,		64	Extra Parts	:	
4	Architra			65	3 Wood screws	* *	97

Base should be built first, and then wheels for bottom of band should be fitted in. Four  $3\frac{1}{2}$ -in. strips, three 8-in. strips, and one 2-in. strip are used to construct wheel.

Pieces of card can be made into shape for buckets.

This model can be run by power by adding extra pulley wheel to big wheel axle.

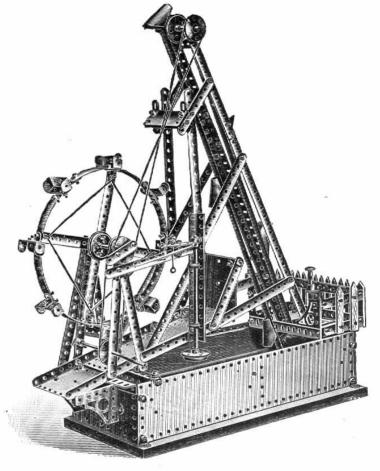


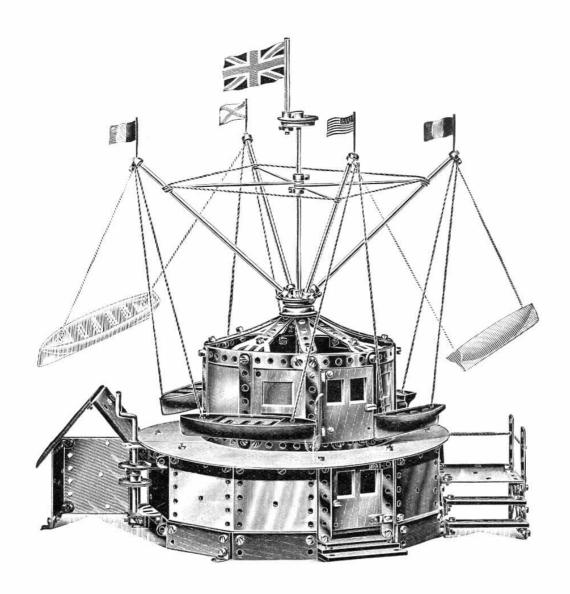

## Hiram Maxim Flying Boats No. 363.

2	Central windows					No.	8	14 Plates, 3 in. × 3 in	No. 68
2	Doors of house			8334		.,	16	2 Straight hinges	,, 72
1	Lintel for house	* *		*50*	600	.,	16A	2 Bent hinges	73
14	Wood slips	* *:	* * .	* *	1005	,,	25	6 Trunnions	., 74
100	Screws					222	50	4 Flanged wheels	75
7	Strips, 2 in.			2/2		٠,	56	4 Grooved wheels	., 76
9	$,, 2\frac{1}{2},$		900	#11#		.,	57	1 Axle, 3½ in	. 77
3	" 3, "					,,	58	13 Collars	., 82
14	,, 3½ ,,		• •			,,	59	I Handle	., 83
3	,, 4, ,,	(4)(4)(	90%	* 75 *		, ,	60	16 Washers	,, 84
2	,, 5½ ,,			100		.,	61	2 Door handles	., 88
5	,, 8 ,,	* **	1000	505	100		63	2 ,, screws	91
3	1 2 ½ ,,					,,	64	4 Rods	, 96
. 0	Architraves						65	Extra Parts:	
48	Brackets		40.4			,,	66	6 Axles, 8 in	., 166


Build base first; card disc for top of base; use four wood boats to make swings.

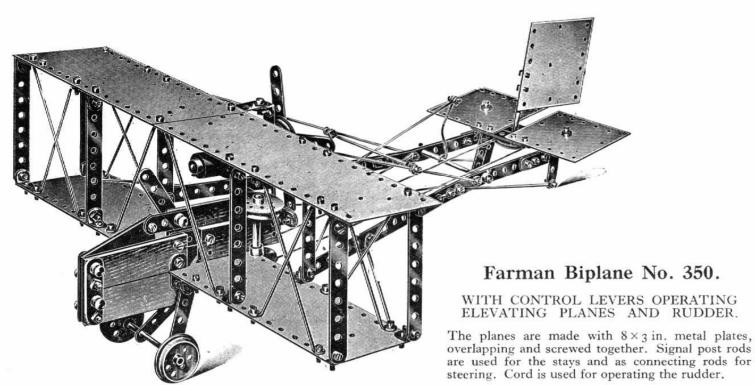


No			With No. 5 Outfit,	Extra Parts.		N	0.		(*)		With No. 5 Outfit.	Extra Parts
25			 6			7.	Flanged wheels				4	
50	Screws		 112			7	Grooved wheels			* *	3	
56	Metal strips, 2 in.		 16	I		7	Axle rods, $3\frac{1}{2}$ in.				4	-
57	$,, ,, 2^{\frac{1}{2}},,$		 4	_		7	$3, ,, ,, 2\frac{3}{4},$				2	
60	,, ,, 4, ,,	***	 3	7		8:	2 Collars	*:::			13	
64	$_{-}$ ,, $_{1}$ ,, $_{1}$ , $_{2}$ ,,	105	 2	_		8.	4 Washers	100			20	
66	Brackets		 34			9:					4	I
67	Metal plates, $8 \times 3$ in.	674	 4		175	- 9	Signal post rods				4	18
68	,, ,, 3×3		 3									

## House Boat No. 308.

-		-	ou		-	10.		000.	
	Rails							No.	1
2	Windows	٠.						,,	5
2	,,						٠.	,,	(
2	Doors				•			,,	5
2	Windows				***	,		,,	8
1	Roof								10
7	Slips						,		25
III	Screws							,,	50
2	Angle ba	rs,	61 ir	ì.				,,	53
9	Strips, 2							,,	56
3	,, 2	12	,,					,,	57
1	,, 3		,,					,,	58
10		1 .	n.					,,	59
2	., 4		,,						60
5		1	,,						61
	,, 6	· 1	,,					,,	62
4 5	,, 8		,,					,,	63
3	,, 12		,,					,,	64
36	Brackets	-	,,	•		,		,,	66

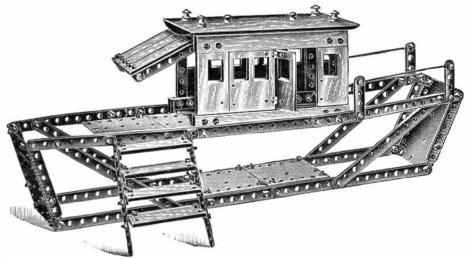


	Plates					4	Lamps			No. 87
8	Hinges	× 6	 16. 63	,,	68	4	Screws	 	0.01	,, 92
4	Hinges		 	,,	73	2	Rods	 		,, 96

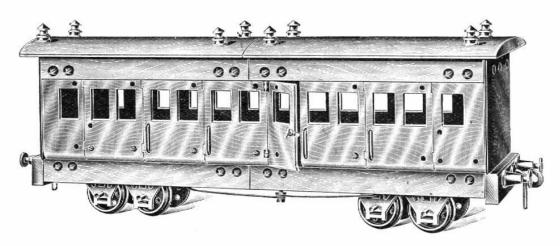

## Saloon Carriage No. 352.

No	. N	rts in Outfit.	Extra Parts.	No.			1	Pa No. :	rts in Outfit.	Extra Parts.	No.			arts in 5 Outfit.	Extra Parts.
I	Side rails		2	56	Strips,	2			3		76	Wheels	* *	2	
	C. ends			57	,,	-	,,		<b>8</b>	-	78	Axles, 23 in		4	
	Buffer blocks			58	,,	2	C 2000		4		85	Buffers		4	-
	R.H. windows		-	59	20.00	21		I		-	86	Couplings			-
6	L.H. "			62	,,		,,		2		87	Lamps		6	2
7	Carriage doors			63	,,	8			2		88	Handles		2	
	,, windows		Q	66	Bracket			I			00	Rails			4
0	D c windows		0	5000								Screws			
	Roof		1	73	Hinges				4		,				
50	Screws	 57		74	Trunni	ons			8		92	Screws		2	-
	Angle bars, 61/2				Wheels				8	-	96	Rods		4	


The metal framework of saloon should be made first; join two  $6\frac{1}{2}$ -in. angle bars with a  $2\frac{1}{2}$ -in. metal strip, leaving only the central hole between them. This applies to both sides. The top is supported with two  $3\frac{1}{2}$ -in. strips each side, and the top sides are made by joining one 8-in. and one  $6\frac{1}{2}$ -in. metal strips. Then fix wood as illustration. For making up bogic wheels, see page 53.

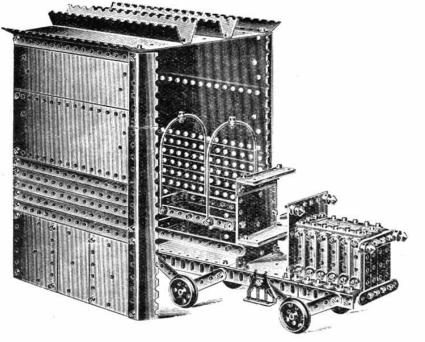

## Motor Car and Garage No. 311.

				1	No.			No.
2	Slips 3	×ı	in		25	10 Plates, 8×3 i	n.	67
	Screws				50	12 ,, 3×3	,,	68
6	Angle b	ars	$6\frac{1}{2}$	in.	53	2 Tiles, 8 in.		70
2	0.000	,,	8	,,,	54	8 Eaves, 8 in.		71
14	Strips,	2	in.	15.0	56	2 Trunnions		74
16	,,	$2\frac{1}{2}$	1.		57	4 Wheels		75
8	,,	3	,,		58	ı Wheel		76
8	,,	4	,,		60	3 Axles, $3\frac{1}{2}$ in.		77
2	,,	$\frac{1}{5^{\frac{1}{2}}}$	,,		61	2 Collars		82
3	,,	61	,,		62	10 Washers		84
12	,,	8	,,		63	4 Lamps		87
50	Bracke	ts	*	•	66	4 Rods	12. 17	96

The lower portion of the garage is made on  $6\frac{1}{2}$ -in. angle bars, which hold the plates and metal strips. Higher brackets are sufficient where the  $8 \times 3$ -in. plates are used.

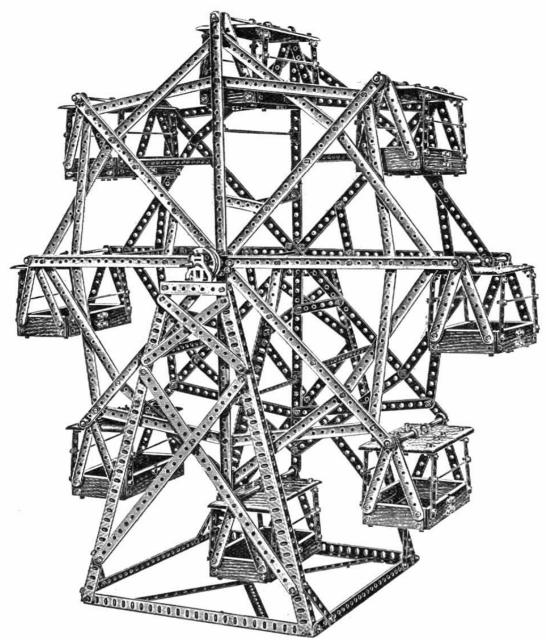


## Big Wheel No. 353.

					4.0					
No		Parts from No. 5 Outfit.		No		Parts from No. 5 Outfit.	Extra Parts.	No.		
3	Carriage ends	2	14	60	Strips, 4 in.	3	29	75 Wheels	2	_
	Slips	25	23	61	$5^{\frac{1}{2}}$ ,	4		77 Axles, 3½ ir	1 4	I 2
50	Screws	312	195	63	,, 8 ,,	12	32	82 Collars	13	23
	Angle bars, 6½		_	64	Strips, 121 in	3	19	84 Washers	48	22
5.5	Angle bars, 12	in. 2	4	66	Brackets	78	66	96 Rods	4	12
56	Strips, 2 in.	16	3.2	68	Plates	10	6		One 12-in. axle	
			36	74	Trunnions	2		One 8-in. ar	ngle bar, cut in	half.

## MEASUREMENTS.

Height ..  $28\frac{1}{2}$  in. Diameter of wheel .. 23 in. Width .. 25 in. Depth of wheel ..  $8\frac{1}{2}$  in. The stand should be built and then the framework of the wheel.

The roofs of the carriages are made with two carriage ends, placed lengthways, and are joined together with 2-in. metal strips. Two extra holes require to be made in each, for brackets to be fixed to for sides to hang from. The model otherwise is straightforward.

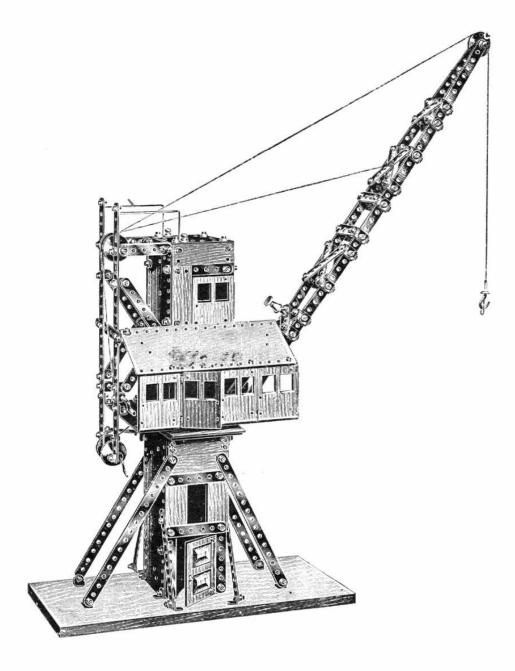


# Luffing Crane No. 354.

				No. 5	
				Outfit	Extra
No				Parts.	Parts
8	Windows			2	4
	Door		·	I	-
18	Truck ends			I	-
19	Baseboard			I	-
25	Slips			ΙI	3
50				202	1000
56	Strips, 2 in.			14	-
57	$,, 2\frac{1}{2},$			4	-
58	,, 3 ,,			8	3
59	3 5		(8)	6	-
60	,, 4 ,,			3	200
61	$\begin{array}{cccccccccccccccccccccccccccccccccccc$			4	4
63	,, 8 ,,		Ç	4	
64	$,, 12\frac{1}{2},$			3	3
66	Brackets			78	37
	Brackets Plates, $8 \times 3$ in.			78 6	
68	" 3×3 "			5	-
72	Hinges		v	2	-
73	Bent hinges	٠		2	3
75 76	Wheel	٠	4	I	
76	Wheels			4	3
77	Axle, $3\frac{1}{2}$ in.		¥	2	
79 82	$,, I_{\frac{1}{2}},$	٠	•	I	
82	Collars	•	÷	8	-
83	Handle	,	٠	I	I
84	Washers		·	48	90
85	Buffers	9	¥.	1	90
	Coupling	*		I	-
88	Door-handle	÷	e i	1	10700000
91	,, screws		٠	16	I
	Screws	•		4	3
	Rods	-	٠	3	-
97	Wood screws		0	8	-


The base of this model is composed of three  $8 \times 3$  in. metal plates standing on end, and the front part with 3-in. and  $3\frac{1}{2}$ -in. metal strips and  $3 \times 1$  in. wood slips, and is supported by means of four  $8\frac{1}{2}$  in. metal slips at each corner, joined to brackets, screwed to the baseboard. The roof of base is a  $3 \times 3$ -in. plate. The floor of engine house is two  $8 \times 3$ -in. plates screwed together, and is joined to the lower part by means of a  $3\frac{1}{2}$ -in. axle rod, using pulley and flanged wheels, as in earlier models. The balance is kept by using four knob screws inserted in  $3 \times 3$ -in. plate at similar height to one flanged and one pulley wheel. The front and back of engine house are made with  $8 \times 3$ -in. plates, the lower parts of sides with  $3 \times 3$ -in. plates, and the upper part with carriage windows and  $3 \times 1$ -in wood slip; the remainder is easily gleaned from illustration.



## TWO FINE MODELS BUILT BY PRIMUS ENGINEERS

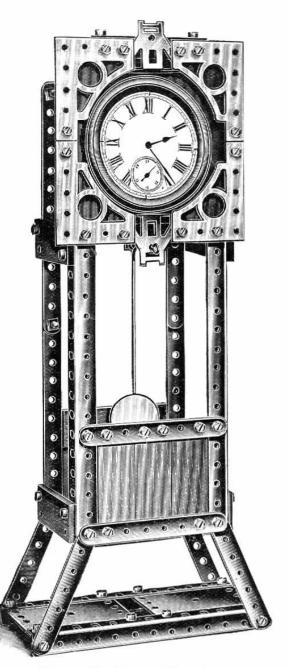

Grandfather Clock.

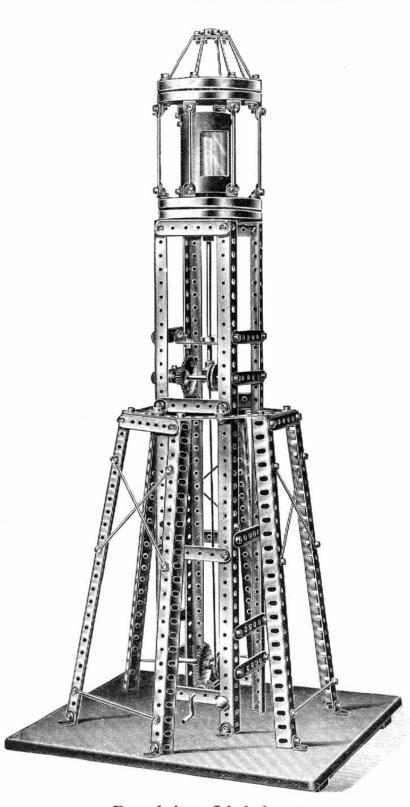


Revolving Lighthouse.



## WOOD PARTS OUTFIT


These models can be made with this outfit and parts from a No. 2 Primus Engineering Outfit.

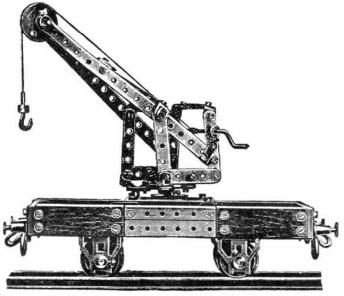


Crane Truck No. 189, see page 54.




Station House No. 302, see page 67.

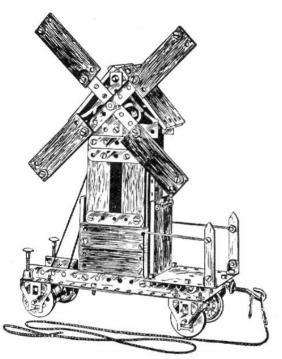

Working Windmill No. 138, see page 40.

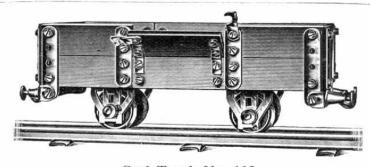

Coal Truck No. 113, see page 44.

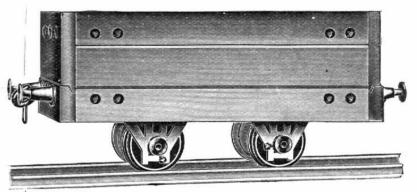


Heavy Goods Truck No. 116, see page 44.



## **BIG WHEEL OUTFIT**

## Instructions for building wheels.

Three sizes of wheels can be made, 4, 6 and 8 in. diameter. The rim sections are equally useful for forming the curved parts of towers, arches, lighthouses, roundabouts, etc.

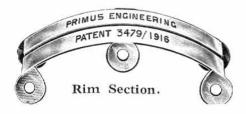


## Fitting the Rim Sections.

If you examine the rim sections carefully you will observe that the two ends are slightly different. Place a section in front of you with the inscription in the proper position for reading, and you will see that the pair of lugs at the end on the right are set a trifle wider apart than those on the left. This is intended to facilitate the joining up of the sections, for the left-hand pair of lugs of one section will fit snugly into the right-hand pair of lugs of another. Great care should be taken to place each section in its proper relative position.



4-inch dia. Double Hub Wheel.

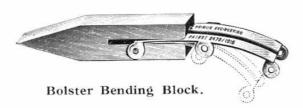

## Bending the Rim Sections.

The rim sections are bent to a curve necessary to make four section wheels of 4 in. in diameter; to adapt to the larger wheels the curve of each section has to be slightly reduced. This should be done by placing the rim section in the mouth of the bolster bending block and gently bending upwards, then push section further in the block and repeat the process until desired alteration in curve is attained. To bring the section back to its original curve reverse the operation.

Do not bend the sections roughly, or you will make a sharp kink, which besides being ugly will entirely destroy the symmetry of the section and make it impossible to properly fit.

## Building 4-in. Double Hub Wheels.

It is best to commence building the easiest wheel, known as the double hub, where the spokes have a rake sideways and are not bent. The spokes are all screwed on to the hubs and then the screws are just turned back a trifle so as to leave them loose until the wheel is finished, one side being dealt with at a time. Then screw one of them to a pair of sections, afterwards screw each alternative spoke to the other pair at the lugs where they join. The central lugs should be screwed up to the alternative spokes last, finally all the screws should be tightened up. In fitting the second series of spokes on hub, see that the rake taken by the spokes is in the same direction as the first series.

The accompanying illustration, together with these instructions, should make it easy for anyone to build a 4-in. double hub wheel.



## Building 4-inch Single Hub Wheels with Big Wheel Outfit.





Fig. 2.

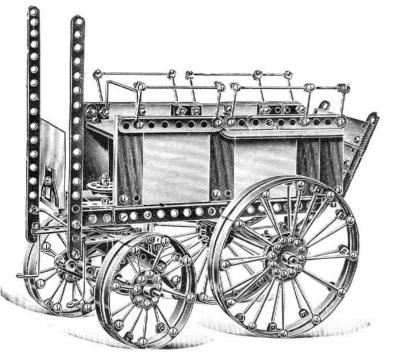


Fig. 3.

Commence by fixing the spokes on to the hub in pairs, each pair held on by one bolt and nut. When they are all on, if looked at sideways, they will appear as Fig. 1. Each of the spokes must then be bent slightly outwards by inserting the wedge end of bolster (Fig. 2) to give them sufficient rake to fit the lug on the wheel sections, and they should then appear as nearly as possible like Fig. 3.

Fig. 1.

The spokes can then be easily fitted by taking two of the sections and screwing one eye of a spoke through the lugs that form the joint. Follow up with other sections, and when the fourth is screwed into its place the remaining spokes may be screwed on to the central lug and the whole series will form a perfect wheel, with a channel for a driving band in the centre.



Tradesman's Cart No. 1012.

A typical model made with Primus Big Wheel Outfits and parts from a No. 2 set. Further models are shown on following pages.




4-inch Single Hub Wheel.

# PRIMUS ENGINEERING BRITISH MADE


## Building Double Hub Standard Wheels.

This is the standard form of wheel and suitable for most purposes. After the spokes are screwed to the hubs, they are given a slight rake by bending them inwards, as shown in the drawing, Fig. 4. They will then be found to fit the section perfectly. The wheels have a handsome appearance, and are perfectly balanced.

The 6- and 8-in. wheels are built up in exactly the same manner as the smaller one, and once the system is mastered, there is no difficulty.

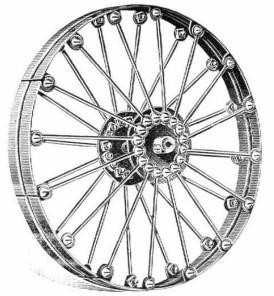

8-in. wheel.

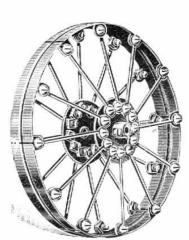

6-in. wheel.




4 in. wheel.



Fig. 4.—Spokes bent for standard wheel.

## Building Composite Wheels.

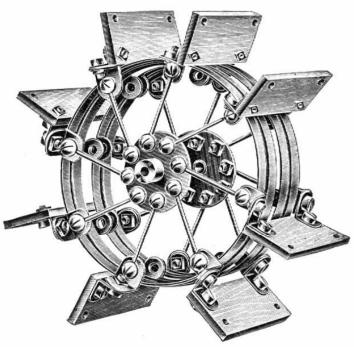


Paddle or Mill wheel.

To make composite wheels the same general plan must be followed as for the simple ones.


After one of the hubs with its set of spokes has been fitted to the set of wheel sections on one side only, the side sections should be screwed together, and lastly the second hub with its set of spokes should be screwed on.

With this plan one side is always open, which makes it more convenient to adjust the screws and nuts.

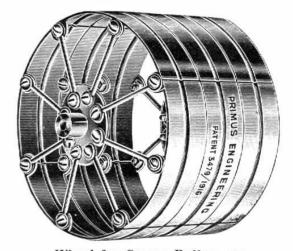


Wheel for Steam Roller, etc.


## Models made with PRIMUS BIG-WHEEL & Nº 1 standard outfit)

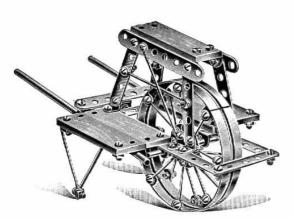


Chinese Luggage Barrow No. 1004.

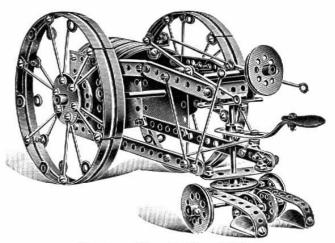


Tractor Plough No. 1001.

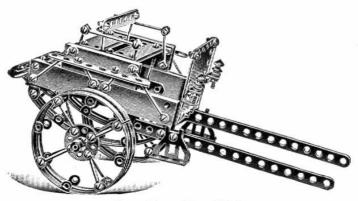

Dog Cart No. 1000.

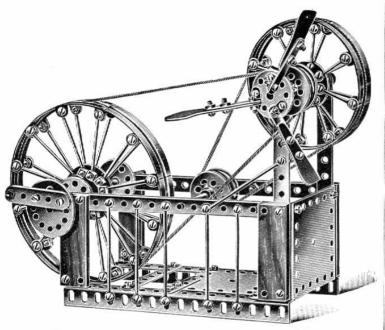



Power Driving Wheel and Fan No. 1003,

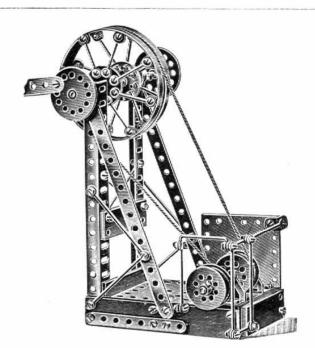


Power Wheel and Counter Shafting No. 1005.

## Models made with PRIMUS BIG-WHEEL & Nº2 standard outfit

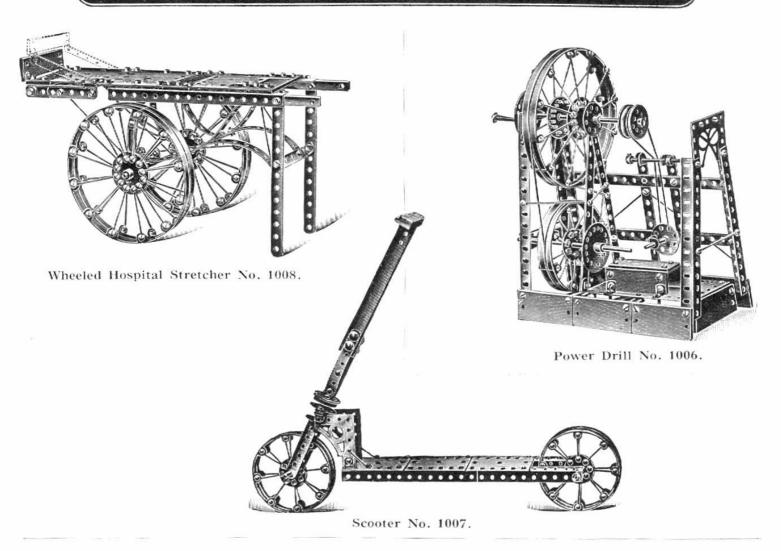

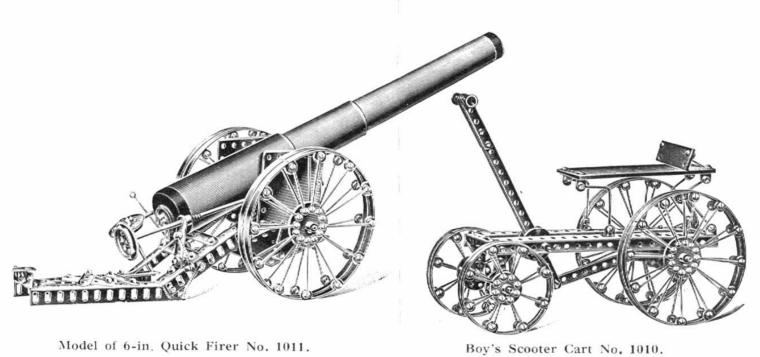


# Models made with PRIMUS BIG-WHEEL & Nº 3 standard outfit

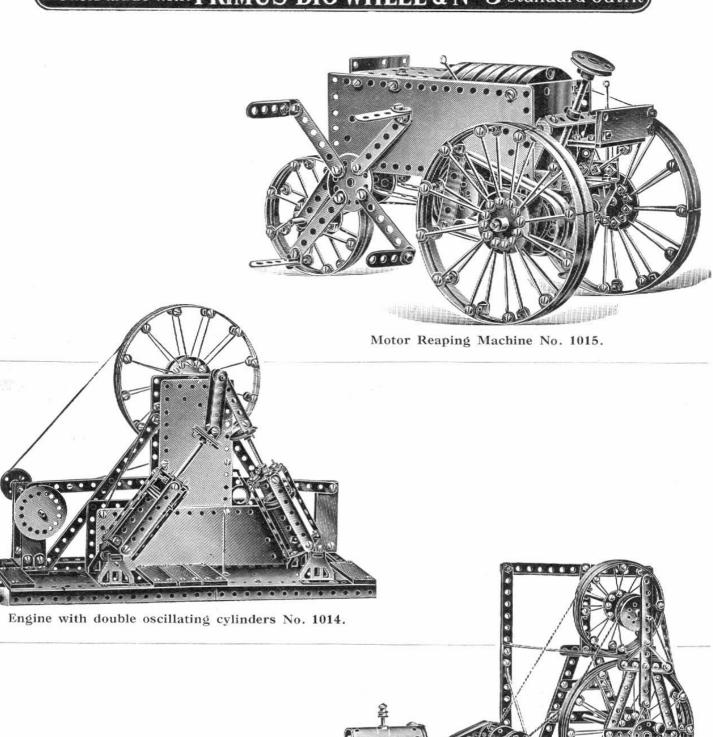


Power Plant with cylinder No. 1013.


# Models made with PRIMUS BIG-WHEEL & Nº4 standard outfit

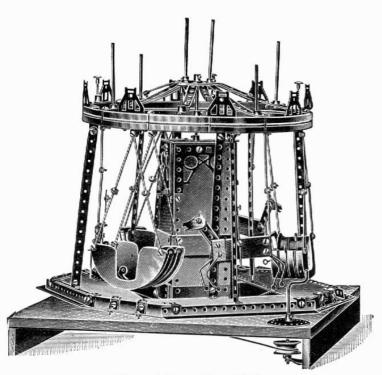


Roundabout No. 1019.

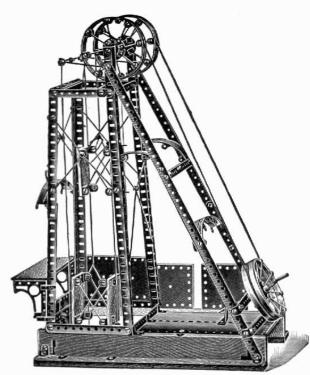

Pit Head Gear No. 1017.

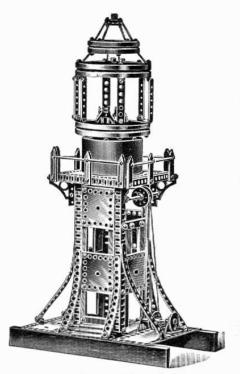


Lighthouse No. 1018.

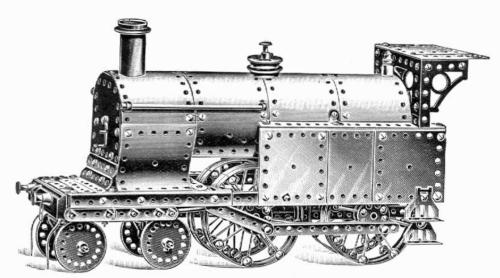


Midland Locomotive 4-4-0 type No. 1020.


# Models made with PRIMUS BIG-WHEEL & Nº5 standard outfit

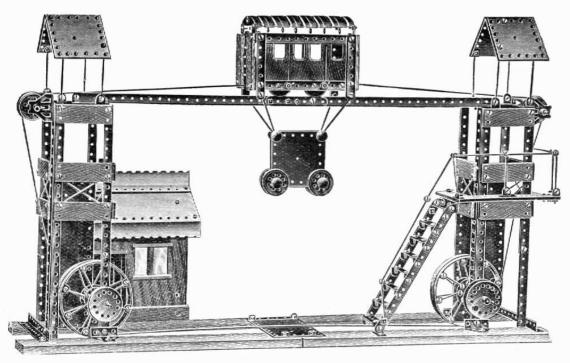

Mono Railway No. 1025.

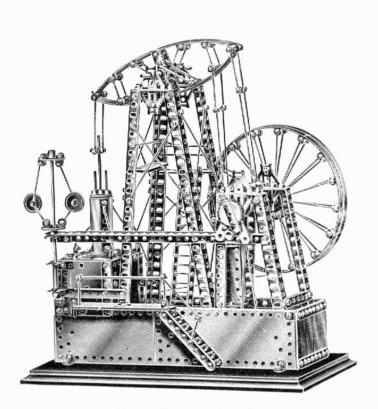

Beam Engine No. 1023.

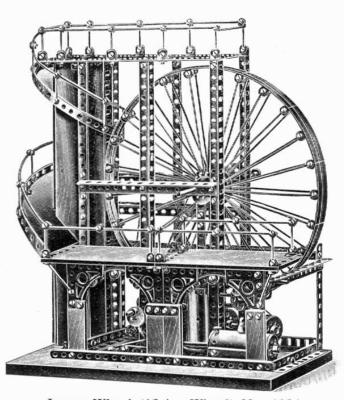

Laxey Wheel (12-in. Wheel) No. 1024.




## MOTOR CHASSIS OUTFIT

Instructions for building Motor Chassis.

First take the chassis framework, which is supplied in outfit, already fitted, and screw trunnions No. 74 in their correct position, which will be found by placing them over the third and fifth holes in the Angle bars, counting from the back.

Next fit the 2-in. strips in the position shown by the illustrations below. The purpose of these strips is to support the steering gear. The illustrations show the exact method of fixing gears into position.

Once the gears have been fixed, the chassis will be ready for the dashboard. The steering column should then be adjusted, the bonnet, running boards and mudguards fixed in position, and lastly the wheels. All that then remains to be added will be the driving seat, as shown in illustration of complete chassis on page 8.

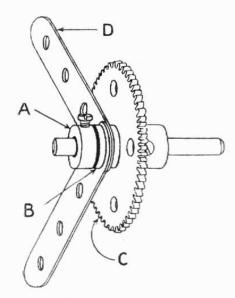

First fix the collar A on to the  $1\frac{1}{2}$  in. rod in the position indicated by the diagram. Then place the washer B on the same rod up to the face of collar A, and pass the rod through the end holes of the 2 in. strips fixed to the chassis as illustrated.


Next place the gear wheel C on to the opposite end of the  $1\frac{1}{2}$  in. rod and fix it so that the boss of the wheel and the washer grip the 2 in. strips as tightly as possible. You can now place combination spur and bevel gear, No. 204, in position. This revolves on a shoulder screw, which is fixed tightly on to the 2 in. strips, letter D in the diagram.

The bevel pinion, No. 205, on the steering column should next be fitted. This must be fixed so that the teeth are as deep in mesh as possible. Adjustments are easily made by means of collars on the steering column or by altering the position on the steering column bearing, which has slotted holes for this purpose.


The collars must be fitted in such a position that the set screws will not catch the steering column bearing before the steering lock has been turned to its fullest extent.

The coupling which carries the front axle rods can now be fixed on the  $1\frac{1}{2}$  in. rod in such a position that the axle rods are quite clear of the angle bars.

Note:—All the motor chassis models illustrated on following pages are made with this outfit and extra Primus parts as shown.

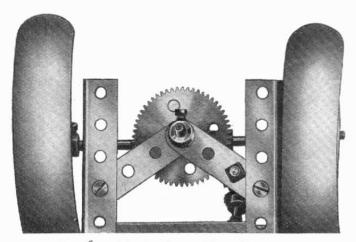


Steering Mechanism, View from top.

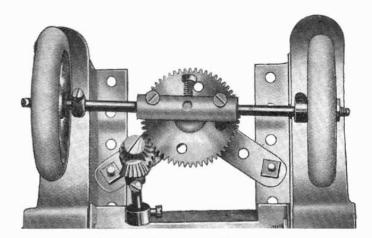

Steering Mechanism, View from underneath.


# PRIMUS ENGINEERING BRITISH MADE

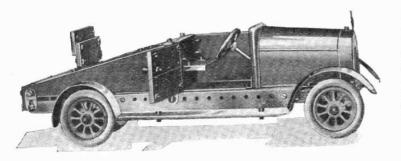

## Two-Seater Touring Car with Dickey, M.1.

First fix a 2-in. strip to angle bars on either side of the chassis in order to extend the rear, then cut carriage floor wedge-shape for the sides, or cardboard will answer the purpose just as well. Fix by means of  $2\frac{1}{2}$ -in. strips at front end and with an angle bracket flattened out at the back end. Bend a  $3\times3$  plate between the second and third holes to form back inside of car for dickey seat and use wood slips and straight hinges. Also wood slips are used for doors and driving seat.

	. Е	xtra	parts		uirea :		
	Floor board	No.	9	2	Metal strips	No.	57
11	Wood slips	,,	25	4	Brackets	,,	66
	Screws and nut		50/I	8	Straight hinges	,,	72
4	Metal strips	,,	56	2	Knob screws		
			<del></del>		and nuts	,,	92

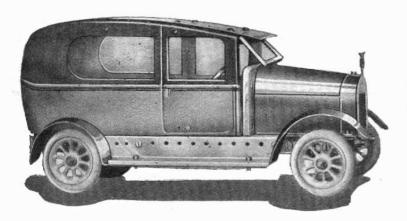


## Four-Seater Coupé, M.2.

For the roof two  $8 \times 3$  plates need to be bent in order to form both back and roof combined. The sides are made from cardboard or wood, the latter being most satisfactory and more permanent.

## Extra parts required:

		No.		No.
18	Screws and nuts	50/51	2 Straight hinges	72
10	Brackets	66	2 Carriage door	
2	Metal plates	.67	handles	88
	•		6 Door screws	91

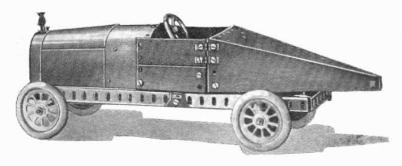


## Racing Car, M.3.

Two  $3 \times 3$  plates are bent to form the bonnet extension. One carriage floor is cut wedge-shape to form the tail of the body and an  $8 \times 3$  plate can be cut to form the top of same, but they also can be made out of cardboard or wood.

Extra parts required:

1	Floor	No.	9	8	Brackets	No.	66
12	Wood slips	,,	25	1	Metal plate	,,	67
3.5	Screws and nut	s ,,	50/1	2	Metal plates	,,	68
3	Metal strips	,,	62	3	Trunnions	,,,	74

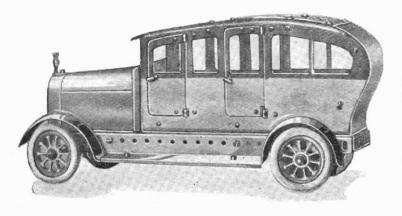


## Five-Seater Saloon Body, M.4.

As in the case of the four-seater coupé, two  $8 \times 3$  plates are required for the roof and back, and the photograph shows how these should be bent. Either cardboard or wood can be used for the sides and doors.

## Extra parts required:

E/A	No.	s required.	No.
14 Screws and nuts	50/51	8 Bent hinges	73
10 Brackets 2 Metal plates	66 67	4 Carriage door handles	45
PROPERTY OF THE PROPERTY OF		<ul> <li>28 Carriage door</li> </ul>	screws of

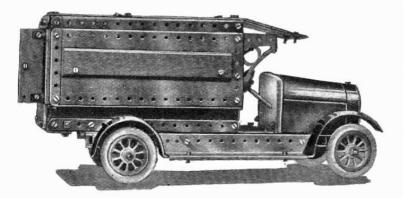

## Box Delivery Van M.5.

Fix on each side 2-in. strips placed vertically to the floor of the chassis by means of brackets, using the 12th hole from the front, also a 2-in. strip should be fixed in the last hole of the chassis on either side. Build sides of body by first fixing 8-in. strips, and secondly 8-in. angle bars in position, then fit the driver's seat and fix the roof in position.

Extra parts required.


		tern pures	requireu,		
	Truck sides	No. 17	2 Architraves	No. 65	
8	Wood slips	,, 25	18 Brackets	,, 66	,
80	Screws and nuts	,,50/51	4 Metal plates	,, 67	
4	Angle bars	,, 54	3 Metal plates	,, 68	
	Angle bars	,, 55	4 Straight hinges	,, 72	
	Metal strips	,, 56	2 Trunnions	,, 74	
4	Metal strips	,, 59	2 Carriage door		
5	Metal strips	,, 60	handles	,, 88	
2	Metal strips	,, 63	2 Turnbuttons	,, 89	1

## Motor Caravan M.6.

Two 1212-in. strips are used for sides at base, next to chassis, and two 8-in. angle bars for inside tops lengthened with 3½-in. strips. The sides are made with carriage floors or cardboard. Two 3-in. strips are curved and fixed by brackets to form rear mudguards.

Extra parts required.

10	Floors		No.	9.	1	Metal strip	 No.	61
1	Side of goods	stru	ck,,	17		Metal strips	,,	62
4	Wood slips		,,	25		Metal strips	,,	63
71	Screws and r	nuts		0/51	2	Metal strips	 ,,	64
1	Angle bar		12	52	18	Brackets	 ,,	66
	Angle bars		,,	54	1	Metal Plate	 ,,	68
2	Angle bars		,,	55	2	Trunnions	 ,,	74
4	Metal strips			56	3	Wire stays		155
3	Metal strips			57	2	Wire stays	 ,,	156
6	Metal strips		,,	60				20

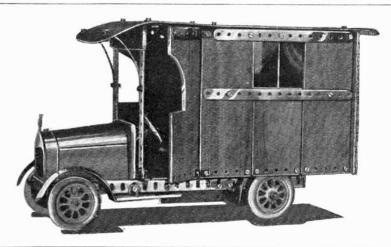

## Motor Spirit Lorry M.7.

One 8×3 plate is used for canopy, bent between 6th and 7th holes for top and between 2nd and 3rd holes at bottom. A piece of wood or cardboard is used for sides. Use wood or round tin for tank, erecting same on wood slips.

Extra parts required.


		required.	
8 Wood slips	No. 25	1 Metal plate	No. 68
36 Screws and nuts	, 50/51	1 Knob screw	,, 92
2 Metal strips	,, 60	2 Wire stays	,, 154
12 Brackets	,, 66	1 Pulley wheel	,, 158
1 Metal plate	., 67		


## Armoured Car M.8.

The sides are made by overlapping  $3\times3$  plates, a 4-in. strip being bolted across the chassis at back and front of body to support same.

Extra parts required.

	****		Leer c.		1			
2	Wood slips	No.	25	2	Metal plates		No.	67
001	Screws and nuts	,, 5	0/51	21	Metal plates		,,	68
2	Angle bars	, ,,	54	4	Straight hin	ges.	,,	72
2	Metal strips	,,,	56	2	Trunnions		,,	74
	Metal strips	,,	57	1	Axle rod		,,	77
	Metal strips	,,	58	1	Axle rod		,,	78
	Metal strips	,,	60		Axle rods		,,	79
I	Metal strip	,,	61	15	Collars and	set		
30	Brackets	,,	66		screws		,,	82

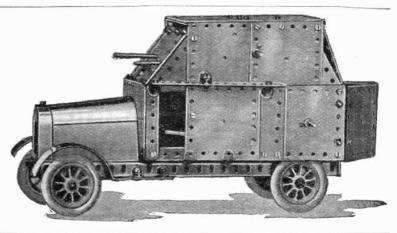

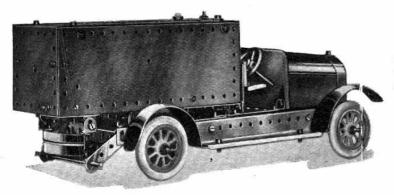

## Road Sprinkler M.9.

Four  $8 \times 3$  plates are used for the sides, top and bottom of the tank, with a  $3 \times 3$  plate for each end and a rim section from a Primus Big Wheel outfit if fitted at the tail to resemble the sprinkler.

## Extra parts required.


2	Wood slips	No. 25	3 Metal plates		No	. 68
56	Nuts and screws	,, 50/51	2 Trunnions		,,	74
5	Metal strips	,, 56	2 Collars and	set		85.00
28	Brackets	,, 66	screws		2.1	82
4	Metal plates	,, 67	12 Washers		,	84
			1 Rim section		23	150


## Motor Ambulance M.10.

Fix on each side 2-in. strips placed vertically to the floor of the chassis by means of brackets. Now fix one 8-in. strip and one 8-in. angle bar on either side. A  $5\frac{1}{2}$ -in. strip is fixed at each corner in an upright position and one 8-in. angle bar along the sides at top, also one 4-in. strip across the top at each end. The woodwork should then be added as indicated.

## Extra parts required.

2	Roofs		No.	10	4	Metal strips		No.	58
			,,	16	3	Metal strips		,,	60
2	Sides of go	ods			6	Metal strips	(8.4)	,,	61
	truck		,,	17		Metal strips	(* *)	,,	63
	Wood slips		,,	25	26	Brackets	2. 25	,,	66
110	Screws and	nuts	,,5	0/51	1	Metal plate		,,	67
	Angle bars		,,	54		Metal plates		,,	68
8	Metal strip	S	,,	56	6	Straight hing		,,	72
						2 Collars an			0
						screws		,,	82
-			_	-		4 Washers		* 1	84

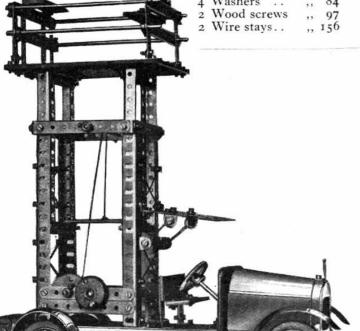

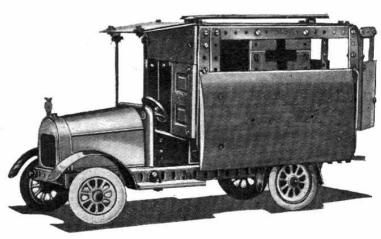

## Tower-Wagon M.11.

The main structure is made with four 8-in. angle bars for uprights, and the rise and fall platform is made with four 6-in. angle bars so fixed to operate inside the 8-in. angle bars. The 6-in. angle bars are braced together at top by means of 4-in. strips. Base of platform is made with two No. 9 floors.

## Extra parts required,


	2.1		Pres co		quireu			
2	Floors	No.	9	4	Metal strips		No.	61
7	Wood slips	,,	25	32	Brackets		,,	66
128	Screws and nuts	,, 5	0/51	2	Trunnions		11	74
4	Angle bars	,,	53	1	Grooved who	eel	,,	76
	Angle bars	,,	54	2	Axle rods		,,	77
4	Metal strips	,,	56	12	Collars and s	et scr	ews	82
	Métal strips	,,	57		Knob screw a		ut	92
	Metal strips	,,	68	8	Wire stays		,, 1	155
8	Metal strips	,,	60	1	Gear wheel		,, 1	160

## Fire Engine M.12.

It is first necessary to extend chassis with 3-in, strips, the firemen's seat being made with carriage floors erected on two 6½-in, angle bars. The scaling ladder is made by fixing two 12-in. angle bars together with 31-in. wire stays and bending them over to clear the inner running ladder; the rungs are made by bending 15 in. wire stays at each end and screwing to two 121-in. strips.

Extra parts required.

				E was a second					
3	Floors		No.	9	6	Trunnions	4.5	No.	74
7	Wood slips	2.5		25	1	Grooved wh	neel	,,	76
86	Screws and	nuts	,, 5	0/51	1	Axle rod		,,	77
2	Angle bars		,,	53	2	Axle rods		,,	78
	Angle bars		,,	55		Axle rod	* *	,,	79
	Metal strips		,,	56	8	Collars and	set		
2	Metal strips	9.8	,,	59		screws	10000	,,,	82
7	Metal strips		,,	61	10	Washers		,,	84
2	Metal strips		1.9	64	2	Buffers and	nuts	,,	85
22	Brackets			66		Knob screw		nuts	92
1	Metal plate		**	67	12	Wire stays		,, ]	154
					14	Wire stays	4.8	,, 1	156

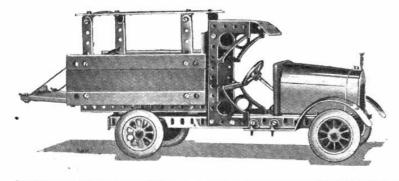

## W.D. Lorry M.13.

Take an 8 × 3 plate and bend at a sharp angle at the second hole from one end and the seventh hole at the other end to form the driver's canopy. For sides fix  $6\frac{1}{2}$ -in, angle bars to chassis with brackets, then screw two more  $6\frac{1}{2}$ -in, angle bars on to the top of the first ones. These are to form the supports for fixing 4-in. strips and wood sides, which should be bolted on to the chassis plate.


		Extr	a j	parts	re	quirea.			
4	Grooved side	rails	No	. I	1	Metal strip	*111	No.	60
	Sides of goods		٠,,	17		Metal strips		,,	61
6	Wood slips		12	25		Metal strips		12	62
19	Screws and n	uts	12	50/51	2	Metal strips		12	63
4	Angle bars			53	4	Architraves	487	,,	65
4			,,		10	Brackets	100	,,	66
2	Metal strips	***	,,	57	3	Metal plates	100	,,	68
4	Metal strips	* *	,,	59	2	Straight hing	ges		72


## Car and Caravan M.14.

Three 3 x 3 plates are used to form the back of the car, and wood slips for the doors. The body is fixed to the chassis by means of brackets. The trailer is built by bending four 12 in. strips at the ends, which are used on either side and they are joined by 4-in. strips which run across the front and back of the caravan. Sides and top can be made with either wood or cardboard, and celluloid or glass can be fixed into position for the windows.

Extra parts required.

2	Floors	No. 9	8 Metal strips	No. 64
1	Side of goods		31 Brackets	,, 66
	truck	,, 17	1 Metal plate	,, 67
30	Wood slips	., 25	5 Metal plates	,, 68
	Screws and nuts	,,50 51	12 Straight hinges	,, 72
	Angle bars	., 55	2 Trunnions	,, 74
	Metal strips	,, 56	I Grooved wheel	,, 76
I	Metal strip	., 57	2 Signal post rods	,, 92
10	Metal strips	60	1 Wire stay	,, 154

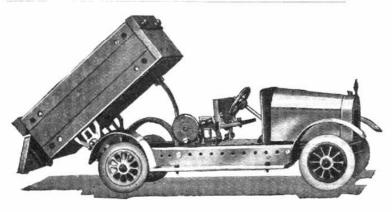

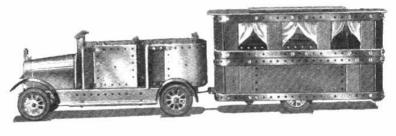

## Tipping Wagon M.15.

Four 6½-in, strips and two 2-in, strips are used for sides of body framework, and these are joined by two 21-in. strips at front and one at back, then fix woodwork as shown by illustration. The  $8 \times 3$  plate should be removed from chassis and used as base of wagon body, and a 3 × 3 plate should be clamped to chassis beneath driver's seat. Fix trunnions to truck body and hinge them by means of axle rod fixed at rear of chassis. The tipping mechanism is made by curving a 3-in. strip and attaching with cord to axle rod, using No. 76 wheel for handle.

	Ex	tra	parts	re	quired.		
4	Grooved side rails	s No	. 1	14	Brackets	No.	66
2	Buffer blocks	1.2	4	1	Metal plate	,,	68
2	Sides of goods		95	2	Straight hinges	,,	72
	truck	2.2	17	4	Trunnions	,,	74
2	Ends of goods			1	Grooved wheel	,,	74 76
	truck	,,	18	3	Collars and set		
	Wood slips	2.1	25		screws	,,	82
	Screws and nuts	,, 5	50/51		Knob screws		
	Metal strips	,,	56		and nuts	33	92
	Metal strips		57	1	Catch	,,,	95
	Metal strip	,,	58	7	Wood screws	,,	97
4	Metal strips	,,	62				




## Motor Bus M.16.

Extend chassis floor with two 8-in. angle bars. Fill in floor with  $3 \times 3$  plate and No. 25 wood slips. Then fix one 2-in. strip vertically (for each corner of bus body) on the chassis with brackets, and erect body by commencing with angle bars and strips. The roof is placed on last by fixing screws through wood slips at either end.

## Extra parts required.

	*****	- President		1	
2	Roofs	No. 10	24	Metal strips	No. 60
8	Sides of goods			Metal strips	,, 61
	truck	,, 17		Metal strips	,, 64
15	Wood slips	,, 25	36	Brackets	,, 66
	Screws and nuts	,,50/51		Metal plate	,, 68
	Angle bars	,, 54		Signal post rod	,, 96
	Angle bars	,, 55		Wood screws	,, 97
7	Metal strips	,, 56	3	Wire stays	,, 155

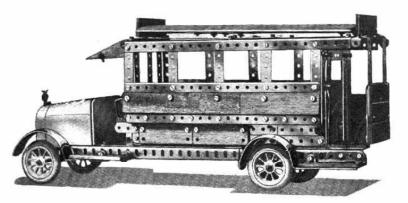


## Road Sweeper M.17.

The brush is made with four 4-in. strips bracketed on to two flanged wheels and fitted across at an angle to allow the tyre of back wheel to fit against flanged wheel which turns brush when wheel revolves. Back wheels are raised to allow brush to clear by fitting washers between trunnions and angle bars, using knob screws for bolts.

## Extra parts required.

12	Wood slips	No. 25	8	Brackets		No	. 66
56	Screws and nuts	,,50/51		Flanged who			75
2	Metal strips	,, 58	I	Wire stay		23	154
6	Metal strips	,, 60	1	Wire stay			156
2	Metal strips	,, 62	1	Axle rod	700	,,	165

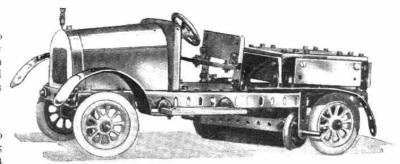



## Breakdown Crane M.18.

Four  $3 \times 3$  plates are used for flooring raised on two 6-in. Angle bars which are fixed to chassis with brackets. A 6-in, axle forms upright of crane.

## Extra parts required.

5	Slips		No. 25	12 Washers No. 84
50	Screws and a	nuts	,, 50/5	ı ı Coupling Hook
2	Angle bars		,, 52	and nut ,, 86
3	Strips	X723	,, 58	2 Knob screws
	Strip		,, 60	and nuts , 92
1			,, 61	2 Wire stays ,, 156
24	Brackets		,, 66	2 Pulley wheels
		* *	,, 68	with set screws ,, 158
4	Collars		,, 82	1 Axle rod ,, 165
1	Handle axle		82	

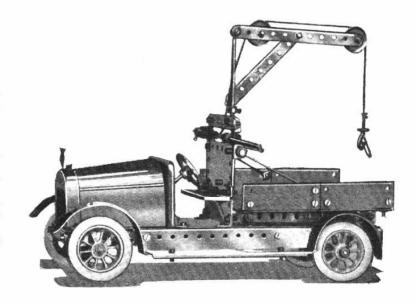

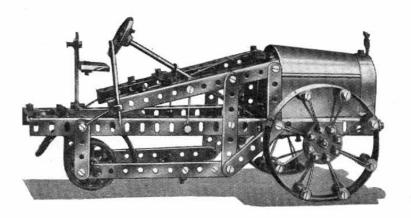

## Motor Tractor M.19.

12-in. angle bars are tapered in at tail end to a 2-in. strip and a 3-in. strip at front. Gearing is set back under bonnet, the two 2-in. strips being placed in the 7th hole from front end of angle bars. A  $6\frac{1}{2}$ -in. axle is used for steering column. 4-in. wheels are made from a Primus Big Wheel outfit. The steering rod is kept in position with  $2\frac{1}{2}$ -in. strips under bonnet and passed through a bracket on top of body.


	EAU	ra	parts	16	quirea.			
	Wood slips		25	1	Trunnion		No	. 74
104	Screws and nuts	,, 5	0/51	1	Axle rod		,,	77
2	Angle bars	,,	52	1	Axle rod		,,	78
7	Metal strips	,,	56	7	Collars and	set	0.00	75
7	Metal strips	,,	57		screws		2.2	82
1	Metal strip	,,	58	2	Signal post	rods	**	96
2	Metal strips	,,	59	8	Rim section		,,	150
2	Metal strips	,,	61	34	Wire stays			154
Q	Brackets		66		•			

## Brewers' Lorry M.20.

Extend chassis with two 8-in. angle bars, filling in floor with  $3 \times 3$  plate Screw on No. 1 side rail, cut out piece of wood or cardboard to erect sides of canopy. Carriage roof or cardboard can be cut to form canopy roof. Eight  $2\frac{3}{4}$ -in. axle rods are used (being fixed at bottom with two collars) for barrel staves.

Extra parts required.

3	Grooved sid	le rails	No	). 1	2	Metal plates	s	No.	68
I	Roof		,,	10		Axle rods			78
5	Wood slips		,,	25	16	Collars and	set		
	Screws and		,, 5	50/51		screws		,,,	82
	Angle bars		12	54		Washers		,,	84
8	Brackets		,,	66	2	Signal post	rods	,,	96

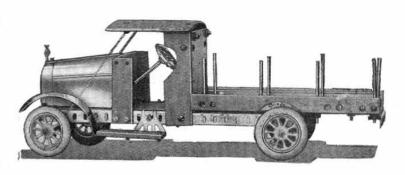

## Taxi Cab M.21.

Bend a  $3 \times 3$  plate to shape for lower back panel and screw to chassis, then fix upright strips and work closely to illustration.

Extra parts required.

		130	ula	parts	10	quit cu.			
			No.	16		Metal plates		No	. 68
	Wood slips		,,	25		Straight hin		,,	72
	Screws and n		,,5	0/51		Lamps and 1	iuts	,,	87
	Metal strips		,,	56	3	Knob scews			
	Metal strips		,,	60		and nuts		,,	92
	Metal strips		,,	61	2	Wire stays			154
22	Brackets		,,	66		Wire stays			156
1	Metal plate		,,	67	1	Pulley wheel	,plair	1,,	159
	One e	xtra			el f	or spare.			

Cardboard is used for panel of body.


## Motor Charabanc M.22.

Extend chassis by adding two extra angle bars at rear end. The No. 16 doors on one side are screwed to No. 59 strips to which hinges, of doors are also fixed. The other side is made from No. 16 doors screwed to a 12-in. strip along the top, a 121-in. strip is also fixed inside the body, by means of angle brackets, to support seats. A No. 16 door and a No 17 truck

side is cut to form back of charabanc, or cardboard can be used. Running boards must be brought away from charabanc by means of washers placed between angle bars and running boards.

Extra parts required


		EX	tra	parts	re	quirea.			
13	Doors		No.	16	1	Metal strip		No	. 64
I	Side of good	S				Brackets		,,	66
1000	truck		,,	17	6	Straight hir	iges	,,	72
12	Wood slips		,,	25	3	Knob screw	s and		
60	Screws and r	iuts	,,5	0/51		nuts		,,	92
2	Angle bars		,,	53		Signal post		,,	96
4	Metal strips		,,	56		Wire stays		,,	154
6	Metal strips			59		Wire stays			156
					1	Pulley whee	l, plai	n,,	159

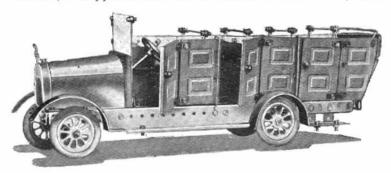





## **CLOCKWORK LOCOMOTIVE OUTFIT**

Instructions for Building Clockwork Locomotives.

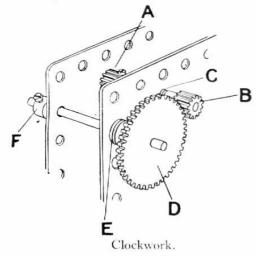

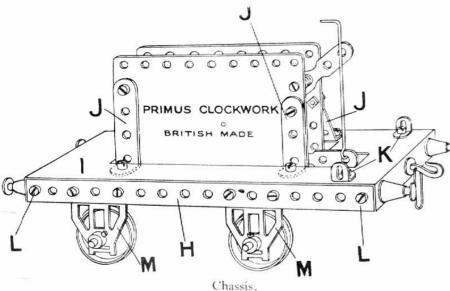

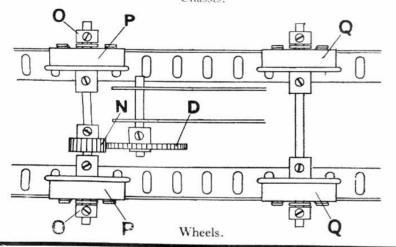

## CLOCKWORK.

- 1. Loosen screw in driving pinion (A), push the short axle rod through far enough to receive the gear wheel (B), place washer (C) between gear wheel and side plate.
- 2. Fit the large gear wheel (D) on a short axle, put two washers between gear wheel and side plate (E), insert axle through holes provided, fix with a collar (F) on free end.

## CHASSIS.

- 3. Bolt the angle bars (H) to the foot plate (I), engaging at the same time the ends of the three bent strips (J, J, J).
- 4. Place clockwork part way through foot plate (I) from the top, bolt bent strips (J, J, J) to plates of clockwork and fix the reversing rod.
- 5. Bolt two brackets (K) at rear end, also a bracket at the four corners (L).
- 6. Bolt the buffers and couplings at each end, also the four trunnions (M) on the sides.

## WHEELS.

- 7. Fit the front axle with a pinion (N) in position to engage with the large gear wheel (D) on the clockwork, fix in position with screw collars and washers (O), slide the wheels (P) on axle, fix one close against pinion (N) and the other to allow  $\frac{9}{16}$  in between the flanges, to fit gauge I rails.
- 8. The back wheels (Q) are then fitted as illustrated.
- 9. Adjust all the bearings to ensure free running and slightly oil.



## Instructions for Building Clockwork Locomotive (contd.)

## BOILER.


10. Take boiler shell (R) and fix on funnel (S) with long bolt and nut, also steam dome (T) and safety valve (U).

11. Bolt the cab front (spectacle plate, V) to rear end of boiler, using a bracket inside boiler. Fit a bracket on top of spectacle plate ready to take roof, and two specially bent brackets to take cab sides.

12. Erect cab sides (W) on foot plate by bolting to brackets (K) previously fixed, slide boiler (R) over clockwork bolt to cab sides, then bolt on roof (X) inserting reversing rod through the roof,

13.1 Take smoke box saddle (Y) and fit under smoke box, pass the long screw through footplate saddle and smoke box, bolt up slightly, place round smoke box door (Z) in position, press in sides of boiler tightly and bolt up.

For renewal parts, see page 17.

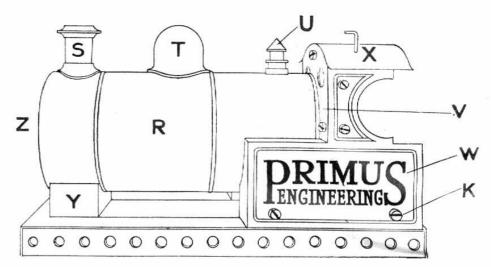


BOILER.


# Realistic Models for use with Clockwork Locomotive, easily made from Primus Engineering Parts.



Railway Track No. 205. For instructions see page 50.

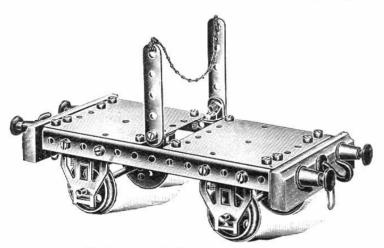


Timber Truck No. 123, see page 43.

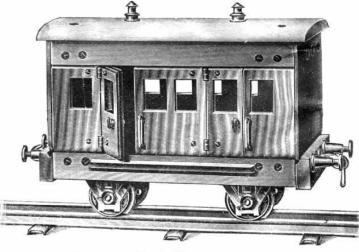

Passenger Coach No. 254, see page 44.


# PRIMUS, Own Ready Made Models

For prices, see page 19.

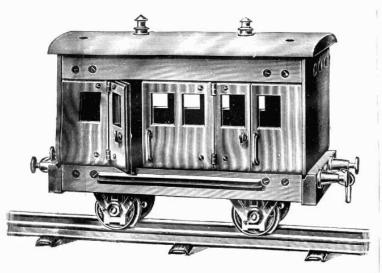


Passenger Coach.

Modelled to scale, two hinged doors each side, buffers and coupling hooks. For gauge o or 1 rails.

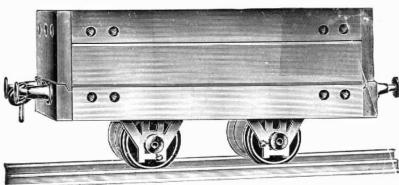

Goods Truck.

Realistic and strongly made, with wheels adjustable to gauge 0 or 1 rails.

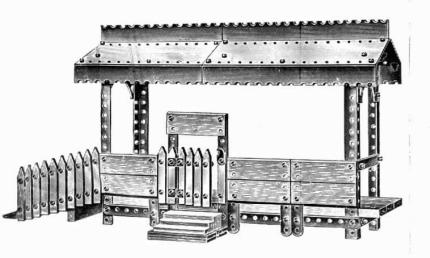

Railway Station.

With wood platforms, metal roof and standards, hinged entrance gate.



## Station House.


Has mahogany front, back and ends, metal roof and ridges, hinged door and glass-fitted window.

# DELLE SENGINEERING

CLOCKWORK LOCOMOTIVE OUTFIT

CONTAINS
ALL THE
PARTS
TO BUILD
THIS
LOCOMOTIVE

PRIMUS Clockwork Loco.

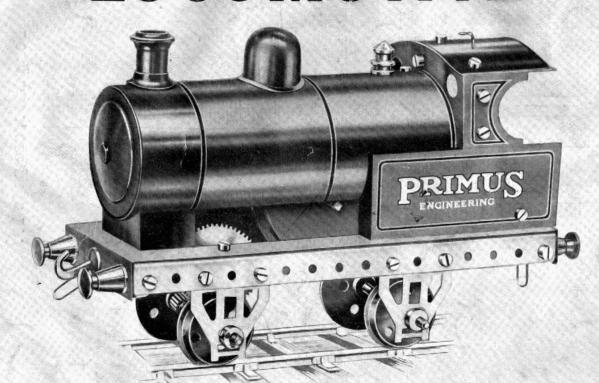

INCLUDING STRONGEST AND LONGEST RUNNING CLOCKWORK MOTOR

Runs on any Guage I rails

BOYS CAN BUILD THIS ENGINE WITH PRIMUS



## Prices of Outfits

No. 0 Outfit			5/-
,, 1 ,,			8/6
,, 2 ,,			15/-
,, 3 ,,			22/6
,, 4 ,,		• •	40/-
,, 5 ,,		* *	55/-
" 6 Cabine	t compl	ete	105/-
,, 6 ,,	only		45/-
,, 1s Supple	ementai	ry Outfit	7/6
,, 2s	**	,,	8/6
,, 3s	,,	•••	18/6
,, 4s	,,	,,	16/6
Wood Parts Ou	tfit		15/-
Big Wheel Out	fit		10/6
<b>Motor Chassis</b>	Outfit		16/6
Locomotive Ou	itfit		30/-
,, Er	ected		32/6
Clockwork Mo	tor		10/6